

TM 5-4520-208-25P

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT AND GENERAL SUPPORT,
AND DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS**

**HEATER, DUCT TYPE, PORTABLE GASOLINE,
400,000 BTU/HR, GASOLINE ENGINE AND ELECTRIC
MOTOR DRIVEN BLOWERS, W/6 AND 12 INCH
DIAMETER DUCTS, AUTOMATIC TEMPERATURE CONTROL,
TRAILER MOUNTED (AMERICAN AIR FILTER CO. INC
MODEL BT400-40) FSN 4520-792-8257 (AMERICAN AIR
FILTER CO, INC MODEL BT400-40-1) FSN 4520-930-9474**

This copy is a reprint which includes current
pages from Changes 1 through 8.

HEADQUARTERS, DEPARTMENT OF THE ARMY
SEPTEMBER 1967

TM 5-4520-208-25P

C 8

HEADQUARTERS

DEPARTMENT OF THE ARMY

WASHINGTON, D.C., 17 March

CHANGE }
No. 8 }

**Organizational, Direct and General
Support and Depot Maintenance Repair Parts
and Special Tools List**

**HEATER, DUCT-TYPE, PORTABLE, 400,000 BTU/HR; GASOLINE ENGINE
AND ELECTRIC MOTOR-DRIVEN BLOWERS, W/6 AND 12-INCH DUCTS,
AUTOMATIC TEMPERATURE CONTROL, TRAILER MOUNTED
(AMERICAN AIR FILTER CO., INC. MODELS)
(MODEL BT400-40) NSN 4520-00-792-8257
(MODEL BT400-40-1) NSN 4520-00-915-7789
(MODEL BT400-40-1A) NSN 4520-00-223-3221**

TM 5-4520-208-25P, 20 September 1967, is changed as follows:

Page 2. After line 0030 add the following information:

Page: 2

Line: 0030A

Source: XB

Description: Sleeve Exhaust Pipe
90598, TM 4025


Unit of Issue: EA

Quantity Incorporated in Unit: 1

Fig. No.: 5A

Item: 56

Page 7 (Change 5). Figure 5.1 is changed to Figure 5A and is changed as follows:

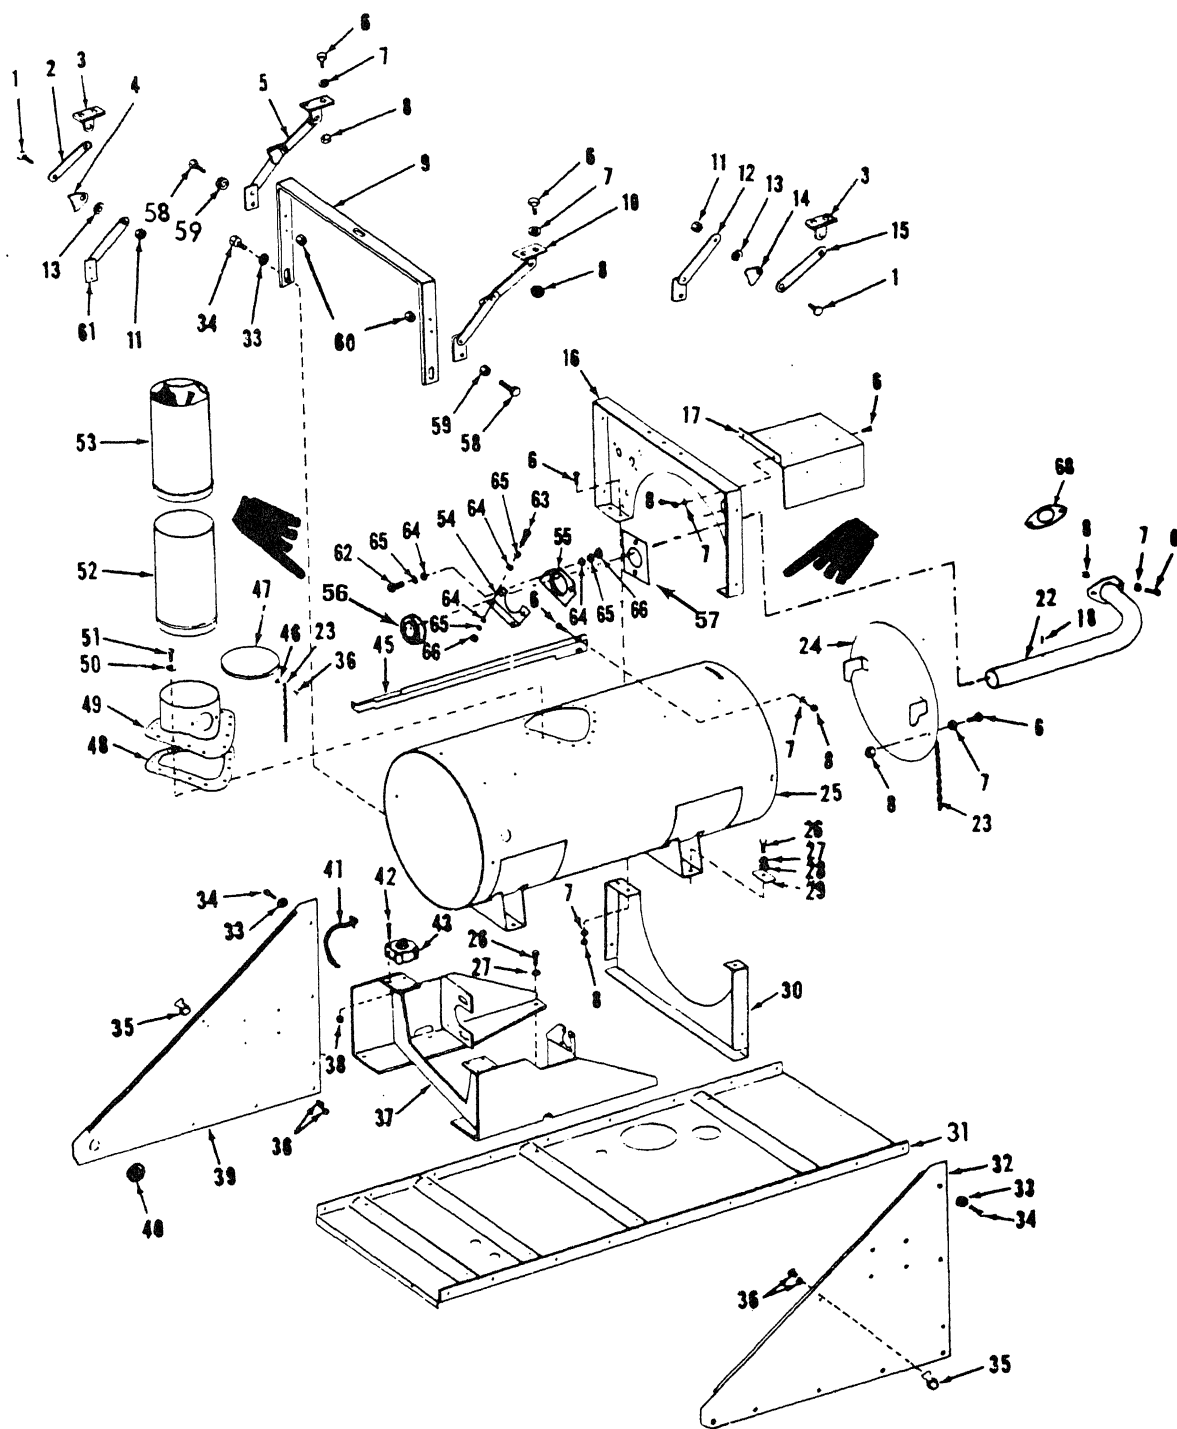

MEC 4520-208-25P/5.1

Figure 5A. Casing, bulkhead and side panels.
Model BT400-40-1, Serial No's.
BT4400866 and subsequent.

Page 13. After line 0030 add the following information:

Page: 13

Line: 0030A

Source: XB

Description: Sleeve Exhaust Pipe
90598, TM 4025

Unit of Issue: EA

Quantity Incorporated in Unit: 1

Fig. No.: 5A

Item: 56

Page 49. After TM 3984 add the following information:

Number: TM 4025

Code: 90598

Page: 002

Page: 013

By Order of the Secretary of the Army:

CARL E. VUONO

General, United States Army
Chief of Staff

Official:

WILLIAM J. MEEHAN, II

Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-25A, Unit, Direct and General Support Maintenance requirements for Heater, Duct Type, Portable, Trailer Mounted, Gas Engine, Electric Blowers, 400,000 BTU (BT400-40-1A, BT400-40-1, BT400-40).

CHANGE

NO. 7

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C. 8 April 1988Organizational, Direct and General
Support and Depot Maintenance Repair Parts
and Special Tools List

**HEATER, DUCT-TYPE, PORTABLE, 400,000 BTU/HR; GASOLINE ENGINE
AND ELECTRIC MOTOR-DRIVEN BLOWERS, W/6 AND 12-INCH DUCTS,
AUTOMATIC TEMPERATURE CONTROL, TRAILER MOUNTED
(AMERICAN AIR FILTER CO., INC. MODELS)
(MODEL BT400-40) NSN 4520-00-792-8257
(MODEL BT400-40-1) NSN 4520-00-915-7789
(MODEL BT400-40-1A) NSN 4520-00-223-3221**

Current as of 9 September 1987

TM 5-4520-208-25P, 20 September 1967 is changed as follows:

Page vi, paragraph 8. Change ATTN line to read AMSTR-MCTS and zip code to read 63120-1798.

Page 2. After LINE NO. 0031, add the following:

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC. IN UNIT PACK	(6) QTY INC IN UNIT	(7)	(8) ILLUS- TRATION	
								(a)	(b)
								FIG. NO.	FIG. OR SER. NO.
0031A	PAOZZ	4520-01-023-3475	EXHAUST KIT, HEATER (97403) 13220E8912 UOC: MODELS BT400-40, BT400-40-1, AND BT400-40-1A SERIAL NO. RANGE UP TO AND INCLUDING BT4400865	EA		1		1	14A
0031B	PAOZZ	4720-01-214-1268	••FLEX-TUBE, SIL FAB (16632) FLX200111002404	EA		1		1	14E
0031C	XBOZZ		••PIPE, EXTENSION (97403) 13220E8914	EA		1		1	14C
0031D	PAOZZ	5330-01-133-0208	••GASKET, EXHAUST (97403) 13220E8913	EA		1		1	14D
0031E	PAOZZ	4520-01-189-2991	••COUPLING EXHAUST (98625) NH1002688	EA		1		1	14E
0031F	PAOZZ	4730-00-908-3193	••CLAMP, HOSE (96906) MS35842-12	EA		2		1	14F

All additions of Federal Stock Numbers of Manufacturer's Part Numbers within this change should be appropriately reflected in the index.

Page 27. Figure 1. is changed as follows:

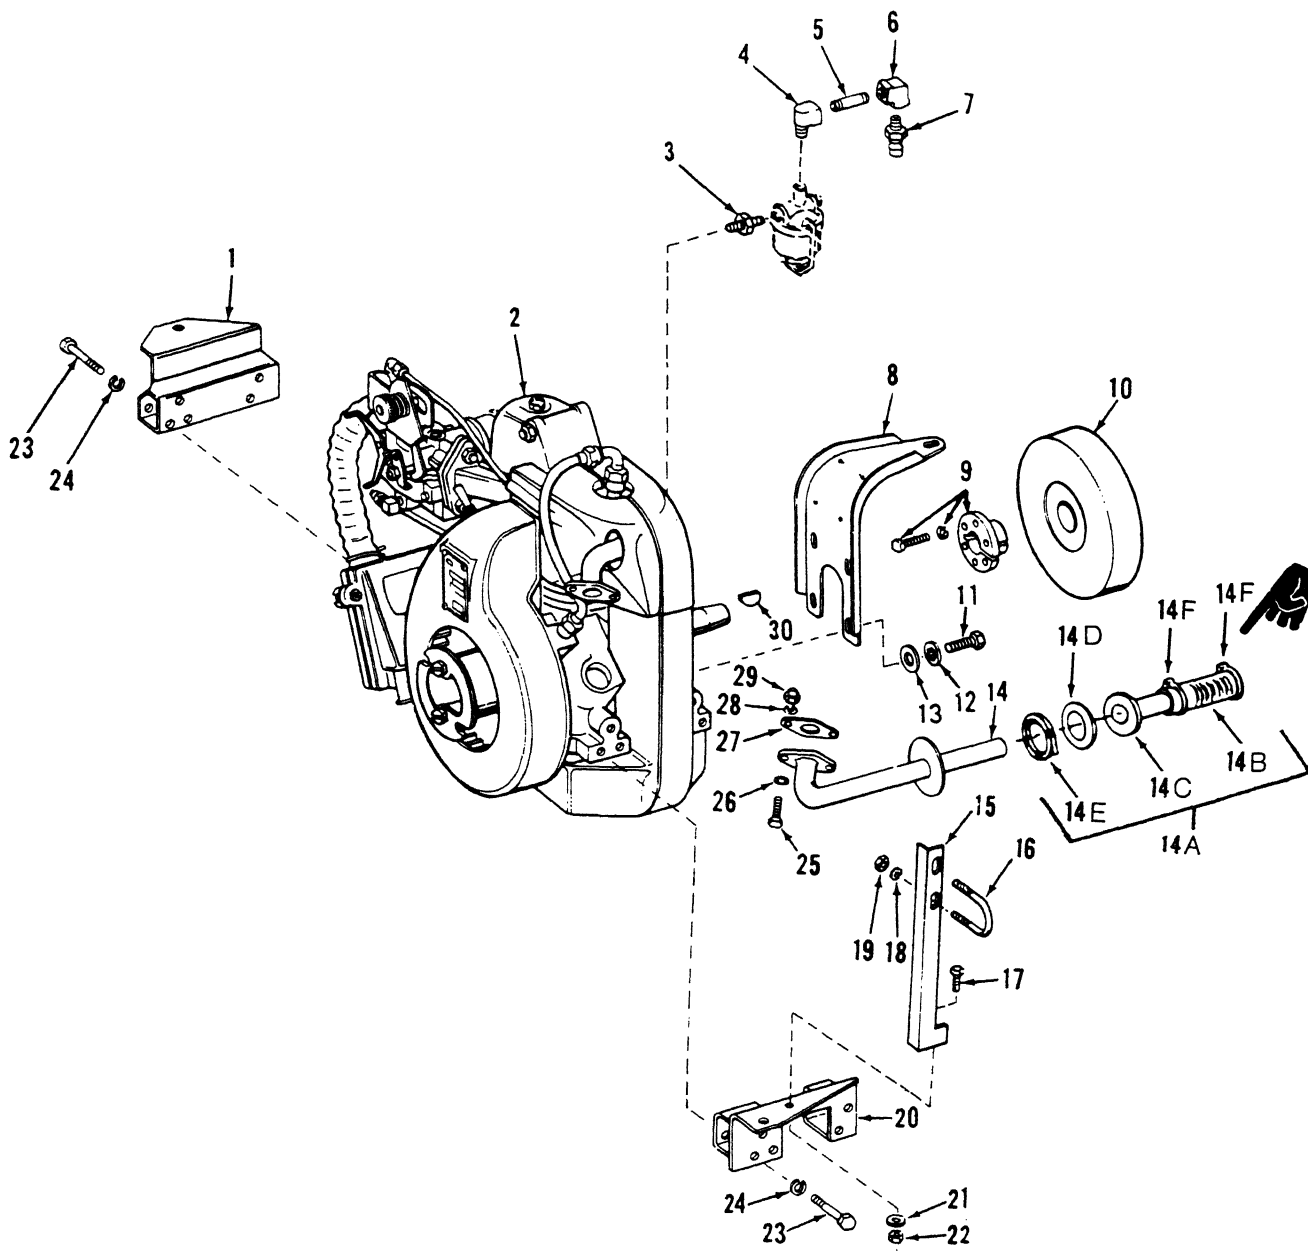


FIGURE 1. ENGINE EXHAUST KIT. MODELS BT400-40, BT400-40-1 and BT400-40-1A SERIAL NO. RANGE UP TO AND INCLUDING BT4400865.

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

Official:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-25A, Unit, Direct and General Support Maintenance requirements for Heater, Duct Type, Portable, Trailer Mounted Gas Engine, Electric Blowers, 400,000 BTU (BT400-40-1A, BT400-40-1, BT400-40).

CHANGE }
No. 6 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 29 December 1986

Organizational, Direct and General
Support and Depot Maintenance Repair Parts
and Special Tools List

HEATER, DUCT-TYPE, PORTABLE, 400,000 BTU/HR; GASOLINE ENGINE
AND ELECTRIC MOTOR-DRIVEN BLOWERS, W/6 AND 12-INCH DUCTS,
AUTOMATIC TEMPERATURE CONTROL, TRAILER MOUNTED
(AMERICAN AIR FILTER CO., INC. MODELS)
(MODEL BT400-40) NSN 4520-00-792-8257
(MODEL BT400-40-1) NSN 4520-00-915-7789
(MODEL BT400-40-1A) NSN 4520-00-223-3221

TM 5-4520-208-25P, 20 September 1967, is changed as follows:

Page 1 of Change 4, "NOTE" should read "Model BT400-40-1A is identical to Model BT400-40-1 except it was furnished with an electric motor power unit which is no longer a required item, however, it may be requisitioned on an as required basis (see Section III, Items Troop Support Installed or Authorized List)".

Page 2, line number 0031A, column 2: Delete NSN 2990-941-5274

Page 2 of Change 1, line 0061, column 2: Change NSN "5970-821-6581" to read "5355-00-219-7648".

Page 2 (of Change 5), after "Extension Exhaust" add the following information:

Code Explanation: N

Page: 2

Line: 0031A2

Source: XB

Maintenance: 0

Description: 0 Ring

90598 TMF 3244-6 C

Unit of Issue: EA

Quantity Incorporated in Unit: 1

Fig No: 1-1

Item: 15

Page 3, (of Change 5), after "Extension Exhaust" add the following information:

Code Explanation: N

Page: 13

Line: 0031A2

Source: XB

Maintenance: 0

Description: 0 Ring

90598 TMF 3244-6 C

Unit of Issue: EA

Quantity Incorporated in Unit: 1

Fig No: 1-1

Item: 15

Page 3, line number 0067 add:

Federal Stock Number: 5320-582-9474

Change Manufacturer code from "90598" to "96906".

Change Manufacturer part number "T33300" to MS 20600B4W3".

Page 25, line number 0496, column 10: Change "4" to read "14".

Page 27. Figure 1.1 is added as follows:

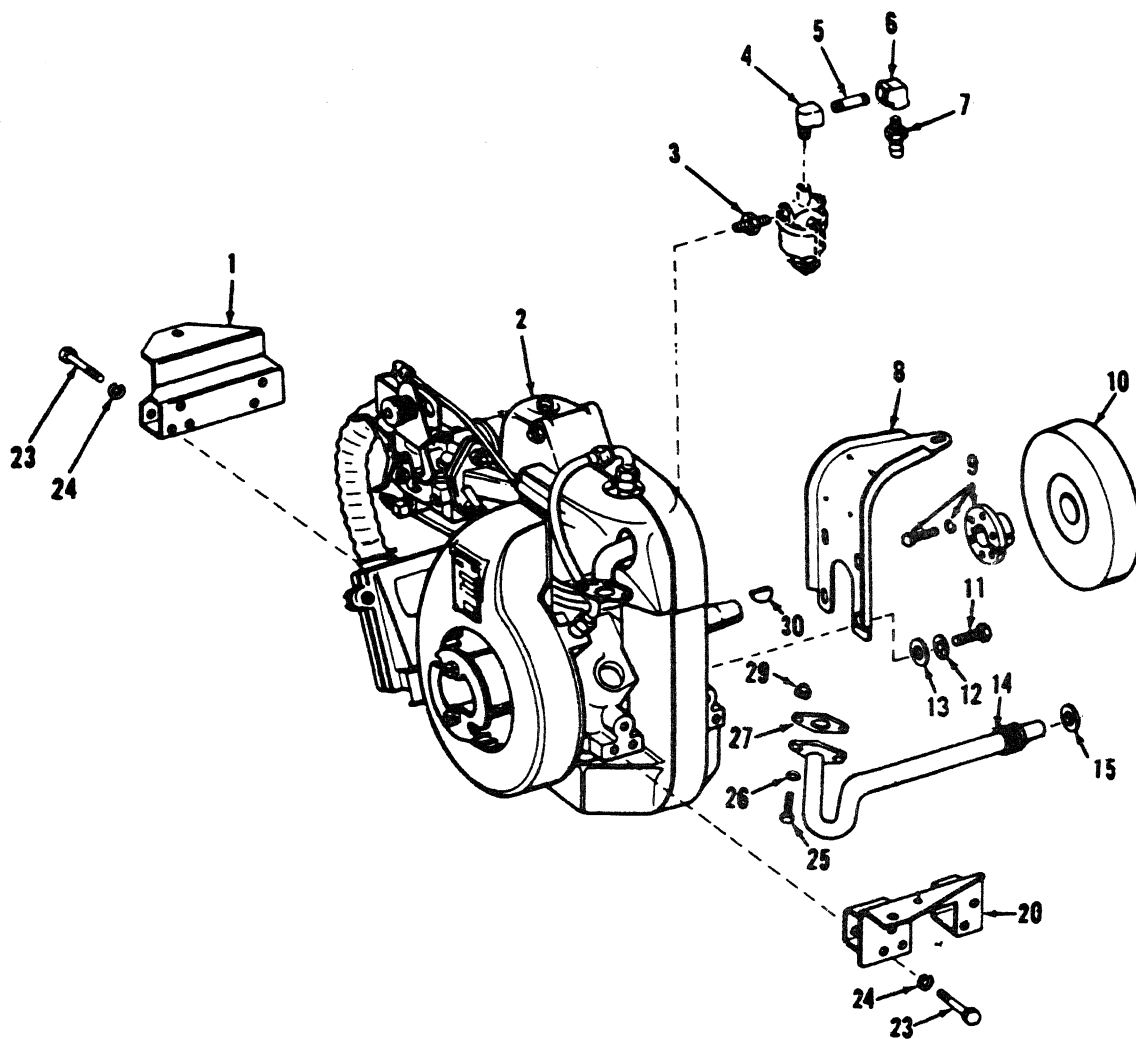


Figure 1.1. Engine drive coupling and exhaust pipe. Model BT400-40-1, Serial

By Order of the Secretary of the Army:

JOHN A. WICKHAM, JR.
General, United States Army
Chief of Staff

Official:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-25A, Organizational, Direct Support and General Support Maintenance Requirements for Heater, Duct Type, Portable Trailer Mounted, Gas Engine, Electric Blowers, 400,000 BTU (BT400-40-1A, BT400-40-1, BT400-40) (TM 5-4520-208 Series)

CHANGE }
No. 1 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., 9 October 1968

**Organizational, Direct and General Support and
Depot Maintenance Repair Parts and
Special Tools Lists**

**HEATER, DUCT TYPE, PORTABLE GASOLINE, 400,000 BTU/HR, GASOLINE ENGINE
AND ELECTRIC MOTOR DRIVEN BLOWERS, W/6 AND 12 INCH DIAMETER DUCTS,
AUTOMATIC TEMPERATURE CONTROL, TRAILER MOUNTED (AMERICAN AIR FILTER
CO. INC MODEL BT400-40) FSN 4520-792-8257 (AMERICAN AIR FILTER CO.
INC MODEL BT400-40-1) FSN 4520-930-9474**

Current as of 24 May 1968

TM 5-4520-208-25P, 20 September 1967, is changed as follows:

Page vi. Paragraph 8 is superseded as follows:

**8. Report of Equipment Publications
Improvements**

Report of errors, omissions and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to DA Publications) and forwarded direct to Com-

manding General, U. S. Army Mobility Equipment Command, ATTN: AMSME-MPP, 4300 Goodfellow Boulevard, St. Louis, Mo. 63120.

All changes, additions, deletions of Federal Stock numbers or manufacturer's part numbers within these changes should be appropriately reflected in the index.

All changes, additions, or deletions are shown on the following pages.

CHAPTER 1

INTRODUCTION

1-1. Scope

This manual provides instructions for installing the installation unit (Federal stock No. 5830-892-1057) that permits basic unit, Federal stock No. 5830-856-3273 (Intercommunication set AN/VIC-I (v)) to be mounted in Carrier, Personnel, Armored, M113, M113A1.

1-2. Index of Publications

Refer to the latest issue of DA Pam 310-4 to determine whether there are new editions, changes, or additional publications pertaining to this equipment. DA Pam 310-4 is an index of current technical manuals, technical bulletins, supply manuals (types 7, 8, and 9), supply bulletins, lubrication orders, and modification work orders available through publications supply channels. The index lists the individual parts (-10, -20, -35P, etc.) and the latest changes to and revisions of each equipment publication.

1-3. Forms and Records

a. *Reports of Maintenance and Unsatisfactory Equipment.* Use equipment forms and records in accordance with instructions in TM 38-750.

b. *Report of Damaged or Improper Shipment.* Fill out and forward DD Form 6 (Report of Damaged or Improper Shipment) as prescribed in AR 700-58 (Army), NAVASANDA Publication 378 (Navy), and AFR 71-4 (Air Force.)

c. *Reporting of Equipment Manual Improvements.* Reporting of errors, omissions, and recommendations for improving this manual by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to DA Publications) and forwarded direct to Commanding General, U. S. Army Electronics Command, ATTN: AMSEL-MR-NMP-AD, Fort Monmouth, N. J., 07703.

[illegible]

[illegible]

By Order of the Secretary of the Army:

W. C. WESTMORELAND,
General, United States Army,
Chief of Staff.

Official:

KENNETH G. WICKHAM,
Major General, United States Army,
The Adjutant General.

Distribution:

To be distributed in accordance with DA Form 12-25, Section III, (qty rqr block no. 602) organizational maintenance requirements for Heaters, Space, 400,000 BTU.

CHANGE

NO. 2



HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., 22 December 1969

Organizational, Direct and General Support, and Depot
Maintenance Repair Parts and Special Tools Lists
HEATER, DUCT TYPE, PORTABLE GASOLINE,
400,000 BTU/HR, GASOLINE ENGINE AND ELECTRIC
MOTOR DRIVEN BLOWERS, W/6 AND 12 INCH DIAMETER DUCTS,
AUTOMATIC TEMPERATURE CONTROL, TRAILER MOUNTED
(AMERICAN AIR FILTER CO. INC MODEL BT400-40)
FSN 4520-792-8257
(AMERICAN AIR FILTER CO. INC MODEL BT400-40-1)
FSN 4520-915-7789

Current as of 12 August 1969

TM 5-4520-208-25P, 20 September 1967, is changed as follows:

Cover and index page is changed as shown above.

Page iii. Paragraph 2e, change TM 5-2805-208-14 to TM 5-2805-256-24P.

Page v. Paragraph 7, add the following code:

831.14 Manhattan Electric Supply Co.

Page vi, paragraph 8 is superseded as follows:

4. Special Information

a. Action change codes indicated in the left hand margin of the listing page denote the following:

N — Indicates an added item not included in previous publications.

C — Indicates a change in data.

F — Indicates a change in FSN only.

b. The following publication pertains to heater, space and its components:

TM 5-4520-208-15 Operator, Organizational, Direct and General Support and Depot Maintenance Manual

All changes, additions, or deletions of Federal Stock Numbers or Manufacturer's Part Numbers within these changes should be appropriately reflected in the index. All changes, additions, or deletions are shown on the following pages.

Section III and IV, change, add or delete as shown on the following pages.

SECTION III — REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE

10																	
9																	
8																	
7																	
6																	
5																	
4																	
3																	
2																	
1																	
Line	Action	Source, maintenance and recoverability code			Federal stock number	Description	Unit of issue	Quantity incorporated in unit pack	Quantity incorporated in unit	15 Day Organizational Maint. Allowances				1 year allowances per 100 equipments, contingency planning purposes	Depot maint allowance per 100 equipments	Illustrations	
		Source	Maintenance	Recoverability						1-5	6-8	9-12	13-15			Fig No	Item or symbol No
0126	C				4520-606-2189	GROUP 18 — HULL 1801 — HULL ASSEMBLIES BAR ASSEMBLY, STATIONARY 90598 TC611 B											
0127	C				4520-653-3053	BAR, REMOVABLE 90598 TC1186 B											
0128	C				4520-653-3054	BAR, REMOVABLE: hinge 90598 TC1187 B											
0131	C				5306-622-8494	BOLT, MACHINE: bracket mtg 96906 MS35291-29 B											
0132	C				5306-655-6606	BOLT, SQUARE NECK: stop mtg 90598 TC613 B											
0135	C					BRACKET, HINGE SUPPORT 90598 TC4153-1 B											
0193	C					1808 — STOWAGE RACK, STRAPS HANDLE, SIDE, R. H. 11764 TR281-1											
0205	C				4720-930-5974	2202 — ACCESSORY ITEMS HOSE ASSEMBLY . . . (83114) FT8705											
0206	C				4720-930-5973	HOSE ASSEMBLY . . . (8311:) FT8706 GROUP 40 — ELECTRIC MOTORS											
0231	F				6105-010-0267	4000 — ELECTRIC MOTOR MOTOR ASSEMBLY 90598 TMA3018											
6																	

SECTION IV. REPAIR PARTS FOR DS, GS. AND DEPOT MAINTENANCE

Page	Line	Action	Source maintenance and recoverability code			Federal stock number	Description	Unit of issue	Quantity incorporated in unit pack	Quantity incorporated in inventory unit	15 Day Organizational Maint. Allowances				1 year allowance per 100 equipments/contingency planning purposes	Depot maint. allowance per 100 equipments	Illustrations	
			Source	Maintenance	Recoverability						1-5	6-20	21-50	51-100			Fig No	Item or symbol No
17	0193	C					1808 — STOWAGE RACKS, STRAPS HANDLE *** (11764) TR281-1 2202 — ACCESSORY ITEMS											
18	0205	C				4720-930-5974	HOSE ASSEMBLY *** (83114) FT8705											
18	7206	C				4720-930-5973	HOSE ASSEMBLY *** (83114) FT8706											
18	0231	F				6105-010-0267	4000 — ELECTRIC MOTOR MOTOR ASSEMBLY 90598 TMA3018											
24	0452	F				3110-953-1571	SHAFT, FAN 90598 TM3916											

By Order of the Secretary of the Army:

Official:

KENNETH G. WICKHAM,
Major General, United States Army,
The Adjutant General.

W. C. WESTMORELAND,
General, United States Army,
Chief of Staff.

Distribution:

To be distributed in accordance with DA Form 12-25, Section II, (qty rqr block No. 602) Organizational Maintenance requirements for Heaters, Space, 400,000 BTU.

Changes in force: C 1, C 2 and C 3

**TM 5-4520-208-25P
C 3**

Change }
No. 3 }

**HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D.C. 2 June 1972**

Organizational, Direct and General Support, and Depot Maintenance

Repair Parts and Special Tools List

**HEATER, DUCT TYPE, PORTABLE: GASOLINE; 400,000
BTU/HR; GASOLINE ENGINE-AND ELECTRIC MOTOR
DRIVEN-BLOWERS; W/6 AND 12 INCH DIAMETER
DUCTS; AUTOMATIC TEMPERATURE CONTROL;
TRAILER MOUNTED (AMERICAN AIR FILTER
CO., INC. MODEL BT400-40) FSN 4520-792-8257
(MODEL BT400-40-1) FSN 4520-915-7789**

Current as of 27 April 1972

TM 5-4520-208-25P 20 September 1967 is changed as follows:

All changes, additions, or deletions of Federal stock numbers or manufacturer's part numbers will be appropriately reflected in the parts listing and index of the manual.

Code Expla- nation	Page	Line	Action	(11) SMR code	(12) Federal stock No	(13) Description Reference No. & mfr code	(14) Unit of issue	(15) Qty inc in unit pack	(16) Qty inc in unit	(17) 15 day organizational maint allowances (a) 1.5 (b) 6.20 (c) 21.50 (d) 51.100	(18) Illustrations (a) Figure No (b) Form or symbol No
R	1	0021	Add FSN col 2	PO	4730-119-3720	SECTION III. REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE GROUP 03 FUEL SYSTEM 0306- LINES, FITTINGS Coupling Half *** GROUP 13 WHEEL AND TRACKS 1311 WHEEL ASSEMBLY Seal, Plain Encased: Wheel Assembly 02582 9-10-C104 (FSN 5330-833-0413 which is to be issued until stock is exhausted then use FSN 5330-752-9032)					
R	3	0091	Chg FSN col 2	PO	5330-833-0413	GROUP 22 - BODY CHASSIS OR HULL, ACCESSORY ITEMS. 2202 - ACCESSORY ITEMS Immediately after line 0206 add the fol- lowing: Tape, Pressure Sensitive Adhesive 83148 PPT60B GROUP 60 - HEATING UNITS BURNERS 6004 - FUEL SYSTEM Coupling half, Quick-Disconnect; fuel line GROUP 60 HEATING UNITS, BURNERS 6008 - BLOWER ASSEMBLY Bushing *** GROUP 03 FUEL SYSTEM 0306 Lines, Fittings Coupling, Half, Quick *** GROUP 13 - WHEEL AND TRACKS 1311 - WHEEL ASSEMBLY Seal, Plain encased *** FSN 5330-833-0413, which is to be issued until stock is exhausted, then use FSN 5330-752-9032.	RO	AR	*	*	*
N	6	0206A	Add	PO	8135-890-9875						
R	9	0287	Add FSN	PO	4730-119-3719						
C	11	0437	Chg col 8 (b)	PO	3120-915-5445						
R	12	0021	Add FSN col 2	PO	4730-119-3720						
R	14	0091	Chg FSN col 3.	PO	5330-833-0413						

Code Expla nation	Page	Line	Action	(11) SMR code	(12) Federal stock No	(13) Description Reference No. & mfr code	(14) Unit of issue	(15) Qty Inc in unit pack	(16) Qty Inc in unit	(17) 15 day organizational maint allowances				(18) Illustrations:	
										(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(e) Figure No.	(f) item or symbol No
N 18	0206A	Add		PO	8135-890-9875	GROUP 22 BODY, CHASSIS OR HULL AND ACCESSORY ITEMS. 2202 ACCESSORY ITEMS. Immediately after line 0206 add the following: Tape, Pressure-Sensitive Adhesive 81348 PPT60B GROUP 60 HEATING UNIT. BURNERS 6004 FUEL SYSTEM Coupling half *** 6005 Burner Assembly Bearing *** 21387 A5950A GROUP 6008 BLOWER ASSEMBLY Bushing, sleeve, Coupling 90598 TM 3917-2			*	*	*	*	16	2	
R 20	0287	Add Fsn col 2		PO	4730-119-3719	Bushing, sleeve 90598 TM 3927	E/A				*	*	*	16	1
R 22	0379	Chg FSN col 2		PF	3120-428-7543	Fan, vane, axial *** Shaft, fan ***	E/A				*	*	*	16	1
C 24	0436	Chg col 1 (b) from "1" to "O"		PO	5330-941-8567						*	*	*	16	2
C	0437	Chg col 8 (b) Chg col 1		PO	3120-915-5445						*	*	*	16	1
C	0439	Chg col 1		PF							*	*	*	16	1
R	0452	Chg FSN col 2		PF	5315-953-1571						*	*	*	16	1

By Order of the Secretary of the Army:

W. C. WESTMORELAN
General, United States Army
Chief of Staff.

Official:

VERNE L. BOWERS,
Major General, United States Army,
The Adjutant General.

Distribution:

To be distributed in accordance with DA Form 12-25C, (qty rqr block No. 602) organizational maintenance requirements for Heaters, Space 400,000 BT.

Changes in Force: C 1, C 2, C 3 and C 4

**TM 5-4520-208-25P
C 4**

Change }
No. 4 }

**HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC, 5 July 1974**

**Organizational, Direct and General Support,
and Depot Maintenance Repair Parts and Special
Tools Lists**

**HEATER, DUCT TYPE, PORTABLE, 400,000 BTU/HR
GASOLINE ENGINE AND ELECTRIC MOTOR DRIVEN
BLOWERS, W/6 AND 12 INCH DUCTS, AUTOMATIC
TEMPERATURE CONTROL, TRAILER MOUNTED (AMERICAN
AIR FILTER CO., INC MODELS
(MODEL BT400-40) FSN 4520-792-8257
(MODEL BT400-40-1) FSN 4520-915-7789
(MODEL BT400-40-1A) FSN 4520-223-3221**

TM 5-4520-208-25P, 20 September 1967, is changed as follows:

Cover and Page i. The title is changed as shown above.

Page iii. Add the following after paragraph 2f.

NOTE

Model BT400-40-1A is identical to Model BT400-40-1 except that it is originally equipped with an electric power pack listed in Group 40.

Page vi. Paragraph 8 is superseded as follows:

8. Recommendations for Maintenance Publications Improvements

You can help to improve this manual by calling attention to errors and by recommending improvements. Your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) should be mailed direct to: Commander, US Army Troop Support Command, ATTN: AMSTS-MP, 4300 Goodfellow Boulevard St. Louis, Mo. 63120. A reply will be furnished direct to you.

By Order of the Secretary of the Army:

**CREIGHTON W. ABRAMS
General, United States Army
Chief of Staff**

Official:

**VERNE L. BOWERS
Major General, United States Army
The Adjutant General**

DISTRIBUTION:

To be distributed in accordance with DA Form 12-25C (qty rqr block No. 602) Organizational Maintenance requirements for Heater, Space, 400,000 BTU

CHANGE }
No. 5 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 29 July 1977

**Organizational, Direct and General
Support and Depot Maintenance Repair Parts
and Special Tools List**

**HEATER, DUCT-TYPE, PORTABLE, 400,000 BTU/HR; GASOLINE ENGINE
AND ELECTRIC MOTOR-DRIVEN BLOWERS, W/6 AND 12-INCH DUCTS,
AUTOMATIC TEMPERATURE CONTROL, TRAILER MOUNTED
(AMERICAN AIR FILTER CO., INC. MODELS)
(MODEL BT400-40) NSN 4520-00-792-8257
(MODEL BT400-40-1) NSN 4520-00-915-7789
(MODEL BT400-40-1A) NSN 4520-00-223-3221**

Current as of 24 March 1977

TM 5-4520-208-25P, 20 September 1967, is changed as follows:

Title is changed to read as shown above.

All changes, additions, or deletions of Federal stock numbers or manufacturer's part numbers will be appropriately reflected in the parts listing and index of the manual.

Page iii, paragraph 2f. After "(B)", add the following:

(C) — Applies to BT 40-400-1 serial range BT 4400866 and subsequent numbers.

Page vi. Paragraph 8 is superseded as follows:


You can improve this manual by calling attention to errors and by recommending improvements. Your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms) may be used. Please mail your recommended changes direct to Commander, US Army Troop Support Command, ATTN: DRSTS-MPP, 4300 Goodfellow Blvd., St. Louis, MO 63120. A reply will be furnished direct to you.

Code Explan- ation	Page	Line	(1) Source Maintenance and Recoverability Code			(2) Federal Stock Number	(3) Description	(4) Unit of Issue	(5) Quantity Incorporated In Unit Pack	(6) Quantity Incorporated In Unit	(7) 15 Day Organi- zational Maint. Allowances				(8) Illus- trations	
			Source	Mainten- ance	Recovera- bility						(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) Fig. No.	Item No.
N	2	0029A	X2	0			Bracket, Exhaust 90598 TM 4029	EA		1					5.1	55
N	2	0031A	P	0		2990-941-5274	Extension, Exhaust 90598 TMF 3244	EA		1	*	*	*	*	1.1	14
N	2	0032A	X2	0			Flange, Exhaust 90598 TM 4031	EA		1					5.1	57
N	2	0037A	P	0		5310-012-0361	Nut, Plain, Hexagon; Extension MTG. 96906 MSS1967-2	EA		2	*	*	*	*	1.1	29
N	2	0041A	X2	0			Screw, Cap, Hexagon; Extension MTG. 96906 MS35691-410	EA		4					1.1	25
N	2	0043A	X2	0			Spacer, Bracket (As required) 90598 TM4030	EA							5.1	54
N	2	0046A	P	0		5310-167-0834	Washer, Flat; Extension MTG 96906 MS27183-10	EA		4					1.1	26
N	2	0051A	P	0		5305-984-6210	Screw, Machine; Exhaust Bracket 96906 MS35206-263	EA		2					5.1	62
N	2	0051B	P	0		5305-984-6214	Screw, Machine; Exhaust Bracket 96906 MS35206-267	EA		2					5.1	63
N	2	0051C	P	0		5310-809-8546	Washer, Flat; Exhaust Bracket 96906 MS27183-8	EA		8					5.1	64
N	2	0051D	P	0			Washer, Internal Tooth Exhaust Bracket 96906 MS35333-29	EA		8					5.1	65
N	2	0051E	P	0			Nut, Plain, Hexagon; Exhaust Bracket 96906 MS35649-20	EA		2					5.1	66
N	2	0051F	P	0			Gasket, Exhaust Pipe 90598 TM 4008	EA							5.1	68
N	9	0296A	P	0			Filter Assembly 79960 F407-3-2	EA		1	*	*	*	*		
N	9	0297A	X1				Bowl, Metal, Filter 79960 F8X69	EA		1					19.1	3
N	9	0298A	X2				Element, Filter 79960 F3X5T2	EA		1	*	*	*	*	19.1	2
N	9	0299A	P	0			Gasket, Filter 79960 FIX128	EA		1	*	2	2	2	19.1	1
N	10	0386A	P	0		2920-345-7398	Contact Set, Distributor 21387 B2437AX	EA		1	*	*	*	*	14.1	31
N	10	0395A	X1				Screw, Assembled Washer: End Cap MTG 21387 10S1D	EA		4					14.1	1
N	13	0029A	X2	0			Bracket, Exhaust 90598 TM 4029	EA		1					5.1	55

Code Description	Page	Line	(1) Source Maintenance and Recoverability Code			(2) Federal Stock Number	(3) Description	(4) Unit of Issue	(5) Quantity Incorporated In Unit Pack	(6) Quantity Incorporated In Unit	(7) 30-Day DS Maint. Allow.			(8) 100 equip cty per 1-yr allow per planning	(9) Depot maint. allow per 100 equip	(10) Illustration	
			Source	Maintance	Recoverability						(a) 1-20	(b) 21-50	(c) 51-100			(a) Fig. No.	Item No.
N	13	0029A	X2	0			Bracket, Exhaust 90598 TM 4029	EA	1							5.1	55
N	13	0031A	P	0		2990-941-5274	Extension, Exhaust 90598 TMF3244	EA	1		*	*	*	4	4	1.1	14
N	13	0032A	X2	0			Flange, Exhaust 90598 TM 4031	EA	1							5.1	57
N	13	0037A	P	0		5310-012-0361	Nut, Plain, Hexagon, Extension MTG 96906 MS51967-2	EA	2		*	*	*	*	*	1.1	29
N	13	0039A	P	0			Pipe, Exhaust 90598 TMF3240	EA	1							5.1	22
N	13	0041A	X2	0			Screw Cap, Hexagon Head, Extension MTG 96906 MS35691-910	EA	4							1.1	25
N	13	0043A	X2	0			Bracket, Angle 90598 TM 4030	EA								5.1	54
N	13	0046A	P	0		5310-167-0834	Washer, Flat; Extension MTG 96906 MS27183-10	EA	8		*	*	*	*	*	1.1	26
N	13	0051A	P	0		5305-984-6210	Screw, Machine, Exhaust Bracket 96906 MS35206-263	EA	2							5.1	62
N	13	0051B	P	0		5305-984-6214	Screw, Machine, Exhaust Bracket 96906 MS35206-267	EA	2							5.1	63
N	13	0051C	P	0		5310-809-8546	Washer, Flat, Exhaust Bracket 96906 MS27183-8	EA	8							5.1	64
N	13	0051D	P	0			Washer, Internal Tooth Exhaust Bracket 96906 MS35333-29	EA	8							5.1	65
N	13	0051E	P	0			Nut, Plain, Hexagon, Exhaust Bracket 96906 MS35649-202	EA	2							5.1	66
N	13	0051F	P	0			Gasket, Exhaust Pipe 90598 TM 4008	EA	1							5.1	68
N	21	0294A					Bearing-Shaft-And-Seal-Assy 99166 S132797	EA	1							11.1	37
N	21	0294B					Plate Assy, End W/Crescent, Gears, Rings, and Key 99166 127297A	EA	1							11.1	38
N	21	0296A	P	0			Filter Assembly 79960 F407-3-2	EA	1		*	*	*	5	5	19.1	
N	21	0296B	X1				Bowl, Meter-Filter 79960 F8X69	EA	1							19.1	3
N	21	0296C	X2				Element, Filter 79960 F3X5T2	EA	1		*	2	2	2	12	19.1	2
N	21	0296D	P	0			Gasket, Filter 79960 F1X128	EA	1		2	2	4	50	25	19.1	1


Code Description	Page	Line	(1) Source Maintenance and Recoverability Code			(2) Federal Stock Number	(3) Description	(4) Unit of Issue	(5) Quantity Incorporated In Unit Pack	(6) Quantity Incorporated In Unit	(7) 30-Day DS maint. alw.			(8) 1-yr alw per 100 equip cty/cy planning	(9) Depot maint. alw. per 100 equip	(10) Illustration	
			Source	Maintenance	Recoverability						(a) 1-20	(b) 21-50	(c) 51-100			(a) Fig. No.	Item No.
N	23	0386A	P	0		2920-345-7398	Contact Set, Distributor 21387 B2437AX Screw, Assembled Washer, End Cap MTG 21387 10SID	EA		1	*	2	2	20	100	14.1	31
N	23	0395A	X1					EA		4						14.1	1

Page 27. Figure 1.1 is added as follows:

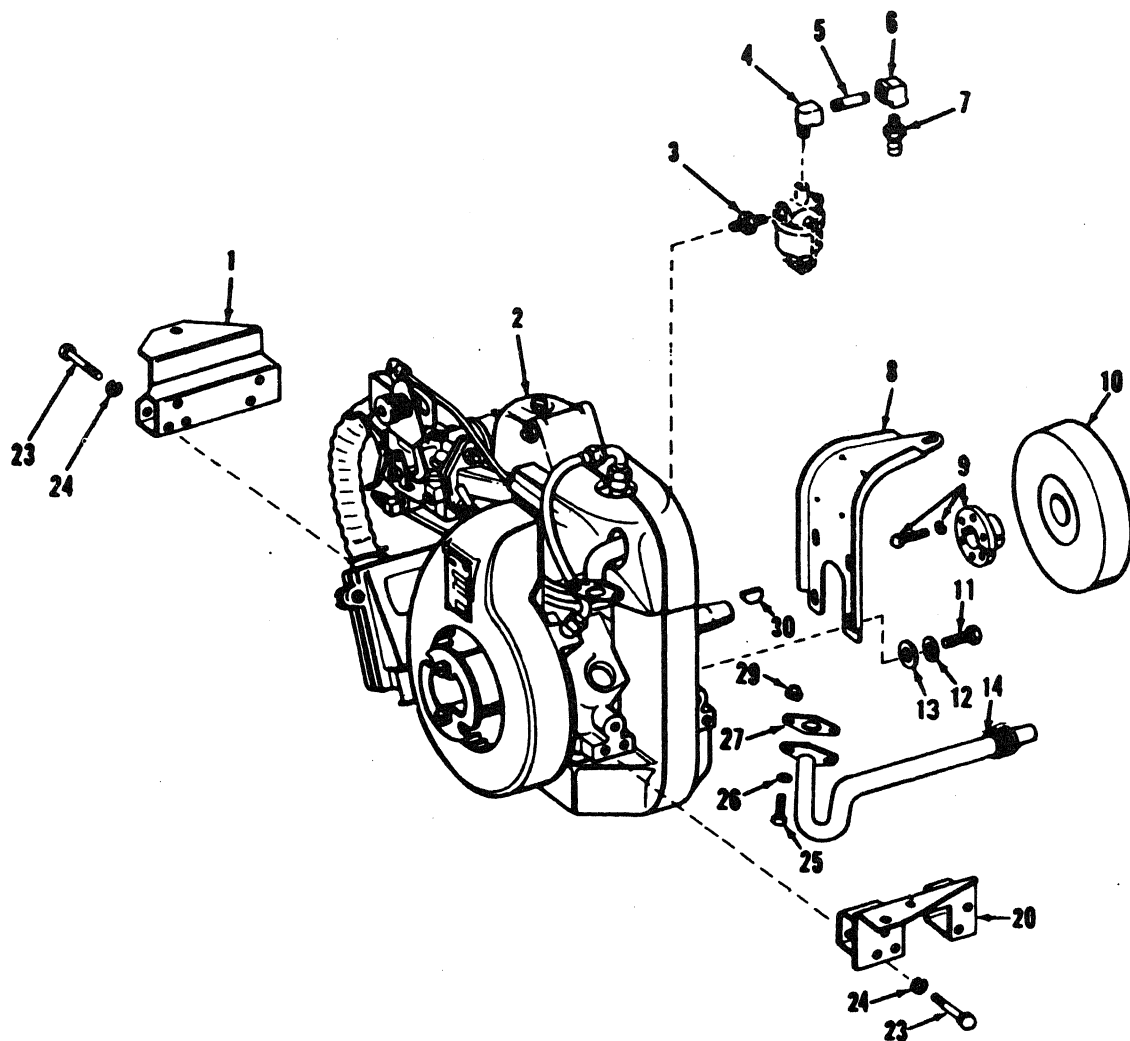


MEC 4520-208-25P/1.1

Figure 1.1. Engine drive coupling and exhaust pipe. Model BT400-40-1, Serial No's. BT4400866 and subsequent.

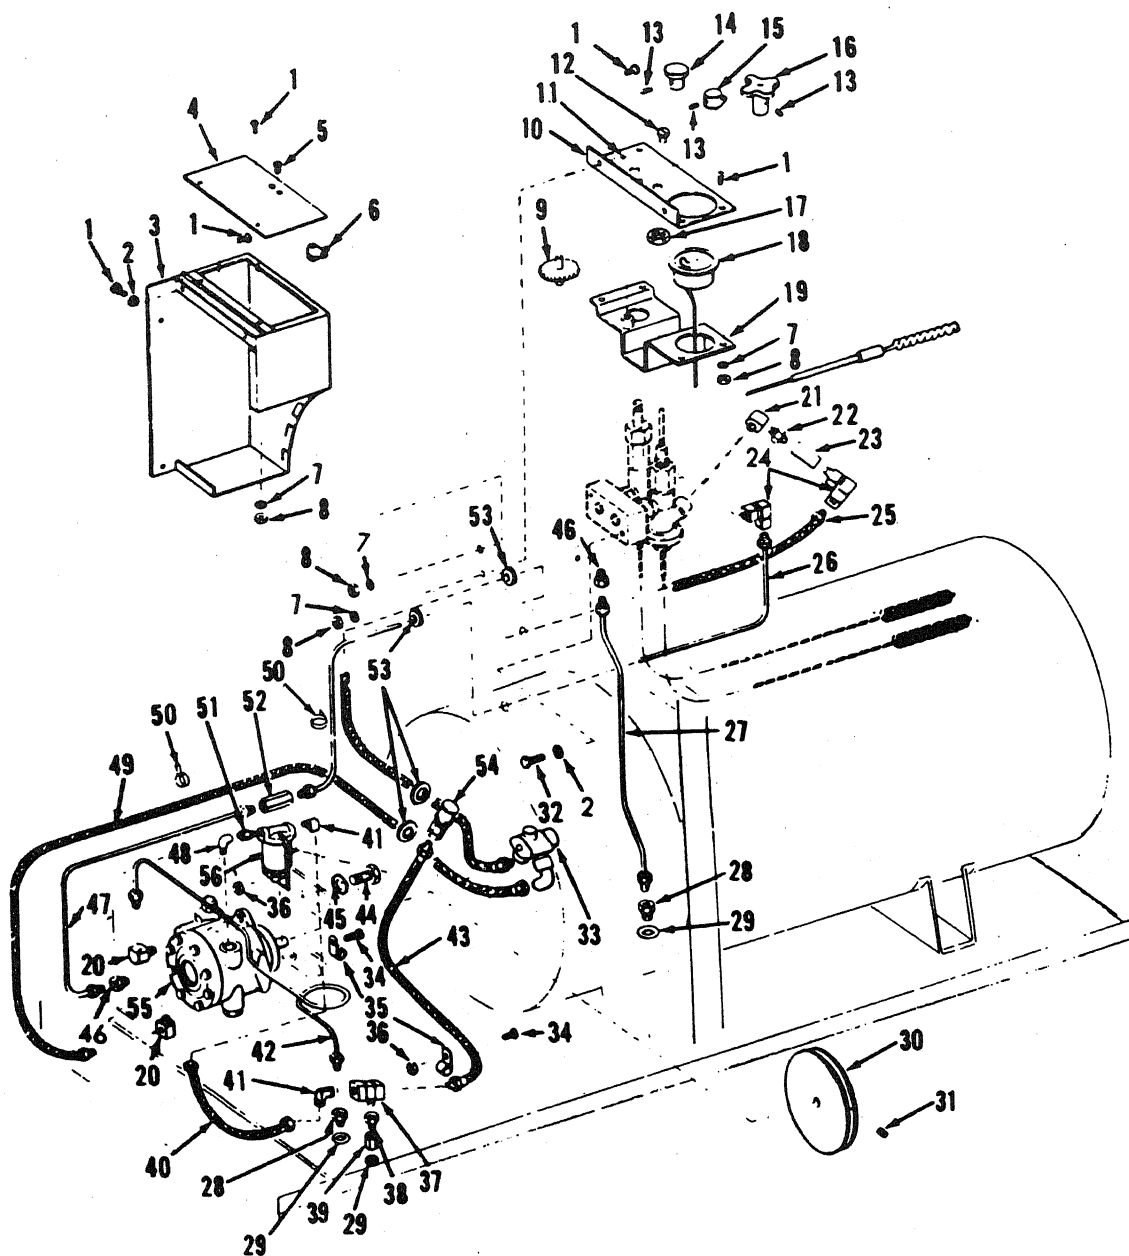

MEC 4520-208-25P/2.1


Figure 2.1. Fuel pump lines, fittings and control box. Model BT400-40-1, Serial No's. BT4400866 and subsequent.

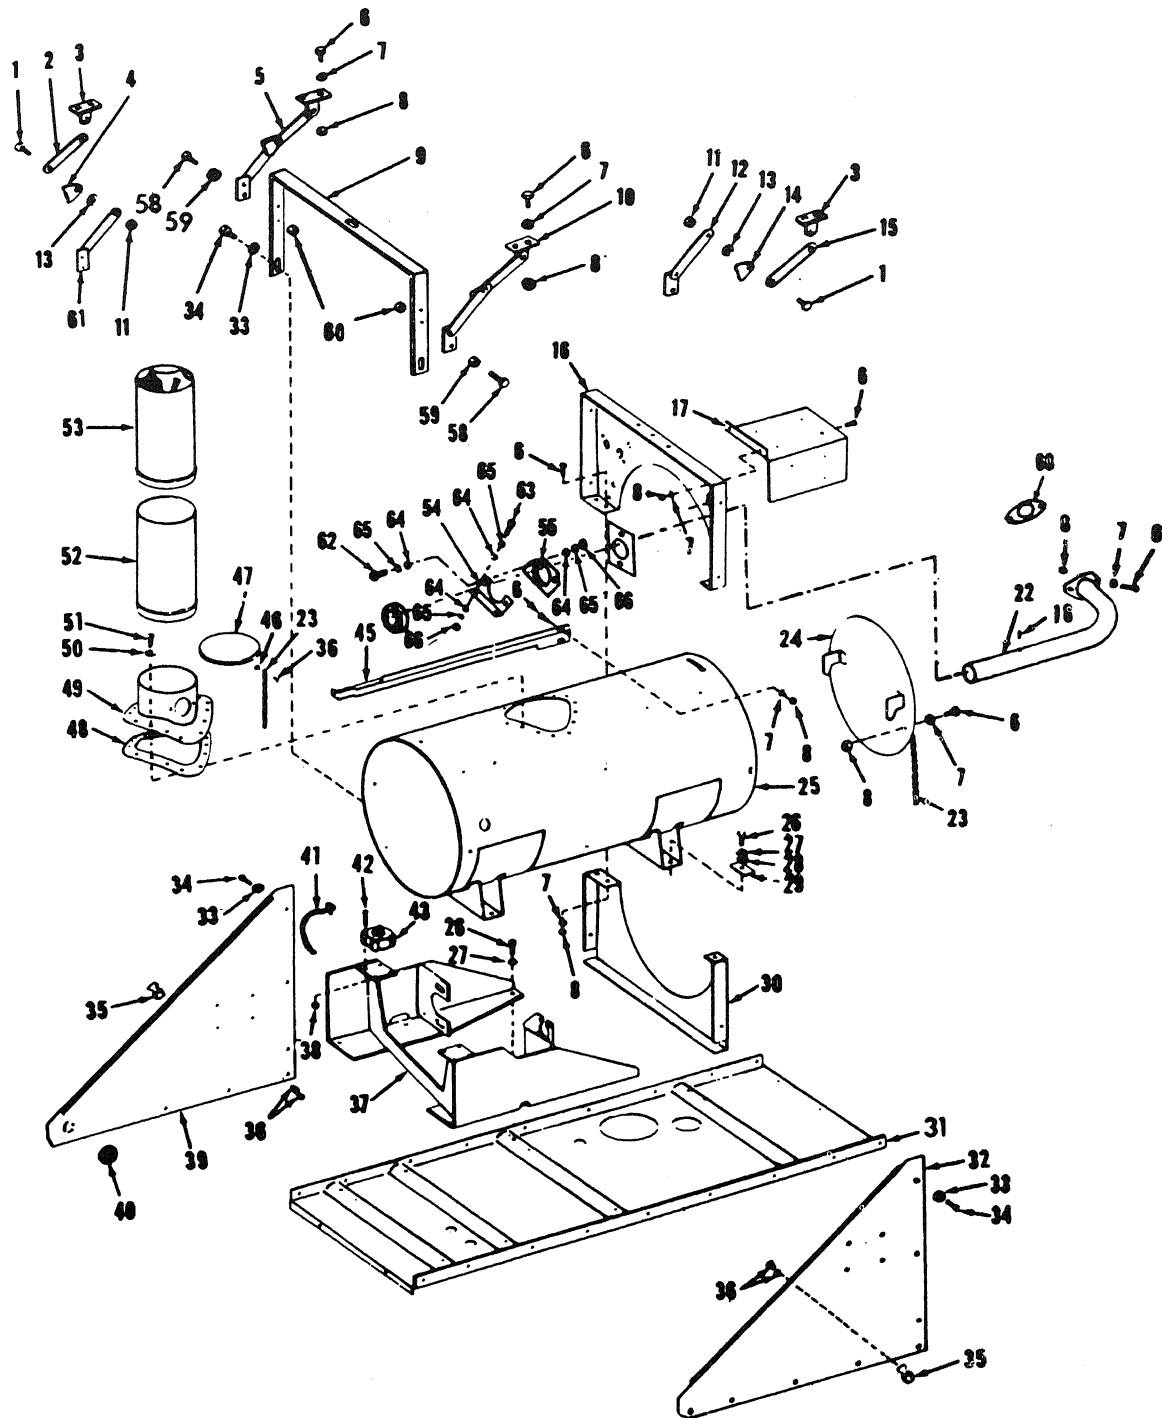

MEC 4520-208-25P/5.1

Figure 5-1. Casing, bulkhead and side panels.
Model BT400-40-1, Serial No's.
BT400866 and subsequent.


Page 37. Figure 11.1 is added as follows:

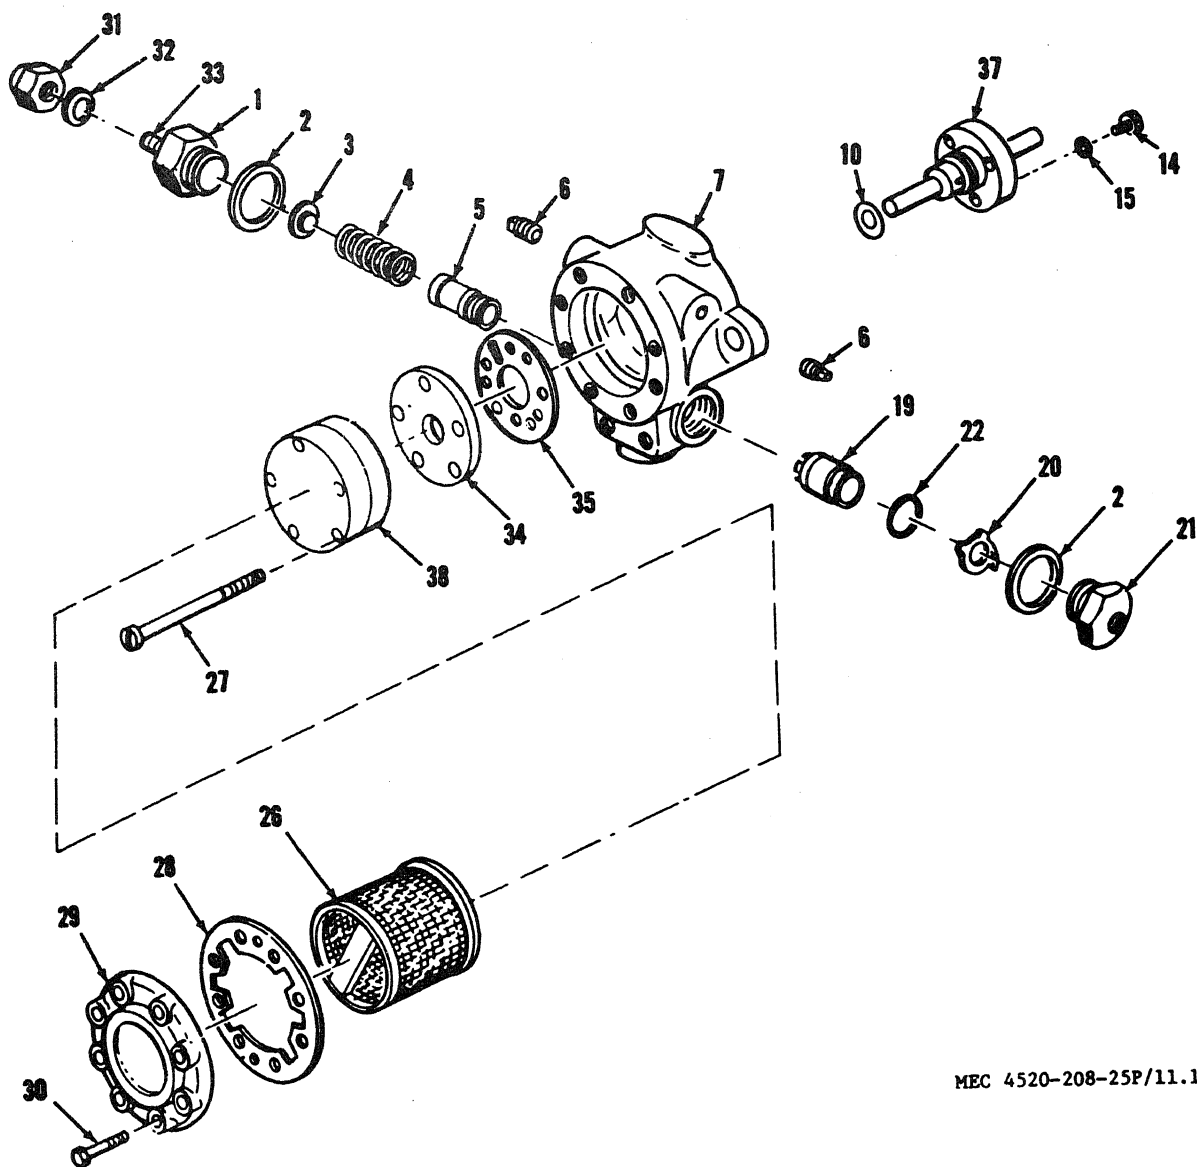

MEC 4520-208-25P/11.1

**Figure 11.1. Fuel Pump. Model BT400-40-1
Serial No.'s BT 4400866 and
subsequent.**


Page 40. Figure 14.1 is added as follows:

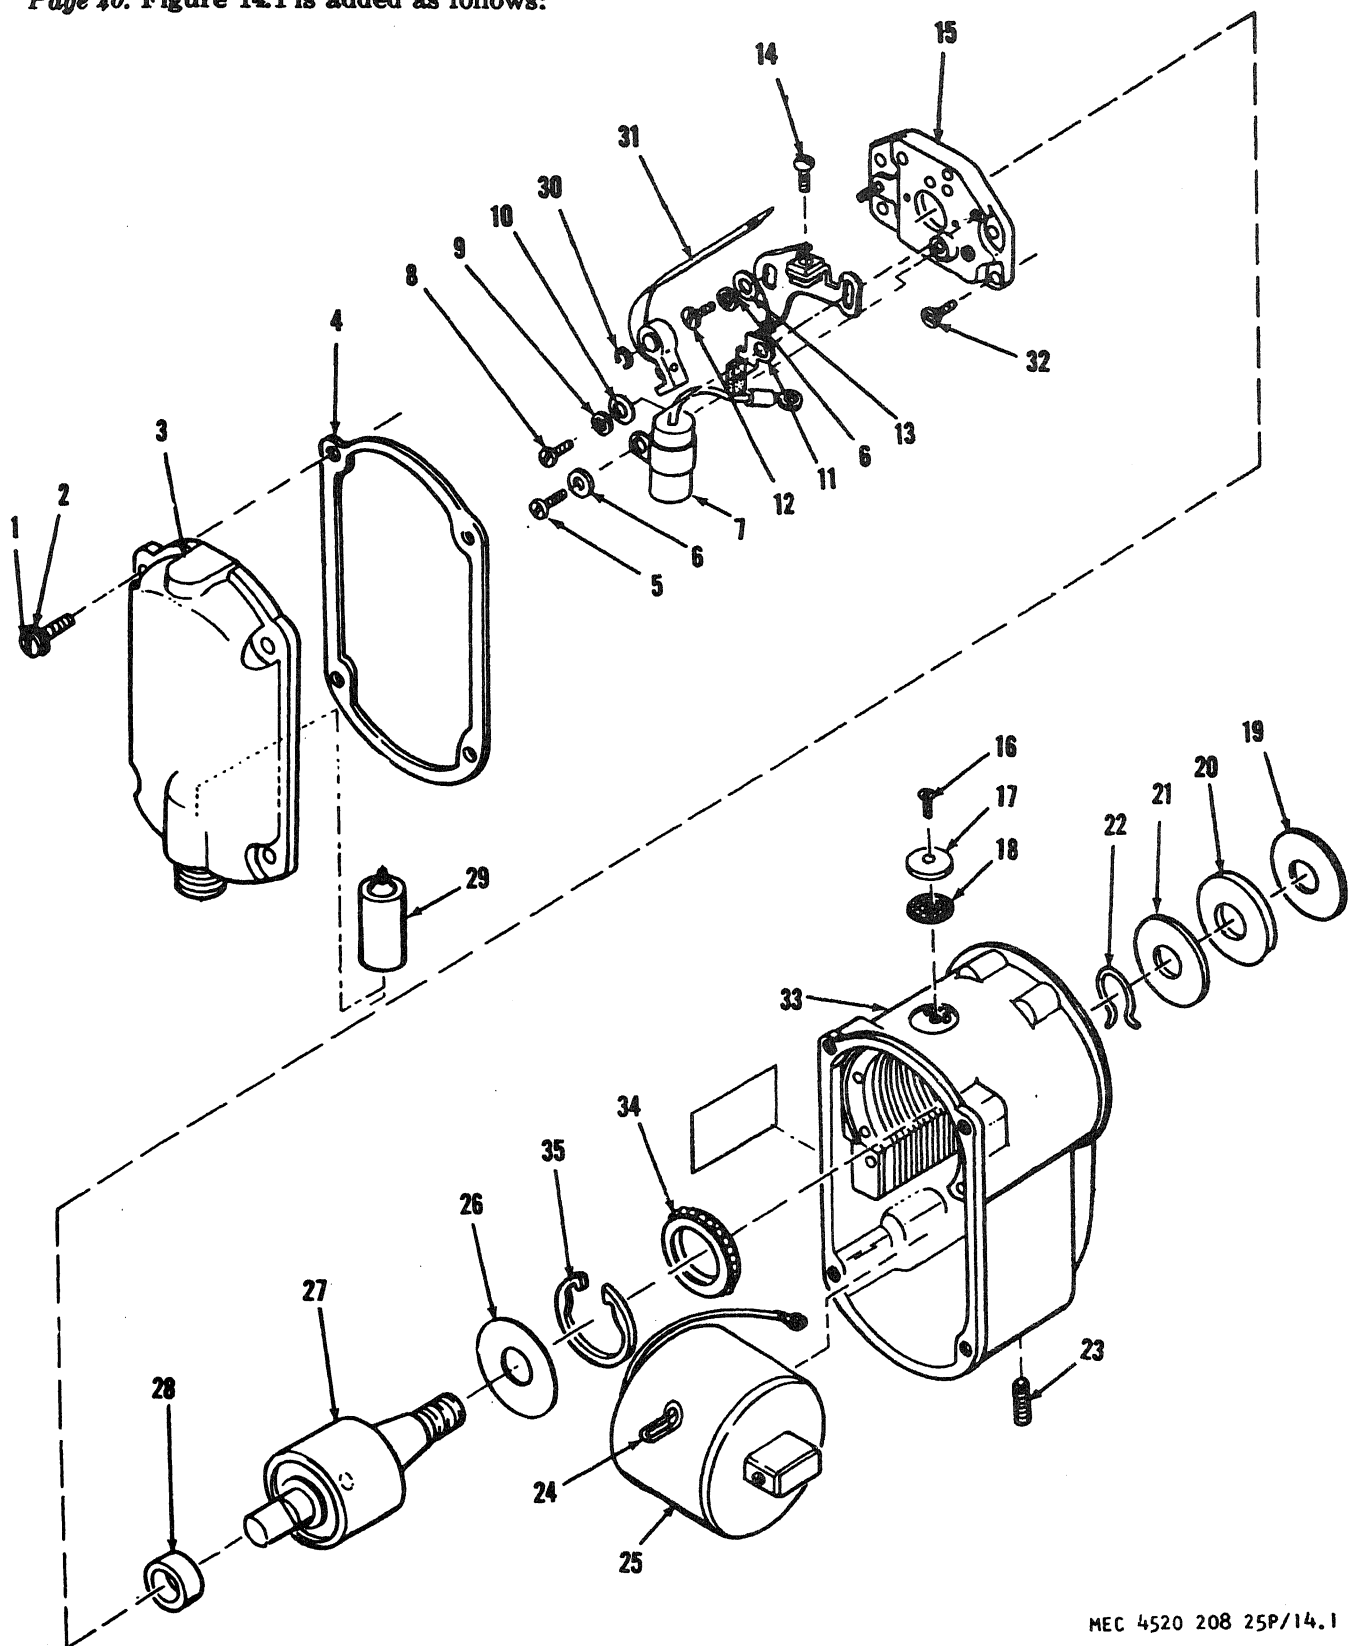

MEC 4520 208 25P/14.1

Figure 14.1. Magneto, Model RT400-40-1, Serial

Page 45. Figure 19.1 is added as follows:

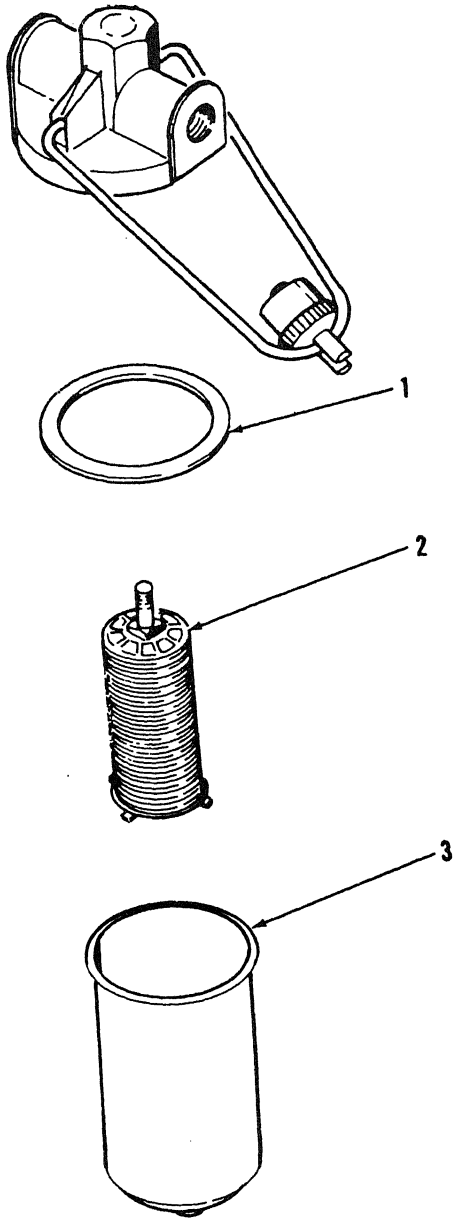

MEC 4520-208-25P/19.1

Figure 19.1. Fuel filter, Model BT400-40-1,
Serial No's BT4400866 and

Page 47. The following additions apply:

Federal Stock Number and Part Number Index

Number	Code	Page
ADDITIONS (Model BT400-40-1, Serial No's. BT4400866 and subsequent)		
B2437AX	21387	010
MS27183-8	96906	023
MS27183-10	96906	002
MS35206-263	96906	013
MS35206-267	96906	002
F1X128	79960	013
F3X5T2	79960	002
F8X69	79960	009
		020

Page 48. The following additions apply:

Federal Stock Number and Part Number Index

Number	Code	Page
ADDITIONS (Model BT400-40-1, Serial No's BT4400866 and subsequent.)		
MS35649-202	96906	002
MS35691-401	96906	013
MS51967-2	96906	002
S107	96523	013
S132794	99166	009
		021
		002

Page 49. The following additions apply:

Federal Stock Number and Part Number Index

Number	Code	Page
ADDITIONS (Model BT400-40-1, Serial No's BT4400866 and subsequent.)		
TMF3244	90598	002
TMF3951	90598	013
TM4008	90598	002
TM4029	90598	013
TM4030	90598	002
TM4031	90598	013
10S12D	21387	002

Page 50. The following additions apply:

Federal Stock Number and Part Number Index

Number	Code	Page
ADDITIONS (Model BT400-40-1, Serial No's BT4400866 and subsequent.)		
1615DC	991660	21

By Order of the Secretary of the Army:

BERNARD W. ROGERS
General, United States Army
Chief of Staff

Official:

PAUL T. SMITH
Major General, United States Army
The Adjutant General

Distribution:

To be distributed in accordance with DA Form 12-25C, Organizational maintenance requirements for Heaters, Space: 400,000 BTU.

TECHNICAL MANUAL

No. 5-4520-208-25P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., 20 September 1967**Organizational, Direct and General Support, and Depot
Maintenance Repair Parts and Special Tools Lists****HEATER, DUCT TYPE, PORTABLE GASOLINE 400,000
BTU/HR, GASOLINE ENGINE AND ELECTRIC MOTOR
DRIVEN BLOWERS, W/6 AND 12 INCH DIAMETER DUCTS,
AUTOMATIC TEMPERATURE CONTROL, TRAILER MOUNTED
(AMERICAN AIR FILTER CO. INC MODEL BT400-40)
FSN 4520-792-8257 (AMERICAN AIR FILTER CO. INC
MODEL BT400-40-1) FSN 4520-930-9474**

SECTION		Paragraph	Page
I.	INTRODUCTION		
	Scope -----	1	iii
	General -----	2	iii
	Explanation of columns -----	3	iii
	Special information -----	4	v
	Instructions for locating repair parts -----	5	v
	Abbreviations -----	6	v
	Index of Federal supply codes -----	7	v
	Reporting of equipment publication improvements -----	8	vi
	II. PRESCRIBED LOAD ALLOWANCE -----		vi
	III. REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE		
Group	01. Engine		
	0100 Engine assembly -----		1
	03. Fuel System		
	0306 Lines, fittings -----		1
	04. Exhaust System		
	0401 Pipe -----		2
	06. Electrical System		
	0607 Instrument or engine control panel -----		2
	13. Wheel and Tracks		
	1311 Wheel assembly -----		3
	1313 Tires, tubes -----		4
	15. Frame, Towing Attachments, and Drawbars		
	1503 Towing attachments -----		4
	16. Springs		
	1601 Springs -----		4
	18. Hull		
	1801 Hull assemblies -----		4
	1808 Stowage racks, straps -----		4
	22. Body Chassis or Hull, and Accessory Items		
	2202 Accessory items -----		4
	2210 Data plates and instruction holders -----		4
	40. Electric Motors		
	4000 Electric motor -----		4
	4007 Drive components -----		4
	4012 Switches -----		4

	Page
Group 47. Gages (Non-Electrical)	
4702 Gages, mountings, lines and fittings -----	8
4703 Hourmeter -----	8
60. Heating Units, Burners	
6004 Fuel system -----	8
6005 Burner assembly -----	10
6007 Fuel tank -----	10
6008 Blower assembly -----	11
6010 Exhaust system -----	11
6013 Heat exchanger assembly -----	11
SECTION IV. REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE	
Group 01. Engine	
0100 Engine assembly -----	12
03. Fuel System	
0306 Lines, fittings -----	12
04. Exhaust System	
0401 Pipe -----	18
06. Electrical System	
0607 Instrument or engine control panel -----	13
10. Front Axle	
1000 Front axle assembly -----	14
13. Wheel and Tracks	
1311 Wheel assembly -----	14
1313 Tires, tubes -----	15
15. Frame, Towing Attachments, and Drawbars	
1501 Frame assembly -----	15
1503 Towing attachments -----	15
16. Springs	
1601 Springs -----	15
18. Hull	
1801 Hull assemblies -----	16
1808 Stowage racks, straps -----	18
22. Body Chassis or Hull, and Accessory Items	
2202 Accessory items -----	18
2210 Data plates and instruction holders -----	18
40. Electric Motors	
4000 Electric motor -----	18
4001 Rotor assemblies -----	19
4002 Stator Assemblies -----	19
4005 Frame support and housing -----	19
4007 Drive components -----	19
4012 Switches -----	19
47. Gages (Non-Electrical)	
4702 Gages, mountings, lines and fittings -----	20
4703 Hourmeter -----	20
60. Heating Units, Burners	
6004 Fuel system -----	20
6005 Burner assembly -----	22
6007 Fuel tank -----	24
6008 Blower assembly -----	24
6010 Exhaust system -----	25
6011 Combustion chamber -----	25
6013 Heat exchanger assembly -----	25
SECTION V. FEDERAL STOCK NUMBER AND PART NUMBER INDEX -----	47

SECTION I

INTRODUCTION

1. Scope

This manual contains a list of repair parts required for the performance of organizational, direct support, general support, and depot maintenance of the heater.

2. General

This repair parts list is divided into four principal sections and a Federal stock number index.

a. Section II, Prescribed Load Allowance List (PLA), is a consolidated listing of repair parts quantitatively allocated for initial stockage at the organizational level. This is a mandatory minimum stockage allowance.

b. Section III, Repair Parts List, is a list of repair parts authorized for the performance of maintenance at the organizational level. No special tools required for this end item.

c. Section IV, Repair Parts List, is a list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level.

d. Section V, Federal stock number and Manufacturer's Part Number Index, is an index of Federal stock numbers and manufacturer's part numbers to page and manufacturer's codes.

e. Refer to TM 5-2805-208-14, for Repair Parts applicable to engine assembly.

f. Parts applicable to specific models of this end item are indicated by a letter symbol in the "description" column, following the nomenclature. Parts not indicated by a letter symbol apply to all models. The symbols apply as follows:

- (A)—applies to model BT 400-40 only
- (B)—applies to model BT 400-40-1 only

3. Explanation of Columns

The following provides an explanation of columns in the tabular lists.

a. Source, Maintenance, and Recoverability Codes.

- (1) Source Code indicates the selection status and source for the listed item. Source codes used are:

Code	Explanation
P	Applied to repair parts which are stocked in or supplied from DSA/GSA or Army supply system, and authorized for use at indicated maintenance categories.
M	Applied to repair parts which are not procured or stocked but are to be manufactured at indicated maintenance categories.
A	Applied to assemblies which are not procured or stocked as such but made up of two or more units, each of which carry individual stock numbers and descriptions and are procured and stocked and can be assembled by units at indicated maintenance categories.
X1	Applied to repair parts which are not procured or stocked, the requirement for which will be supplied by use of the next higher assembly or components.
X2	Applied to repair parts which are not stocked. The indicated maintenance category requiring such repair parts will attempt to obtain them through cannibalization; if not obtainable through cannibalization, such repair parts will be requisitioned with supporting justification through normal supply channels.

Note. Source code is not shown on common hardware items known to be readily available in Army supply channels and through local procurement.

- (2) Maintenance Code indicates the lowest category of maintenance authorized to

install the listed item. The maintenance level codes are:

Code	Explanation
O	Organizational maintenance
F	Direct support maintenance
H	General support maintenance
D	Depot maintenance

- (3) Recoverability Code indicates whether unserviceable items should be returned for recovery or salvage. Items not coded are expendable. Recoverability codes are:

Code	Explanation
R	Applied to repair parts and assemblies which are economically repairable as DSU and GSU activities and normally are furnished by supply on an exchange basis.
T	Applied to high dollar value recoverable repair parts which are subject to special handling and are issued on an exchange basis. Such repair parts normally are repaired or overhauled at depot maintenance activities.
U	Applied to repair parts specifically selected for salvage by reclamation units because of precious metal content, critical materials, high dollar value reusable casings or castings.

b. Federal Stock Number indicates the Federal stock number for the item.

c. Description column indicates the Federal item name and brief description of the item. A five-digit manufacturer's or other service code is shown followed by the manufacturer's part number. Repair parts quantities included in kits, sets, and assemblies that differ from the actual quantity used in the specific item, are listed in parentheses following the repair part name.

d. Unit of Issue indicates the unit used as a basis of issue, e.g., ea, pr, ft, yd, etc.

e. Quantity Incorporated in Unit Pack indicates the actual quantity contained in the unit pack.

f. Quantity Incorporated in Unit indicates the actual number of parts used in the application. A zero is shown when components of kits or sets are listed that are not applicable to the specific end item.

g. Fifteen-Day Organizational Maintenance Allowance.

- (1) The allowance columns are divided into four subcolumns. Indicated in each subcolumn is the quantity of items authorized for the number of equipments supported. Items authorized for use as required but not for initial stockage are identified with an asterisk in the allowance column.
- (2) The quantitative allowances for organizational level of maintenance represents one initial prescribed load for a 15-day period for the number of equipments supported. Units and organizations authorized additional prescribed loads will multiply the number of prescribed loads authorized by the quantity of repair parts reflected in the appropriate density column to obtain the total quantity of repair parts authorized.
- (3) Items identified by an asterisk may be requisitioned as required. Subsequent changes and/or additions to allowances will be limited to the provisions of AR 735-35. The range of items authorized will be made by this Command based upon engineering experience, demand data, or TAERS information.
- (4) Allowances are based on 4,000 hours of operation per year.

h. Thirty-Day DS/GS Maintenance Allowance.

- (1) The allowance columns are divided into three subcolumns. Indicated in each subcolumn is the quantity of items authorized for a number of equipments supported. Items authorized for use as required but not for initial stockage are identified with an asterisk in the allowance column.
- (2) The quantitative allowances for DS/GS levels of maintenance will represent initial stockage for a 30-day period for the number of equipments supported.

i. One-Year Allowances Per 100 Equipments/Contingency Planning Purposes indicates the quantity of items required for distribution and contingency planning purposes.

j. Depot Maintenance Allowance Per 100 Equipments indicates the total quantity of items recommended for depot maintenance of 100 equipments. Items recommended for immediate use only are identified with an asterisk in the allowance column.

k. Illustration.

- (1) Figure Number indicates the figure number of the illustration in which the item is shown.
- (2) Item or Symbol Number indicates the callout number used to reference the item in the illustration.

4. Special Information

The following publications pertain to Heater, space and its components.

TM 5-4520- 208-15	Operator, Organizational, Direct and General Support and Depot Maintenance Manual
----------------------	---

5. Instructions for Locating Repair Parts

a. When Federal Stock Number or manufacturer's part number is unknown.

- (1) *First.* Using the index of contents, determine the functional group or subgroup, i.e., engine, engine assembly, transmission, transmission assembly, within which the repair part belongs. Locate the appropriate page in the manual and identify the part.
- (2) *Second.* Locate the repair part and the illustration figure and item number as shown in the last two columns of the repair parts listing.
- (3) *Third.* Identify the repair part on the illustration.

b. When Federal Stock Number or manufacturer's part number is known.

- (1) *First.* Use the index to locate the Federal stock number or manufacturer's part number. This index is arranged in alphameric sequence

cross-referenced to page number and manufacturer's code.

- (2) *Second.* Refer to the appropriate page in the parts listing. Locate the repair part and the illustration figure and item number as shown in the last two columns of the parts listing.

6. Abbreviations

in.....	inch (es)
lg.....	long (length)
l. h.....	left hand
mtg.....	mounting (s)
No.....	number
r. h.....	right hand
thd.....	thread (ed)

7. Index of Federal Supply Codes

Code	Manufacturers
01930.....	Amerock Corporation
02582.....	Savoy Products Company
07707.....	United Shoe Machinery Corporation Fastener Division
11583.....	Champion Spark Plug Company
11764.....	Mason Company, Inc.
15235.....	Crouse-Hinds Company
21387.....	Fairbanks Morse and Company
43334.....	New Departure Division of General Motors Corporation
59730.....	Thomas and Betts Company
61864.....	United-Carr Fastener Corporation
62869.....	Veeder-Roots, Inc.
71895.....	Delvan Manufacturing Company
72962.....	Elastic Stop Nut Corporation of America
76005.....	Lord Manufacturing Company
77122.....	Palnut Company
78357.....	Snap-Tite, Inc.
79470.....	Weatherhead Company
80205.....	National Aircraft and Standard Committee Aeronautical Industries Association of America
81336.....	Corporation of Engineers
81348.....	Federal Specifications
83269.....	Dual Drive Inc.
83642.....	Standardization Division Department of Defense
83930.....	Adel Division General Metals Corporation
88044.....	Aeronautical Standard Group Department of the Navy and Air Force
90598.....	American Air Filter
91816.....	James-Pond-Clark Company
92940.....	Doerr Electric Corporation
96523.....	Klemm Automotive Products Company
96906.....	Military Standards
99166.....	Sundstrand Hydraulic Division of Sundstrand Corporation

**8. Reporting of Equipment Publication
Improvements**

DA Form 2028 (Recommended Changes to DA Publications) will be used for reporting discrepancies and recommendations for im-

proving this equipment publication. This form will be completed by the individual using the manual and forwarded direct to Commanding General, U. S. Army Mobility Equipment Command, ATTN: AMSME-MP, 4300 Goodfellow Blvd., St. Louis, Mo. 63120.

SECTION II

PRESCRIBED LOAD ALLOWANCE

(1)	(2)	(3)	(4)			
Federal stock number	Description useable on code	Qty inc in unit pack	15-day org maint. alw			
			(A) 1-5	(B) 6-20	(C) 21-50	(D) 51-100
0100—ENGINE ASSEMBLY						
5805-925-0628	Screw, Thumb: engine mtg (90598) TC 4021		*	*	*	2
0401—PIPES						
5840-940-7917	Spring, Helical: exhaust extension (90598) TM 3955		*	*	*	2
1313—TIRES, TUBES						
2640-050-1229	Valve Core (81836) 910-08-2898-500		*	*	*	2
2640-052-0944	Cap, Tire Valve		*	*	*	2
2202—ACCESSORY ITEMS						
4720-930-5973	Hose Assembly, Air Duct (90598) TD 3035-1		*	*	*	2
6004—FUEL SYSTEM						
2910-712-9326	Strainer, Element (96523) S108		*	*	*	2
4520-836-8165	Element, Filter (96523) CE 102		*	*	*	2
4520-838-5419	Gasket, Filter (96523) FG 104		*	2	2	2
4520-838-5421	Gasket, Filter (96523) HG 103		*	2	2	2
4520-946-0180	Pump, Fuel (99166) J6BC312-2		*	*	*	2
4720-930-5973	Hose Assembly, Air Duct (90598) TD 3035-1		*	*	*	2
6005—BURNER ASSEMBLY						
2920-142-0888	Contact Set, Distributor (21387) A24374X		*	*	*	2
4520-300-9598	Nozzle, Variable (90598) TR774		*	*	2	2
5330-202-3974	Packing, Preformed (71895) 234		*	*	2	2
6008—BLOWER ASSEMBLY						
3120-915-5445	Bushing, Sleeve (90598) TM3927		*	2	2	3

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S		(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) IS DAY ORG. MAINT. ALW.				(8) ILLUSTRATION	
	(a) SOURCE	(b) MAIN	(c) RECOV.		CODE	PART NUMBER				(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIG. NO.	(b) ITEM NO.
0001				SECTION III - REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE											
0001A				GROUP 01 - ENGINE											
0001B				0100 - ENGINE ASSEMBLY											
0002				BOLT, MACHINE: ENGINE MTG	96906	MS35292-31	EA		4	*	*	*	*	1	11
0003	P	O		BRACKET, ENGINE	90598	TM33219	EA		1	*	*	*	*	1	20
0004	P	O		BRACKET, ENGINE	90598	TM33219	EA		1	*	*	*	*	1	8
0005	P	O		BRACKET, ENGINE	90598	TM33220	EA		1	*	*	*	*	1	1
0006	P	O		BUSHING, TAPERED: ENGINE COUPLING	90598	TM33219-4	EA		1	*	*	*	*	1	9
0007	P	O		COUPLING, DRIVE	90598	TM33219-6	EA		1	*	*	*	*	1	10
0008	X2	O		KEY, WOODRUFF: BUSHING TO ENGINE	90598	TM33219-4	EA		1	*	*	*	*	1	30
0009	X2	O		MOUNT, RESILIENT: ENGINE MTG	76005	HTO-991-3	EA		1	*	*	*	*	16	7
0010	P	O		MOUNT, RESILIENT: ENGINE MTG	76005	HTI-15	EA		2	*	*	*	*	5	43
0011	P	O		NUT, SELF-LOCKING, HEXAGON: MOUNT MTG	72962	22404	EA		10	*	*	*	*	5	38
0012	O	O		SCREW, CAP, HEXAGON HEAD: ENGINE MTG	96906	MS35291-16	EA		10	*	*	*	*	1	23
0013	O	O		SCREW, CAP, HEXAGON, HEAD: MOTOR SUPPORT MOUNTING	96906	MS35291-29	EA		10	*	*	*	*	5	26
0013A	O	O		SCREW, MACHINE: MOUNT MTG	88044	AN505-10R26	EA		8	*	*	*	*	5	42
0014	O	O		SCREW, MACHINE: MOUNT MTG	96906	MS24583-47	EA		2	*	*	*	*	16	8
0015	O	O		SCREW, THUMB: ENGINE MTG	90598	TC4021	EA		3	*	*	*	*	5	41
0016	P	O		SUPPORT, PRIME MOTOR A	90598	TM33218	EA		1	*	*	*	*	5	37
0016A	X2	O		SUPPORT, PRIME MOTOR B	90598	TM33230-100	EA		1	*	*	*	*	5	37
0016B	X2	O		WASHER, FLAT: BRACKET MTG	96906	MS21718313	EA		8	*	*	*	*	1	13
0017	O	O		WASHER, LOCK: BRACKET MTG	96906	MS35333-41	EA		22	*	*	*	*	1	12
0018	O	O		WASHER, LOCK: ENGINE MTG	96906	MS35333-40	EA		10	*	*	*	*	5	27
0019	O	O		WASHER, LOCK: ENGINE MTG	96906	MS35333-40	EA		10	*	*	*	*	5	27
0019A	O	O		WASHER, LOCK: MOTOR SUPPORT MTG	96906	MS35333-41	EA		10	*	*	*	*	5	27
0020				GROUP 03 - FUEL SYSTEM											
0020A				0306 - LINES, FITTINGS											
0021	P	O		COUPLING HALF: QUICK DISCONNECT	78357	PHNH-2M	EA		1	*	*	*	*	1	7
0023	X2	O		ELBOW, PIPE TO TUBE: NIPPLE TO FUEL FILTER	79470	34002	EA		1					11	4
0024	X2	O		ELBOW, PIPE TO TUBE: NIPPLE TO QUICK DISCONNECT	88044	AN916-1	EA		1					1	6
0024A	X2	O		NIPPLE, PIPE: ELBOW TO ELBOW, FUEL FILTER											
0025	O	O		(81348) WASH351TYPE1TAB2E NIPPLE, PIPE: FILTER TO ENGINE	88044	AN911-1C	EA		1	*	*	*	*	1	5

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW.				(8) ILLUSTRATION	
	(a) SOURCE	(b) MAIN						(c) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIG. NO.	(b) ITEM NO.
0026		0	4730-249-9721	NIPPLE, PIPE: FILTER TO ENGINE	EA		1	*	*	*	*	1	3
0027				GROUP 04 - EXHAUST SYSTEM									
0027A				0401 - PIPES									
0028	X2	0		BOLT, U: EXHAUST EXTENSION	EA		1					1	16
0029	X2	0		BRACKET, EXHAUST	EA		1					5	55
0030	X2	0	4520-930-5682	CONDUCTOR, EXHAUST	EA		1	*	*	*	*	1	14
0031	P	0	2990-941-5274	EXTENSION, EXHAUST	EA		1					5	57
0032	X2	0		FLANGE, EXHAUST	EA		1					5	20
0033	X2	0		FLANGE, SEAL: EXHAUST EXTENSION	EA		1	*	*	*	*	1	27
0034	P	0	5330-930-6869	GASKET: EXTENSION MTG	EA		1					1	19
0035	X2	0	5310-841-4872	NUT, EXTENDED WASHER: U BOLT	EA		2	*	*	*	*	1	22
0036	0	0	5310-584-5005	NUT, PLAIN, HEXAGON: BRACKET MTG	EA		2	*	*	*	*	1	29
0037	0	0	5310-012-0361	NUT, PLAIN, HEXAGON: EXTENSION MTG	EA		2	*	*	*	*	5	18
0038	0	0	5315-187-3269	PIN, TAPERED, PLAIN: EXHAUST CONNECTOR	EA		1	*	*	*	*	5	22
0039	X2	0	2990-941-5275	PIPE, EXHAUST	EA		1	*	*	*	*	5	17
0040	X2	0	5305-060-0501	SCREW, CAP, HEXAGON: BRACKET MTG	EA		1					1	24
0041	X2	0		SCREW, CAP, HEXAGON HEAD: EXTENSION MOUNTING	EA		4					5	24
0042	X2	0		SCREW, MACHINE: EXHAUST BRACKET MTG	EA		2					5	21
0043	X2	0		SPACER, BRACKET (AS REQUIRED)	EA		1	*	*	*	*	5	15
0044	P	0	5340-940-7917	SPRING, HELICAL: EXHAUST EXTENSION	EA		1	*	*	*	*	5	15
0045	P	0	5340-930-3382	SUPPORT, EXHAUST	EA		4	*	*	*	*	1	28
0046	0	0	5310-167-0834	WASHER, FLAT: EXTENSION MTG	EA		2	*	*	*	*	5	18
0047	0	0	5310-167-0834	WASHER, FLAT: EXHAUST BRACKET MTG	EA		2	*	*	*	*	1	28
0048	0	0	5310-141-1795	WASHER, FLAT: U BOLT	EA		1	*	*	*	*	1	28
0049	0	0	5310-550-1130	WASHER, LOCK: BRACKET MTG	EA		4	*	*	*	*	5	7
0050	0	0	5310-205-7036	WASHER, LOCK: EXTENSION MTG	EA		2	*	*	*	*	1	28
0051	0	0	5310-576-5752	WASHER, LOCK: EXHAUST BRACKET MTG	EA		2	*	*	*	*	5	7
0052				GROUP 06 - ELECTRICAL SYSTEM									
0052A				0607 - INSTRUMENT OR ENGINE CONTROL PANEL									
0053	X2	0		BOX, CONTROL	EA		1					2	3
0054	X2	0		BRACKET, CONTROL	EA		1					2	19
0055	X2	0	4520-025-2903	CATCH, DOOR	EA		1					2	6
0056	X2	0		DOOR, ACCESS: CONTROL BOX	EA		1					2	4
0057	P	0	6685-925-4957	GAGE, TEMPERATURE	EA		1	*	*	*	*	2	18
0058	X2	0	4520-024-7429	GEAR ASSEMBLY TEMPERATURE	EA		1					2	9
0059	X2	0	5355-824-7503	KNOB, CONTROL: FUEL VALVE	EA		1					2	15
0060	X2	0	5355-214-0890	KNOB: SELECTOR VALVE	EA		1					2	16

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S		(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW.				(8) ILLUSTRATION	
	(a) SOURCE	(b) MAIN T.			(c) RECOV.	(a) 1-5				(b) 6-20	(c) 21-50	(d) 51-100	(a) FIG. NO.	(b) ITEM NO.	
661	X2	0	5355-219-7648	KNOB: TEMPERATURE INDICATOR	90598 T0586E	EA			1	*	*		2	15	
662	0	0	5310-012-0361	NUT, PLAIN, HEXAGON: DOOR MTG	96906 M535649-102	EA			4	*	*		2	8	
663	0	0	5310-550-2284	NUT, PLAIN, HEXAGON: TEMPERATURE CONTROL VALVE	T7122 RL3416	EA									
664	X2	0	5315-039-5563	PANEL, CONTROL	90598 T73268	EA			1	*	*		2	17	
665	0	0		PIN, SPRING: STEM	96906 M5171494	EA			1	*	*		2	10	
667	X2	0	5320-823-8777	RIVET, BLIND	90598 T33300	EA			1	*	*		10	4	
668	0	0	5305-151-3449	RIVET, TUBULAR	96906 M52045008-8	EA			2	*	*		2	12	
669	X2	0	4520-025-2911	SCREW, MACHINE: DOOR MTG	88044 AN5261024R6	EA			4	*	*		2	5	
670	0	0	5310-025-2911	SETScrew: knob mtg	90598 T0653	EA			5	*	*		2	13	
671	X2	0	5310-550-1130	STEM, TEMPERATURE CONTROL VALVE	90598 T0540A	EA			1	*	*		10	5	
672	0	0	5310-550-1130	WASHER, LOCK: CONTROL BOX MTG	96906 M535333-40	EA			2	*	*		2	2	
673	0	0	5310-576-5752	WASHER, LOCK: DOOR MTG	96906 M535333-39	EA			4	*	*		2	7	
674				GROUP 13 - WHEEL AND TRACKS											
677				1311 - WHEEL ASSEMBLY											
677A															
678	0	0	5310-176-8117	NUT, SLOTTED, HEXAGON: WHEEL MTG	88044 AN320-16	EA			2	*	*		3	2	
679	0	0	5315-013-7214	PIN, COTTER: WHEEL MTG NUT	88044 AN380-4-7	EA			2	*	*		3	8	
680	X2	0		WASHER, KEYED: WHEEL BEARING	11764 13108	EA			2	*	*		3	3	
681	X2	0		WHEEL AND HUB	83642 M534322-5	EA			2	*	*				
682	X2	0	5306-345-3259	BOLT, RUBBER SHOULDER: WHEEL MOUNTING	83269 G-661-A	EA			10	*	*		4	1	
683	X2	0	2530-646-7705	HUB, WHEEL	83642 M524328-2	EA			2	*	*		4	2	
684	P	0	3110-275-0283	BEARING, TAPERED ROLLER BEARING	60038 A18393	EA			2	*	*				
685	P	0	3110-196-2169	CONE AND ROLLER, TAPERED ROLLER BEARING	60038 15123	EA			2	*	*		3	4	
686	X1	0	3110-198-2170	CUP, TAPERED ROLLER BEARING	60038 15245	EA			2	*	*		3	3	
687	P	0	3110-819-1626	BEARING ROLLER, TAPERED	60038 A-10322	EA			2	*	*				
688	P	0	3110-100-3537	CONE AND ROLLERS, TAPERED ROLLER BEARING	60038 24780	EA			2	*	*		3	6	
689	X1	0	3110-100-0542	CUP, TAPERED ROLLER BEARING	60038 24720	EA			2	*	*		3	11	
690	P	0	2530-200-1345	CAP, GREASE	02582 9-10-C102	EA			2	*	*		3	7	
691	P	0	2530-833-0413	SEAL, PLAIN ENCASED: WHEEL ASSEMBLY	02582 9-10-C104	EA			2	*	*		3	7	
692	0	0	5310-176-8135	NUT, PLAIN, HEXAGON: WHEEL MTG	88044 AN325-8	EA			10	*	*		4	8	
693	0	0	5310-584-5272	WASHER, LOCK: WHEEL MTG	88044 AN935-816	EA			10	*	*		4	5	
694	X2	0	2530-528-7224	WHEEL ASSEMBLY	83612 M524325-1	EA			2	*	*		3		
695	X2	0		BOLT, MACHINE: RIM MTG, 3/8-24 THD SIZE, 3/4 IN. LG	88044 60-6-6	EA			16	*	*		4	10	
696	0	0	5310-543-5653	NUT, PLAIN HEXAGON: RIM MTG	88044 AN325-6	EA			16	*	*		4	4	
697	X1	0		RIM	02582 R9-400-1	EA			2	*	*		4	7	
698	X1	0		RIM	02582 R9-400-2	EA			2	*	*		4	6	
699	0	0	5310-285-7069	WASHER, LOCK: RIM MTG	88044 AN935-616	EA			16	*	*		4	5	

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW.				(8) ILLUSTRATION		
	(a) SOURCE	(b) MAINT.						(c) RECOV.	(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIG. NO.	(b) ITEM OR NO.
100				1313 - TIRES, TUBES	EA									
101	P	O	2640-052-0944	CAP, TUBE VALVE	EA		2	*	*	*	*	2	3	
102	P	O	2610-269-7354	INNER TUBE, PNEUMATIC	EA		2	*	*	*	*	*		
103	P	O	2610-050-9840	TIRE, PNEUMATIC	EA		2	*	*	*	*	*		
104	P	O	2640-050-1229	VALVE, CORE	EA		2	*	*	*	*	2		
105				GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRUMS										
107				1503 - TOWING ATTACHMENTS										
108	X2	O	5310-067-9507	BAR ASSEMBLY, TOW	EA		1	*	*	*	*	6	17	
109			5315-817-4066	NUT, SELF-LOCKING, HEXAGON: TOW BAR MTG	EA		1	*	*	*	*	6	7	
110	X2	O	5340-873-4079	PIN ASSEMBLY: TOWBAR AND PINTLE	EA		3	*	*	*	*	6	13	
111			5340-873-4079	PIN ASSEMBLY: PINTLE	EA		1	*	*	*	*	6	13	
112			5305-716-8182	SCREW, CAP HEXAGON HEAD: TOWBAR MTG	EA		1	*	*	*	*	6	18	
113			5305-988-1721	SCREW, MACHINE: PIN ASSEMBLY	EA		3	*	*	*	*	6	12	
114			5310-012-0580	WASHER, LOCK: PIN ASSEMBLY MTG	EA		3	*	*	*	*	6	11	
115				GROUP 16 - SPRING										
116				1601 - SPRINGS										
117			5306-804-5529	BOLT: SPRING SHACKLE	EA		6	*	*	*	*	4	22	
118			5306-800-5626	BOLT, U: AXLE SPRING PLATE	EA		4	*	*	*	*	4	17	
119			4730-050-4208	FITTING, LUBRICATION: SHACKLE BOLT	EA		6	*	*	*	*	4	21	
120			5310-761-6882	NUT, PLAIN, HEXAGON: SPRING AND PLATE MTG	EA		8	*	*	*	*	4	15	
121			5310-655-9553	NUT, SLOTTED, HEXAGON: SHACKLE BOLT	EA		6	*	*	*	*	4	18	
122			5315-839-5822	PIN, COTTER: SHACKLE BOLT	EA		6	*	*	*	*	4	19	
123				PLATE, SPRING	EA		2	*	*	*	*	4	13	
124	X2	O	4030-804-5549	SHACKLE: SPRING	EA		4	*	*	*	*	4	20	
125	X2	O		SPRING ASSEMBLY	EA		2	*	*	*	*	4	16	
126	X2	O	5310-012-1637	WASHER, LOCK: SPRING AND PLATE MTG	EA		8	*	*	*	*	4	14	
127				GROUP 18 - HULL										
128				1801 - HULL ASSEMBLIES										
129				BAR ASSEMBLY, STATIONARY	EA		1	*	*	*	*	5	61	
130	X2	O	4520-606-2189	BAR, REMOVABLE	EA		1	*	*	*	*	5	15	
131	X2	O	4520-653-3053	BAR, REMOVABLE: HINGE	EA		1	*	*	*	*	5	2	
132	X2	O	4520-653-3054	BAR, STATIONARY: HINGE B	EA		1	*	*	*	*	5	12	
133	X2	O	4520-655-9501	BOLT, MACHINE: BRACKET MTG	EA		8	*	*	*	*	15	18	

LINE NO.	SOURCE MAINT. AND RECV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S		(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW.				(8) ILLUSTRATION	
	(a)	(b)			CODE	PART NUMBER				(a)	(b)	(c)	(d)	(a)	(b)
0132	X2	0	5306-655-6606	BOLT, SQUARE NECK: STOP MTG		90598 TC613	EA		2	*	*	*	*	5	1
0133	X2	0		BRACKET, ANGLE: BASE MTG		90598 TC4149-1	EA		1					15	20
0134	X2	0		BRACKET, ANGLE: BASE MTG		90598 TC4149-2	EA		2					15	24
0135	X2	0		BRACKET, HINGE SUPPORT		90598 TC4153-1	EA		1					5	9
0136	X2	0		BRACKET, MOUNT: SKID BASE		90598 TC4150-1	EA		1					15	22
0137	X2	0		BRACKET, MOUNT: SKID BASE B		90598 TC4150-2	EA		1					15	23
0138	X2	0	4520-860-8536	BRACKET, SUPPORT: HINGE B		90598 TC1185	EA		2					5	3
0139	X2	0		CABINET, TOP A		90598 TCF3226	EA		1					20	9
0140	X2	0		CABINET, TOP B		90598 TCF3265-100	EA		1					20	9
0141	X2	0	5340-880-9963	CATCH, FRICTION		01930 3653	EA		3					20	6
0142	X2	0	4520-213-9929	CATCH, DOOR: AIR INLET		90598 TC643	EA		3					20	11
0143	X2	0		CHAIN: OUTLET DOOR		90598 TR3335	EA		1					5	23
0144	X2	0		COVER, OUTLET		90598 TDF3013	EA		1					5	24
0145	X2	0		DOOR, ACCESS: TOP CABINET		90598 TCF3251	EA		1					20	4
0146	X2	0		DOOR, AIR INLET		90598 TCF3227	EA		1					20	2
0147	X2	0		GROMMET, RUBBER: SIDE PANELS		90598 TCF3227	EA		1					5	40
0148	X2	0	5325-948-0473	LOCK, LUGGAGE: SIDE PANEL		90598 TCF3227	EA		1					5	35
0149	X2	0		LOCK, LUGGAGE: SIDE PANEL		90598 TCF3227	EA		1					5	35
0150	X2	0		LOCK, LUGGAGE: SIDE PANEL		90598 TCF3227	EA		1					5	35
0151	X2	0		LOCK, LUGGAGE: SIDE PANEL		90598 TCF3227	EA		1					5	35
0152	X2	0		LOCK, LUGGAGE: SIDE PANEL		90598 TCF3227	EA		1					5	35
0153	X2	0	5310-012-0361	MUT, PLAIN HEXAGON: CABINET, AIR INLET		90598 TR3347-2	EA		2					5	35
0154	X2	0		AND ACCESS DOORS MTG		90598 TR3347-2	EA		2					5	35
0155	X2	0		MUT, PLAIN, HEXAGON: STOP MTG B		90598 TR3347-2	EA		18	*	*	*	*	20	8
0156	X2	0	5310-012-0361	MUT, PLAIN, HEXAGON: SUPPORT BRACKET		90598 TR3347-2	EA		2	*	*	*	*	5	11
0157	X2	0		AND BULKHEAD MTG B		90598 TR3347-2	EA		7	*	*	*	*	5	8
0158	X2	0	5310-012-0361	MUT, PLAIN, HEXAGON: TOP CABINET MTG B		90598 TR3347-2	EA		11	*	*	*	*	5	8
0159	X2	0	5310-088-1251	MUT, SELF-LOCKING: BRACKET MTG B		90598 TR3347-2	EA		2	*	*	*	*	15	19
0160	X2	0	5310-811-3494	MUT, SELF-LOCKING: BRACKET MTG B		90598 TR3347-2	EA		2	*	*	*	*	5	60
0161	X2	0		PANEL, SIDE, LEFT HAND A		90598 TR3347-2	EA		1	*	*	*	*	5	32
0162	X2	0		PANEL, SIDE, LEFT HAND B		90598 TR3347-2	EA		1	*	*	*	*	5	32
0163	X2	0		PANEL, SIDE, RIGHT HAND A		90598 TR3347-2	EA		1	*	*	*	*	5	39
0164	X2	0		PANEL, SIDE, RIGHT HAND B		90598 TR3347-2	EA		1	*	*	*	*	5	39
0165	X2	0	5305-068-0500	SCREW, CAP, HEXAGON HEAD: HINGE SUPPORT		90598 TR3347-2	EA		3	*	*	*	*	5	16
0166	X2	0	5320-823-8757	RIVET, TUBULAR: LATCH AND CATCH MTG		90598 TR3347-2	EA		14	*	*	*	*	5	16
0167	X2	0	5320-823-8757	RIVET, TUBULAR: LOCK MTG		90598 TR3347-2	EA		2	*	*	*	*	5	36
0168	X2	0		SCREEN, AIR INLET		90598 TR3347-2	EA		1	*	*	*	*	20	3
0169	X2	0	5305-068-0500	SCREW, CAP, HEXAGON HEAD: BRACKET MTG		90598 TR3347-2	EA		2	*	*	*	*	5	34
0170	X2	0	5305-068-0500	SCREW, CAP, HEXAGON HEAD: SIDE PANEL MTG		90598 TR3347-2	EA		16	*	*	*	*	5	34
0171	X2	0	5305-060-6481	SCREW, MACHINE: BRACKET MTG B		90598 TR3347-2	EA		4	*	*	*	*	5	34
0172	X2	0	5305-151-3449	SCREW, MACHINE: CABINET, AIR INLET AND ACCESS		90598 TR3347-2	EA		18	*	*	*	*	20	1
0173	X2	0	5305-151-3449	DOORS MTG		88044 AN526-1024R6	EA		18	*	*	*	*	20	1
0174	X2	0	5305-151-3449	SCREW, MACHINE: SUPPORT BRACKET AND		88044 AN526-1024R6	EA		7	*	*	*	*	5	6
0175	X2	0	5305-151-3449	BULKHEAD MTG		88044 AN526-1024R6	EA		11	*	*	*	*	20	1
0176	X2	0	5305-151-3449	SCREW, MACHINE: TOP CABINET B		90598 TC592	EA		1	*	*	*	*	5	14
0177	X2	0	4520-653-3031	STOP, SUPPORT: LEFT HAND B		90598 TC591	EA		1	*	*	*	*	5	14
0178	X2	0	4520-653-3032	STOP, SUPPORT: RIGHT HAND B		90598 TC591	EA		1	*	*	*	*	5	14

(1) SOURCE, MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(7) 15 DAY ORG. MAINT. ALW.				(8) ILLUS- TRATION	
						(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100		
(a) SOURCE	(b) MAIN- T.	(c) RECOV.	MANUFACTURER'S		QTY INC IN UNIT	(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIG. NO.	(b) ITEM NO.
		CODE	PART NUMBER								
X2	0		SHIELD, CAPILLIARY	EA	1					5	45
X2	0		STRIKE, LATCH: CABINET TOP	EA	2					20	10
X2	0		SUPPORT, DOOR: RIGHT HAND B	EA	1					5	5
X2	0		SUPPORT: TOP B	EA	1					5	10
	0		WASHER, LOCK: BRACKET MTG B	EA	4	*	*	*	*	15	17
	0		WASHER, LOCK: BRACKET MTG	EA	2	*	*	*	*	5	59
	0		WASHER, LOCK: HINGE SUPPORT BRACKET B	EA	3	*	*	*	*	5	33
	0		WASHER, LOCK: SIDE PANEL MTG	EA	16	*	*	*	*	5	33
	0		WASHER, LOCK: SUPPORT BRACKET AND BULKHEAD MTG	EA	7	*	*	*	*	5	7
	0		WASHER, LOCK: TOP CABINET MTG	EA	14	*	*	*	*	20	7
	0		WASHER, NONMETALLIC: SUPPORT MTG B	EA	2	*	*	*	*	5	13
			1808 - STORAGE RACKS, STRAPS								
X2	0		BASKET, DUCT	EA	1					6	1
X2	0		BOLT, U: BASKET MTG	EA	4					6	2
X2	0		BUTTON, PLUG: DUCT HOLDER	EA	5					6	20
X2	0		HANDLE, HORIZONTAL	EA	1					6	3
X2	0		HANDLE, SIDE, L. H.	EA	1					6	21
X2	0		HANDLE, SIDE, R. H.	EA	1					6	14
X2	0		HOLDER, DUCT	EA	3					6	14
X2	0		NUT, PLAIN, HEXAGON: BASKET MTG	EA	4					6	4
X2	0		NUT, SELF-LOCKING HEXAGON: DUCT HOLDER AND HANDLE	EA	5					6	8
X2	0		NUT, SELF-LOCKING, HEXAGON: DUCT HOLDER AND HANDLE MTG	EA	5					6	7
X2	0		SCREW, CAP, HEXAGON HEAD: DUCT HOLDER AND HANDLE MTG	EA	5					6	10
X2	0		SHIELD, SNOW	EA	1					6	19
X2	0		STRAP, TIE DOWN	EA	4					6	15
X2	0		WASHER, FLAT: BASKET MTG	EA	4					6	5
X2	0		WASHER, FLAT: DUCT HOLDER AND HANDLE MOUNTING	EA	5					6	9
GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS											
2202 - ACCESSORY ITEMS											
P	0		ADAPTER	EA	1	*	*	*	*	7	3
P	0		HOSE ASSEMBLY, AIR DUCT	EA	2	*	*	*	*	7	2
P	0		HOSE ASSEMBLY, AIR DUCT	EA	3	*	*	*	*	7	1
			4520-675-5331								
			4720-930-5974								
			4720-930-5973								

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW.				(8) ILLUSTRATION		
	(a) SOURCE	(b) MAINT.						(c) RECOV.	(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(e) FIG. NO.	(f) ITEM NO. OF STM
					CODE	PART NUMBER								
255				4012 SWITCHES										
256	X2	0		BOOT	EA		1					9	15	
257	X2	0		CABLE, ELECTRIC	EA		1					9	18	
258	X2	0		CONNECTOR, ELECTRICAL	EA		1					9	17	
259	X2	0		COVER, JUNCTION BOX	EA		1					9	14	
260	X2	0	5330-020-4156	GASKET	EA		1					9	8	
261	X2	0	5330-735-7641	GASKET: COVER	EA		1					9	12	
262	X2	0	5330-061-4203	GASKET: JUNCTION BOX	EA		1					9	10	
263	X2	0		JUNCTION BOX	EA		1					9	11	
264	X2	0	5305-011-0488	SCREW, MACHINE: COVER MTG	EA		2		*			9	16	
265	X2	0		SPACER, JUNCTION BOX	EA		1					9	9	
266	X2	0		SWITCH, TOGGLE	EA		1					9	13	
267				GROUP 47 - GAGES (NON-ELECTRICAL)										
267A				4702 - GAGES, MOUNTINGS, LINES AND FITTINGS										
268	P	0	6680-947-8458	GAGE, FUEL	EA		1		*			13	4	
269	X2	0		GASKET: FUEL GAGE	EA		1					13	9	
270				4703 - HOURMETER										
271		0		METER, TIME TOTALIZE	EA		1					13	4	
272		0	5310-012-0361	(METER IS NOT TO BE REPLACED) NUT, PLAIN, HEXAGON: REPAIR REPLACEMENT OF HOURMETER AND RELATED COMPONENTS IS NOT AUTHORIZED	EA		4		*			13	11	
273	X2	0	5330-920-2323	PACKING, PREFORMED: METER DRIVE	EA		1					13	7	
274	X2	0	5315-754-1857	PIN, ROLLER: PULLEY MTG	EA		1		*			13	5	
275		0	5305-984-6214	PULLEY: METER DRIVE	EA		4		*			13	3	
276		0	5310-285-7036	SCREW, MACHINE: METER ATTACHING WASHER, LOCK: METER ATTACHING	EA		4		*			13	10	
277				GROUP 60 - HEATING UNITS, BURNERS										
277A				6004 - FUEL SYSTEM										
278		0	4730-424-5871	ADAPTER, STRAIGHT, PIPE TO TUBE: LINE TO TANK	EA		2		*			2	28	
279		0	4730-540-2612	ADAPTER, STRAIGHT, PIPE TO TUBE: TUBE TO FUEL PUMP AND CONTROL BLOCK	EA		2		*			2	46	
280		0	4730-301-7470	ADAPTER, STRAIGHT, PIPE TO TUBE: TUBE TO TEE	EA		1		*			2	39	
281	P	0	3030-756-8395	BELT, U: FUEL PUMP, FAN AND MAGNETO DRIVE	EA		1		*			16	26	

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW.				(8) ILLUSTRATION		
	(a) SOURCE	(b) MAINT.						(c) RECOV.	(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIG. NO.	(b) ITEM NO. OR
MANUFACTURER'S														
CODE														
PART NUMBER														
284	X2	0	4730-196-0930	BUSHING, PIPE: TEE MTG	EA		1					2	38	
285	X2	0		CLAMP, CABLE, TIE	EA		1					2	50	
286	X2	0		CLAMP, LOOP: FUEL LINES	EA		2					2	35	
287	P	0		COUPLING, HALF, QUICK DISCONNECT: FUEL LINE	EA		1	*	*	*	*	2	54	
288	0	0	4730-288-8258	COUPLING, TUBE: TUBE TO FUEL PUMP	EA		1	*	*	*	*	2	52	
289	0	0	4730-277-8265	ELBOW, PIPE TO TUBE: CONTROL VALVE	EA		1	*	*	*	*	2	21	
290	X2	0	4730-391-3777	ELBOW, PIPE TO TUBE: TUBE ASSEMBLY	EA		1					2	24	
291	0	0	4730-864-8505	TO BLOCK	EA		2					2	20	
292	0	0	4730-278-4519	ELBOW, PIPE TO TUBE: TUBE TO FUEL PUMP	EA		2	*	*	*	*	2	48	
293	X2	0		ELBOW, PIPE TO TUBE: FILTER TO PUMP B	EA		2	*	*	*	*	2	41	
294	0	0	4730-277-8265	ELBOW, PIPE TO TUBE: HOSE TO FUEL FILTER B	EA		3	*	*	*	*	2	21	
295	X2	0	2910-922-8107	FILTER, FUEL A	EA		1	*	*	*	*	12	4	
296	P	0	4520-836-8164	FILTER, FUEL B	EA		1	*	*	*	*	2	56	
297	X2	0		BOWL, METAL, FILTER B	EA		1	*	*	*	*	19	6	
298	P	0	4520-836-8165	ELEMENT, FILTER B	EA		1	*	*	*	*	2	19	
299	P	0	4520-838-5421	GASKET, FILTER B	EA		1	*	2	2	2	2	1	
300	P	0	4520-838-5419	GASKET, FILTER B	EA		1	*	2	2	2	2	3	
301	X1	0		SPRING, ELEMENT B	EA		1	*	*	*	*	19	5	
302	P	0	2910-712-9326	STRAINER, ELEMENT B	EA		1	*	*	*	*	2	29	
303	X2	0		GASKET: ELBOW AND ADAPTER B	EA		1	*	*	*	*	2	53	
304	X2	0	5325-184-9846	GROMMET, RUBBER: FUEL HOSE TO BULKHEAD	EA		3	*	*	*	*	2	43	
305	P	0	4720-595-3515	HOSE ASSEMBLY: ELBOW TO COUPLING	EA		1	*	*	*	*	12	5	
306	P	0	4720-585-7014	HOSE ASSEMBLY: FILTER TO PUMP A	EA		1	*	*	*	*	2	49	
307	X2	0	4720-836-8167	HOSE ASSEMBLY: FILTER TO TANK B	EA		1	*	*	*	*	2	40	
308	X2	0	4720-836-8167	HOSE ASSEMBLY: PUMP TO NOZZLE B	EA		1	*	*	*	*	2	25	
309	P	0	4720-836-8168	HOSE ASSEMBLY: NOZZLE TO CHECK VALVE B	EA		1	*	*	*	*	2	22	
310	P	0	4720-836-8166	NIPPLE PIPE: TUBE TO CHECK VALVE	EA		1	*	*	*	*	2	36	
311	X2	0	4730-249-9721	NUT, SELF-LOCKING HEXAGON: CLAMP MTG	EA		2	*	*	*	*	2	30	
312	X2	0		PULLEY, GROOVE: FUEL PUMP	EA		1	*	*	*	*	2	55	
313	P	0	4520-946-0180	PUMP, FUEL	EA		1	*	*	*	*	2	30	
314	P	0		GASKET: COVER	EA		1	*	*	*	*	2	55	
315	P	0	2540-563-5423	STRAINER	EA		1	*	*	*	*	11	28	
316	P	0	2540-360-1056	REDUCER, PIPE: ELBOW TO FILTER B	EA		1	*	*	*	*	11	26	
317	P	0	4730-640-6330	SCREW, CAP, HEXAGON HEAD: FUEL PUMP MOUNTING	EA		1	*	*	*	*	2	51	
318	0	0	5305-836-1395	SCREW, MACHINE: CLAMP MTG	EA		2	*	*	*	*	2	44	
319	0	0	5305-780-4701	SETSCREW: PULLEY MTG	EA		2	*	*	*	*	2	34	
320	X2	0		STRAP, LINE SUPPORT B	EA		1	*	*	*	*	2	31	
321	X2	0	5340-901-7235	TEE, PIPE TO TUBE: LINE TO ADAPTER	EA		1	*	*	*	*	2	37	
322	X2	0	4730-595-0251	TUBE ASSEMBLY: FUEL PUMP TO COUPLING	EA		1	*	*	*	*	2	47	
323	X2	0		TUBE ASSEMBLY: PUMP TO TANK	EA		1	*	*	*	*	2	42	

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) QTY INC IN UNIT	(5) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW.				(8) ILLUSTRATION			
	(a)	(b)					(c)	(d)	(a)	(b)	(c)	(d)	(a)	(b)
0366	X2	0		TUBE ASSEMBLY: PUMP TO CASING A	EA	1						12	6	
0367	X2	0		TUBE DRAIN: HEAT EXCHANGER	EA	1						18	15	
0370		0	5310-803-5998	WASHER, FLAT: FUEL PUMP MTG	EA	2	*	*	*	*	*	2	45	
0372				GROUP 6005 - BURNER ASSEMBLY										
0373	P	0	4520-653-1276	CABLE ASSEMBLY, IGNITION	EA	1	*	*	*	*	*	13	1	
0374	X2	0	5325-276-6091	GROMMET, RUBBER: IGNITION CABLE	EA	1	*	*	*	*	*	13	2	
0375	P	0	4520-346-7333	HOLDER, COMBUSTOR: NOZZLE B	EA	1	*	*	*	*	*	12	2	
0376	X2	0	4520-916-1873	HOLDER, NOZZLE A	EA	1	*	*	*	*	*	13	15	
0377	P	0	2920-948-7399	MAGNETO	EA	1	*	*	*	*	*	14	11	
0381	P	0	2920-354-0751	CAMWICK HOLDER	EA	1	*	*	*	*	*	14	25	
0382	P	0	5910-520-6711	CAPACITOR, FIXED	EA	1	*	*	*	*	*	14	31	
0384	X2	0	2920-349-3887	COIL, MAGNETO	EA	1	*	*	*	*	*	14	4	
0385	X2	0	2920-656-7340	CONTACT, ELECTRIC	EA	1	*	*	*	*	*	14	1	
0386	P	0	2920-142-0888	CONTACT SET, DISTRIBUTOR	EA	1	*	*	*	*	*	14	14	
0388	P	0	2920-510-1298	GASKET: END CAP	EA	1	*	*	*	*	*	14	14	
0395	X1	0	5305-281-6387	SCREW, ASSEMBLED WASHER: END CAP MTG	EA	4	*	*	*	*	*	14	14	
0396	X1	0		SCREW, MACHINE: CAMWICK HOLDER MTG	EA	1	*	*	*	*	*	14	14	
0397	X1	0		SCREW, MACHINE: CAPACITOR LEAD	EA	1	*	*	*	*	*	14	14	
0398	X1	0	5305-206-0513	SCREW, MACHINE: CAPACITOR MTG	EA	1	*	*	*	*	*	14	14	
0399	X1	0	5305-638-5684	SCREW, MACHINE: CONTACT SET MTG	EA	1	*	*	*	*	*	14	14	
0406	X1	0		WASHER, FLAT: CAMWICK HOLDER MTG	EA	1	*	*	*	*	*	14	14	
0407	X1	0	5310-167-0816	WASHER, FLAT: CONTACT SET MTG	EA	1	*	*	*	*	*	14	14	
0409	X1	0	5310-167-0661	WASHER, LOCK: CAMWICK HOLDER MTG	EA	1	*	*	*	*	*	14	14	
0410	X1	0	5310-616-8575	WASHER, LOCK: CAPACITOR AND CONTACT SET MTG	EA	1	*	*	*	*	*	14	6	
0411	X1	0		WASHER, LOCK: END CAP MTG	EA	1	*	*	*	*	*	14	2	
0413		0	5310-012-0377	NUT, PLAIN, HEXAGON: PULLEY MTG	EA	1	*	*	*	*	*	13	8	
0414	P	0	4520-300-9598	NOZZLE, VARIABLE	EA	1	*	*	*	*	*	17	10	
0415	P	0	5330-202-3974	PACKING PREFORMED	EA	1	*	*	*	*	*	17	2	
0416	P	0	4520-025-2958	STRAINER ASSEMBLY	EA	1	*	*	*	*	*	17	9	
0417	P	0	2920-580-3435	PLUG, IGNITOR	EA	1	*	*	*	*	*	17	13	
0418	X2	0		PLUG, PIPE: NOZZLE HOLDER	EA	2	*	*	*	*	*	17	13	
0419	X2	0		PULLEY, MAGNETO	EA	1	*	*	*	*	*	13	14	
0420		0	5305-068-0500	SCREW, CAP, HEXAGON HEAD: MAGNETO MTG	EA	4	*	*	*	*	*	13	12	
0421		0	5310-570-1130	WASHER, LOCK: MAGNETO MTG	EA	4	*	*	*	*	*	13	13	
0422		0	5310-999-7643	WASHER, LOCK: PULLEY MTG	EA	1	*	*	*	*	*	13	9	
0423				6007 - FUEL TANK										
0424	P	0	2910-141-9758	CAP, FUEL TANK	EA	1	*	*	*	*	*	15	3	
0426	P	0	5330-684-7651	GASKET: FUEL CAP	EA	1	*	*	*	*	*	15	11	
0428	P	0	5330-218-3886	PACKING, PREFORMED: DRAIN PLUG	EA	1	*	*	*	*	*	15	5	
0429	X2	0	5315-514-2660	PIN, RETAINING: FUEL CAP	EA	1	*	*	*	*	*	15	2	
0430	X2	0	4730-202-3306	PLUG, MACHINE: TANK DRAIN	EA	1	*	*	*	*	*	16		

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW.				(8) ILLUSTRATION		
	(a) SOURCE	(b) MAIN						(c) RECOV.	(a)	(b)	(c)	(d)	(a)	(b)
0433				6008 - BLOWER ASSEMBLY										
0437	P	0	3120-915-5445	BUSHING, SLEEVE	EA		1	*	2	2	3	16	2	
0440	X2	0	4520-829-6536	GUARD ASSEMBLY	EA		3	*	*	*	*	16	28	
0442	0	0	5310-761-6882	NUT, PLAIN, HEXAGON: GUARD MTG	EA		2	*	*	*	*	16	25	
0448	0	0	5305-988-1171	SCREW, MACHINE: GUARD MTG	EA		1	*	*	*	*	16	11	
0449	0	0	5305-988-1723	SCREW, MACHINE: GUARD MTG	EA		1	*	*	*	*	16	11	
0458	0	0	5310-011-5547	WASHER, LOCK: GUARD MTG	EA		3	*	*	*	*	16	12	
0461				6010 - EXHAUST SYSTEM										
0462	X2	0		CHAIN: OUTLET COVER	EA		2					5	23	
0463	X2	0		COVER, EXHAUST	EA		1					5	47	
0464	P	0	2990-041-5277	EXTENSION, EXHAUST	EA		1	*	*	*	*	5	52	
0465	P	0	2990-041-5276	EXTENSION, EXHAUST: w/SCREEN	EA		1	*	*	*	*	5	53	
0466	P	0	4520-567-1858	GASKET: EXHAUST STACK	EA		1	*	*	*	*	18	17	
0467	P	0	4520-567-1859	GASKET: EXHAUST STACK	EA		1	*	*	*	*	5	48	
0468	0	0	5310-012-0361	NUT, PLAIN, HEXAGON: EXHAUST FLANGE MTG	EA		2	*	*	*	*	5	8	
0469	0	0	5310-012-0361	NUT, PLAIN, HEXAGON: SHIELD MTG	EA		2	*	*	*	*	5	8	
0470	X2	0	5320-823-8757	RIVET, TUBULAR: CHAIN	EA		2	*	*	*	*	5	36	
0471	0	0	5305-151-3449	SCREW, MACHINE: EXHAUST FLANGE MTG	EA		2	*	*	*	*	5	6	
0472	0	0	5305-281-6276	SCREW, MACHINE: EXHAUST STACK MTG	EA		12	*	*	*	*	5	51	
0473	0	0	5305-151-3449	SCREW, MACHINE: SHIELD MTG	EA		1	*	*	*	*	5	17	
0474	X2	0		SHIELD, EXHAUST A	EA		1					5	17	
0475	X2	0		SHIELD, EXHAUST B	EA		1					5	17	
0476	X2	0		STACK, EXHAUST	EA		1					5	49	
0477	0	0	5310-809-8544	WASHER, FLAT: CHAIN MTG	EA		1	*	*	*	*	5	46	
0478	0	0	5310-731-7538	WASHER, FLAT: EXHAUST STACK MTG	EA		12	*	*	*	*	5	50	
0479	0	0	5310-576-5752	WASHER, LOCK: EXHAUST FLANGE MTG	EA		2	*	*	*	*	5	7	
0480	0	0	5310-576-5752	WASHER, LOCK: SHIELD MTG	EA		2	*	*	*	*	5	7	
0490				6013 - HEAD EXCHANGER ASSEMBLY										
0497	X2	0		CONTROL, DAMPER	EA		1					18	5	
0498	X2	0		HANDWHEEL: DAMPER CONTROL	EA		1					18	2	
0501	X2	0	5315-839-2325	PIN, COTTER: DAMPER CONTROL PIN	EA		1	*	*	*	*	18	1	
0504	X2	0		SUPPORT, BULB	EA		1					18	10	
0506	0	0	5310-141-1797	WASHER, FLAT: DAMPER CONTROL	EA		1	*	*	*	*	18	3	
0508	0	0	5310-285-7036	WASHER, LOCK: BULB SUPPORT	EA		1	*	*	*	*	18	11	
0510	X2	0		WASHER, NONMETALLIC: DAMPER CONTROL	EA		1					5	29	

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW.			(8) 1-YR. ALW. PLANNING CTYCY. 100 EQUIP. PER. 100 EQUIP. MAINT.	(9) DEPOT MAINT. 100 EQUIP. PER. 100 EQUIP. MAINT.	(10) ILLUSTRATION		
	(a) SOURCE	(b) MAINT.						(c) RECOV.	(a) 1-20	(b) 21-50			(c) 51-100	(a) FIG. NO.	(b) SYM. NO.
SECTION IV - REPAIR PARTS FOR DS, GS AND DEPOT MAINTENANCE															
GROUP 01 - ENGINE															
0100 - ENGINE ASSEMBLY															
0001															
0001A															
0001B															
0002			5306-660-2016	BOLT, MACHINE: ENGINE MTG	EA		4	*	*	*	*	*	11		
0003	P	O	2920-947-2753	BRACKET, ENGINE	EA		1	*	*	*	*	*	20		
0004	P	O	2920-947-2731	BRACKET, ENGINE	EA		1	*	*	*	*	*	8		
0005	P	O	2920-933-3610	BRACKET, ENGINE	EA		1	*	*	*	*	*	1		
0006	P	O	3120-916-1869	BUSHING, TAPERED: ENGINE COUPLING	EA		1	*	*	*	*	*	9		
0007	P	O	4520-924-2397	COUPLING, DRIVE	EA		1	*	*	*	*	*	10		
0008	P	F	2805-068-7510	ENGINE, GASOLINE	EA		1	*	*	*	*	*	2		
0009	X2	O		KEY, WOODRUFF: BUSHING TO ENGINE	EA		1	*	*	*	*	*	30		
0010	P	O	5340-941-3016	MOUNT, RESILIENT: ENGINE MTG	EA		1	*	*	*	*	*	7		
0011	P	O	5340-707-0238	MOUNT, RESILIENT: ENGINE MTG	EA		2	*	*	*	*	*	43		
0012	P	O	5310-274-9403	NUT, SELF-LOCKING, HEXAGON: MOUNT MTG	EA		10	*	*	*	*	*	30		
0013	O	O	5305-071-2235	SCREW, CAP, HEXAGON HEAD: ENGINE MTG	EA		10	*	*	*	*	*	23		
0013A	O	O	5306-255-8494	SCREW, CAP, HEXAGON, HEAD: MOTOR SUPPORT MOUNTING	EA		10	*	*	*	*	*	26		
0014	O	O	5305-545-5961	SCREW, MACHINE: MOUNT MTG	EA		8	*	*	*	*	*	42		
0015	O	O	5305-059-4573	SCREW, MACHINE: MOUNT MTG	EA		2	*	*	*	*	*	8		
0016	P	O	5305-925-0628	SCREW, THUMB: ENGINE MTG	EA		3	*	*	*	*	24	41		
0016A	X2	O		SUPPORT, PRIME MOTOR A	EA		1	*	*	*	*	*	37		
0016B	X2	O		SUPPORT, PRIME MOTOR B	EA		1	*	*	*	*	*	37		
0017	O	O	5310-087-7493	WASHER, FLAT: BRACKET MTG	EA		8	*	*	*	*	*	13		
0018	O	O	5310-167-0721	WASHER, LOCK: BRACKET MTG	EA		22	*	*	*	*	*	12		
0019	O	O	5310-550-1130	WASHER, LOCK: ENGINE MTG	EA		10	*	*	*	*	*	24		
0019A	O	O	5310-167-0721	WASHER, LOCK: MOTOR SUPPORT MTG	EA		10	*	*	*	*	*	27		
0020				GROUP 03 - FUEL SYSTEM											
0020A				0306 - LINES, FITTINGS											
0021	P	O		COUPLING HALF: QUICK DISCONNECT	EA		1	*	*	*	*	*	7		
0023	X2	O	4730-277-8265	ELBOW, PIPE TO TUBE: NIPPLE TO FUEL FILTER	EA		1	*	*	*	*	11	4		
0024	X2	O	4730-287-9353	ELBOW, PIPE TO TUBE: NIPPLE TO QUICK DISCONNECT	EA		1	*	*	*	*	1	6		
0024A	X2	O		NIPPLE, PIPE: ELBOW TO ELBOW, FUEL FILTER	EA		1	*	*	*	*	*	1		
0025	O	O	4730-595-3875	(81348) WASH TYPE ITABZE NIPPLE, PIPE: FILTER TO ENGINE	EA		1	*	*	*	*	1	5		
					EA		1	*	*	*	*	1	3		

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW.			(8) 1-YR. ALW. PER 100 EQUIP. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUS. TRATION		
	(a) SOURCE	(b) MAIN						(c) RECOV.	(a) 1-20	(b) 21-50			(c) 51-100	(a) FIG. NO.	(b) ITEM NO.
26	0		4730-249-9721	NIPPLE, PIPE: FILTER TO ENGINE	EA		1	*	*	*	*	*	1	3	
27				GROUP 04 - EXHAUST SYSTEM											
27A				0401 - PIPES											
28	X2	0		BOLT, 1/4 EXHAUST EXTENSION	80205 NAS3104-7-8	EA	1						1	16	
29	X2	0		BRACKET, EXHAUST	90598 TH3952	EA	1						5	55	
30	X2	0	4520-930-5682	CONDUCTOR, EXHAUST	90598 TH3963	EA	1						5	19	
31	P	0	2990-941-5274	EXTENSION, EXHAUST	90598 TH3222	EA	1	*	*	*	*	*	1	14	
32	X2	0		FLANGE, EXHAUST	90598 TH3948	EA	1						5	57	
33	X2	0		FLANGE, SEAL: EXHAUST EXTENSION	90598 TH3961	EA	1						5	20	
33A	P	0	5330-930-6869	GASKET: EXTENSION MTG	90598 TH3958	EA	1	*	2	8	100	127	1	27	
34	X2	0	5310-844-4872	NUT, EXTENDED WASHER: U BOLT	96906 MS21043-4	EA	2						1	19	
35	0	0	5310-584-5005	NUT, PLAIN, HEXAGON: BRACKET MTG	96906 MS35690-405	EA	1	*	*	*	*	*	1	22	
36	0	0	5310-012-0361	NUT, PLAIN, HEXAGON: EXTENSION MTG	96906 MS35649-102	EA	2	*	*	*	*	*	1	29	
37	0	0	5315-167-3269	PIN, TAPERED, PLAIN: EXHAUST CONNECTOR	96906 MS24692-99	EA	2	*	*	*	*	*	5	18	
38	X2	0	2990-941-5275	PIPE, EXHAUST	90598 TH3223	EA	1	*	*	*	*	*	5	22	
39	X2	0	5305-068-0501	SCREW, CAP, HEXAGON: BRACKET MTG	96906 MS90725-5	EA	1	*	*	*	*	*	1	17	
40	X2	0		SCREW, CAP, HEXAGON HEAD: EXTENSION MOUNTING	90598 TC3377	EA	4						1	25	
41	X2	0		SCREW, MACHINE: EXHAUST BRACKET MTG	90598 TC3377	EA	2						5	44	
42	X2	0		SPACER, BRACKET (AS REQUIRED)	90598 TH3957	EA	1						5	54	
43	X2	0		SUPPORT, EXHAUST	90598 TH3955	EA	1	*	2	2	12	6	5	21	
44	P	0	5340-940-7917	WASHER, FLAT: EXHAUST EXTENSION	90598 TH3969-1	EA	1	*	*	*	*	*	1	15	
45	P	0	5340-930-3382	WASHER, FLAT: EXHAUST MTG	88044 AN960-10L	EA	4	*	*	*	*	*	5	26	
46	0	0	5310-167-0834	WASHER, FLAT: EXHAUST BRACKET MTG	88044 AN960-10L	EA	2	*	*	*	*	*	1	18	
47	0	0	5310-141-1795	WASHER, FLAT: U BOLT	88044 AN960-10L	EA	2	*	*	*	*	*	1	21	
48	0	0	5310-550-1130	WASHER, LOCK: BRACKET MTG	96906 MS35333-40	EA	1	*	*	*	*	*	1	28	
49	0	0	5310-265-7036	WASHER, LOCK: EXTENSION MTG	96906 MS122055	EA	4	*	*	*	*	*	1	28	
50	0	0	5310-576-5752	WASHER, LOCK: EXHAUST BRACKET MTG	96906 MS35333-39	EA	2	*	*	*	*	*	5	7	
51				GROUP 06 - ELECTRICAL SYSTEM											
52				GROUP 06 - INSTRUMENT OR ENGINE CONTROL											
52A				0607 - INSTRUMENT OR ENGINE CONTROL PANEL											
53	X2	0		BOX, CONTROL	90598 TCF3224	EA	1						2	3	
54	X2	0		BRACKET, CONTROL	90598 TRF3081	EA	1						2	19	
55	X2	0	4520-025-2903	CATCH, DOOR	01930 3653	EA	1						2	6	
56	X2	0		DOOR, ACCESS: CONTROL BOX	90598 TCF3228	EA	1						2	4	
57	X2	0	6685-925-4957	GAGE, TEMPERATURE	90598 TR3276	EA	1	*	*	*	*	*	2	18	
58	X2	0	4520-024-7429	GEAR ASSEMBLY TEMPERATURE	90598 TOF64C	EA	1						2	9	

LINE NO.	(1) SOURCE AND RECOVER CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE		(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW.			(8) 1-YR. ALW. PER 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION	
	SOURCE	RECOVER			(a)	(b)			(c)	(a)	(b)				
														MANUFACTURER'S CODE	PART NUMBER
559	X2	0	5355-824-7503	KNOB, CONTROL: FUEL VALVE	EA		1	1						2	14
560	X2	0	5355-214-0890	KNOB: SELECTOR VALVE	EA		1	1						2	16
561	X2	0	5355-219-7648	KNOB: TEMPERATURE INDICATOR	EA		4	4						2	15
562	0	0	5310-012-0361	NUT, PLAIN, HEXAGON: DOOR MTG											
563	0	0	5310-550-2284	NUT, PLAIN, HEXAGON: TEMPERATURE CONTROL VALVE											
564	X2	0	5315-039-5563	PANEL, CONTROL	EA		1	1						2	17
565	0	0	5315-039-5563	PIN, SPRING: STEM	EA		1	1						2	10
567	X2	0	5320-823-8757	RIVET, BLIND	EA		1	1						10	4
568	0	0	5305-151-3449	RIVET, TUBULAR	EA		1	1						2	12
569	0	0	5305-151-3449	SCREW, MACHINE: DOOR MTG	EA		2	4						2	5
570	X2	0	4520-025-2911	SETScrew: KNOB MTG	EA		5	5						2	1
571	X2	0	4520-025-2911	STEM, TEMPERATURE CONTROL VALVE	EA		1	1						10	13
572	P	F	4820-939-6826	VALVE, TEMPERATURE CONTROL	EA		1	1	2	2	2	16		10	2
573	0	0	5310-550-1130	WASHER, LOCK: CONTROL BOX MTG	EA		2	2						2	6
574	0	0	5310-576-5752	WASHER, LOCK: DOOR MTG	EA		4	4						2	7
575				GROUP 10 - FRONT AXLE											
576	X2	F	4520-964-8923	1000 - FRONT AXLE ASSEMBLY	EA		1	1						4	12
577				AXLE ASSEMBLY											
578				GROUP 13 - WHEEL AND TRACKS											
579				1311 - WHEEL ASSEMBLY											
580	X2	0	5310-176-8117	NUT, SLOTTED, HEXAGON: WHEEL MTG	EA		2	2						3	8
581	X2	0	5315-013-7214	PIN, COTTER: WHEEL MTG NUT	EA		2	2						3	3
582	X2	0	5306-345-3259	WASHER, KEYED: WHEEL BEARING	EA		2	2						3	3
583	X2	0	2530-646-7705	WHEEL AND HUB	EA		10	10						4	1
584	X2	0	3110-275-0883	BOLT, RUBBER SHOULDER: WHEEL MOUNTING	EA		2	2						4	2
585	P	0	3110-198-2169	HUB, WHEEL	EA		2	2						16	
586	P	0	3110-198-2170	BEARING, TAPERED ROLLER BEARING	EA		2	2						8	
587	P	0	3110-819-1626	BEARING, TAPERED ROLLER BEARING	EA		2	2						16	
588	P	0	3110-100-3537	CONE AND ROLLER, TAPERED ROLLER BEARING	EA		2	2						8	
589	X1	0	3110-100-0542	CUP, TAPERED ROLLER BEARING	EA		2	2						16	
590	P	0	2530-200-1345	CONE AND ROLLERS, TAPERED ROLLER BEARING	EA		2	2						8	
591	P	0	2530-833-0413	CUP, GREASE SEAL, PLAIN ENCASED: WHEEL ASSEMBLY	EA		2	2						16	
592	P	0	5310-176-8135	NUT, PLAIN, HEXAGON: WHEEL MTG	EA		10	10						4	9

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE			(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW.			(8) 1-YR. ALW. PER 100 EQUIP. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION	
	(a) SOURCE	(b) MAINT.	(c) RECOV.						(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG. NO.	(b) ITEM NO.
93	0	0		5310-584-5272	WASHER, LOCK: WHEEL MTG	EA		10	*	*	*	*	*	4	8
94	X2	0		2530-528-7224	WHEEL ASSEMBLY	EA		2	*	*	*	*	*	4	5
95	X2	0			BOLT, MACHINE: RIM MTG, 3/8-24 THD SIZE, 3/4 IN. LG	EA		16	*	*	*	*	*	4	10
96	0	0		5310-543-5653	NUT, PLAIN HEXAGON: RIM MTG	EA		16	*	*	*	*	*	4	4
97	X1	0			RIM	EA		2						4	7
98	X1	0			RIM	EA		2						4	6
99	0	0		5310-285-7069	WASHER, LOCK: RIM MTG	EA		16						4	5
00					1313 - TIRES, TUBES										
01	P	0		2640-052-0944	CAP, TIRE VALVE	EA		2	*	*	*	*	*	3	9
02	P	0		2610-269-7354	INNER TUBE, PNEUMATIC	EA		2	*	*	*	*	*	3	
03	P	0		2610-050-9840	TIRE, PNEUMATIC	EA		2	*	*	*	*	*	3	
04	P	0		2640-050-1229	VALVE, CORE	EA		2	*	*	*	*	*	3	
05					GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS										
06	X2	H			1501 - FRAME ASSEMBLY	EA		1						6	16
07					FRAME, ASSEMBLY										
08	X2	0			1503 - TOWING ATTACHMENTS										
09	0	0		5310-067-9907	BAR ASSEMBLY, TOW	EA		1	*	*	*	*	*	6	17
10	0	0		5315-817-4066	NUT, SELF-LOCKING, HEXAGON: TOW BAR MTG	EA		1	*	*	*	*	*	6	7
11	0	0		5340-873-4079	PIN ASSEMBLY: TOWBAR AND PINTLE	EA		3	*	*	*	*	*	6	13
12	0	0		5340-873-4079	PIN ASSEMBLY: PINTLE	EA		1	*	*	*	*	*	6	13
13	0	0		5305-716-8182	SCREW, CAP HEXAGON HEAD: TOWBAR MTG	EA		1	*	*	*	*	*	6	18
14	0	0		5305-988-1721	SCREW, MACHINE: PIN ASSEMBLY	EA		3	*	*	*	*	*	6	12
15	0	0		5310-012-0380	WASHER, LOCK: PIN ASSEMBLY MTG	EA		3	*	*	*	*	*	6	11
16					GROUP 16 - SPRING										
17					1601 - SPRINGS										
18	0	0		5306-804-6529	BOLT: SPRING SHACKLE	EA		6	*	*	*	*	*	4	22
19	0	0		5306-800-5626	BOLT, U: AXLE SPRING PLATE	EA		4	*	*	*	*	*	4	17
20	0	0		4730-050-4208	FITTING, LUBRICATION: SHACKLE BOLT	EA		6	*	*	*	*	*	4	21
21	0	0		5310-761-6882	NUT, PLAIN, HEXAGON: SPRING AND PLATE MTG	EA		8	*	*	*	*	*	4	15
22	0	0		5310-655-9553	NUT, SLOTTED, HEXAGON: SHACKLE BOLT	EA		6	*	*	*	*	*	4	18
23	0	0		5315-839-5822	PIN, COTTER: SHACKLE BOLT	EA		6	*	*	*	*	*	4	19
24	X2	0			PLATE, SPRING	EA		2	*	*	*	*	*	4	13
25	X2	0		4030-804-5549	SHACKLE: SPRING	EA		4	*	*	*	*	*	4	20

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS.GS MAINT. ALW.			(8) 1-YR. ALW. PER 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION	
	(a) SOURCE	(b) MAINT.						(a) 1-20	(b) 21-50	(c) 51-100			(a) ITEM NO.	(b) FIG. NO.
0123	X2	0	5310-012-1637	SPRING ASSEMBLY	EA		2	*	*	*	*	*	4	16
0124		0		WASHER, LOCK: SPRING AND PLATE MTG	EA		8	*	*	*	*	*	4	14
0125				GROUP 18 - HULL										
0126				1801 - HULL ASSEMBLIES										
0127	X2	0	4520-606-2189	BAR ASSEMBLY, STATIONARY B	EA		1						5	61
0128	X2	0	4520-653-3053	BAR, REMOVABLE B	EA		1						5	15
0129	X2	0	4520-653-3054	BAR, REMOVABLE: HINGE B	EA		1						5	2
0130	X2	0	4520-605-9301	BAR, STATIONARY: HINGE B	EA		1						5	12
0131	X2	F		BASE, SKID	EA		1						15	21
0132		0	5306-622-0494	BOLT, MACHINE: BRACKET MTG B	EA		8	*	*	*	*	*	15	18
0133	X2	0	5306-655-6606	BOLT, SQUARE NECK: STOP MTG B	EA		2	*	*	*	*	*	5	1
0134	X2	0		BRACKET, ANGLE: BASE MTG B	EA		1						15	20
0135	X2	0		BRACKET, ANGLE: BASE MTG B	EA		2						15	24
0136	X2	0		BRACKET, HINGE SUPPORT B	EA		1						5	9
0137	X2	0		BRACKET MOUNT: SKID BASE B	EA		1						15	22
0138	X2	0		BRACKET, MOUNT: SKID BASE B	EA		1						15	23
0139	X2	0	4520-860-8536	BRACKET, SUPPORT: HINGE B	EA		2	*	*	*	*	*	5	3
0140	X2	F		BULKHEAD, TOP A	EA		1						5	16
0141	X2	F		BULKHEAD, TOP B	EA		1						5	30
0142	X2	0		BULKHEAD, BOTTOM	EA		1						20	9
0143	X2	0	5340-880-9363	CABINET, TOP A	EA		3						20	2
0144	X2	0	4520-213-9929	CABINET, TOP B	EA		2						20	6
0145	X2	0		CATCH, DOOR: AIR INLET	EA		1						20	11
0146	X2	0		CHAIN: OUTLET DOOR	EA		1						5	23
0147	X2	0		COVER, OUTLET	EA		1						5	31
0148	X2	F		COVER, SKID TOP	EA		1						5	34
0149	X2	0		DOOR, ACCESS: TOP CABINET	EA		1						20	4
0150	X2	0		DOOR, AIR INLET	EA		1						20	2
0151	X2	0		GROMMET, RUBBER: SIDE PANELS	EA		1						5	40
0152	X2	0		LOCK, LUGGAGE: SIDE PANEL	EA		1						5	35
0153	X2	0	5325-948-0473	MUT, PLAIN HEXAGON: CABINET, AIR INLET	EA		2						20	8
0154		F	5310-012-0361	AND ACCESS DOORS MTG	EA		18	*	*	*	*	*	20	8
0155		0	5310-012-0361	MUT, PLAIN, HEXAGON: SKID COVER MTG	EA		3	*	*	*	*	*	15	15
0156		0	5310-012-0361	MUT, PLAIN, HEXAGON: STOP MTG B	EA		2	*	*	*	*	*	5	11
0157		0	5310-012-0361	MUT, PLAIN, HEXAGON: SUPPORT BRACKET	EA		7	*	*	*	*	*	5	8
0158		0	5310-088-1251	AND BULKHEAD MTG B	EA		11	*	*	*	*	*	20	8
0159		0	5310-811-3494	MUT, PLAIN, HEXAGON: TOP CABINET MTG B	EA		2	*	*	*	*	*	15	19
0160		0		MUT, SELF-LOCKING: BRACKET MTG B	EA		2	*	*	*	*	*	5	60
0161	X2	0		MUT, SELF LOCKING HEXAGON: BRACKET MTG B	EA		1	*	*	*	*	*	5	32
0162	X2	0		PANEL, SIDE, LEFT HAND A	EA		1	*	*	*	*	*	5	32
	X2	0		PANEL, SIDE: LEFT HAND B	EA		1	*	*	*	*	*	5	32
	X2	0		PANEL, SIDE, RIGHT HAND A	EA		1	*	*	*	*	*	5	39

TIME NO.	(1) SOURCE MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE		(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/OS MAINT. ALW.			(8) 1-YR. ALW. PER 100 EQUIP. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUS- TRATION		
	(a) SOURCE	(b) MAINT			MANUFACTURER'S				(c) RECOV.	(a) 1-20	(b) 21-50			(c) 51-100	(a) FIG. NO.	(b) ITEM NO.
					CODE	PART NUMBER										
53	X2	0	5305-068-0500	PANEL, SIDE, RIGHT HAND B	EA			1						5	39	
54		0		SCREW, CAP, HEXAGON HEAD: HINGE SUPPORT BRACKET B	90598 TCF3266-100	EA		3						5	16	
55		0	5320-823-8757	RIVET, TUBULAR: LATCH AND CATCH MTG	96906 MS90725-3	EA		14	*	*	*	*	*	5	20	
56		0	5320-823-8757	RIVET, TUBULAR: LOCK MTG	96906 MS20450C8-8	EA		2	*	*	*	*	*	5	36	
57	X2	0		SCREEN, AIR INLET	90598 TCF3223	EA		1	*	*	*	*	*	20	3	
58		0	5305-068-0500	SCREW, CAP, HEXAGON HEAD: BRACKET MTG	96906 MS90725-3	EA		2	*	*	*	*	*	5	34	
59		0	5305-068-0500	SCREW, CAP, HEXAGON HEAD: SIDE PANEL MTG	96906 MS90725-3	EA		16	*	*	*	*	*	5	34	
60		0	5305-060-6481	SCREW, MACHINE: BRACKET MTG B	96906 MS24583-40	EA		4	*	*	*	*	*	5	58	
70		0	5305-151-3449	SCREW, MACHINE: CABINET, AIR INLET AND ACCESS DOORS MTG	88044 AN5626-1024R6	EA		18	*	*	*	*	*	20	1	
70A		0		SCREW, MACHINE: SKID TOP COVER	88044 AN5626-1024R6	EA		3	*	*	*	*	*	15	8	
71	F	0	5305-151-3449	SCREW, MACHINE: SUPPORT BRACKET AND BULKHEAD MTG	88044 AN5626-102TR6	EA		7	*	*	*	*	*	5	6	
72		0	5305-151-3449	SCREW, MACHINE: TOP CABINET B	88044 AN5626-1024R6	EA		11	*	*	*	*	*	5	1	
73	X2	0	4520-653-3031	STOP, SUPPORT: LEFT HAND B	90598 TC592	EA		1	*	*	*	*	*	5	14	
74	X2	0	4520-653-3032	STOP, SUPPORT: RIGHT HAND B	90598 TC591	EA		1	*	*	*	*	*	5	4	
75	X2	0		SHIELD, CAPILLARY	90598 TA3300	EA		1	*	*	*	*	*	5	45	
76	X2	0		STRIKE, LATCH: CABINET TOP	90598 TR3347-1	EA		2	*	*	*	*	*	20	10	
77	X2	0		SUPPORT, DOOR: RIGHT HAND B	90598 TCA462	EA		1	*	*	*	*	*	5	5	
78	X2	0	4520-024-7395	SUPPORT: TOP B	90598 TCA463	EA		1	*	*	*	*	*	5	10	
79	X2	0	4520-024-7396	WASHER, LOCK: BRACKET MTG B	96906 MS35333-41	EA		4	*	*	*	*	*	15	17	
80		0	5310-167-0721	WASHER, LOCK: BRACKET MTG B	96906 MS35333-38	EA		2	*	*	*	*	*	5	59	
81		0	5310-013-1052	WASHER, LOCK: HINGE SUPPORT BRACKET B	96906 MS35333-40	EA		3	*	*	*	*	*	5	33	
82		0	5310-550-1130	WASHER, LOCK: SIDE PANEL MTG	96906 MS35333-40	EA		16	*	*	*	*	*	5	33	
83		0	5310-550-1130	WASHER, LOCK: SIDE PANEL MTG	96906 MS35333-40	EA		16	*	*	*	*	*	5	33	
84		0	5310-576-5752	WASHER, LOCK: SUPPORT BRACKET AND BULKHEAD MTG	96906 MS35333-39	EA		7	*	*	*	*	*	5	7	
85		0	5310-576-5752	WASHER, LOCK: TOP CABINET MTG	96906 MS35333-39	EA		14	*	*	*	*	*	20	7	
86		0		WASHER, NONMETALLIC: SUPPORT MTG B	90598 TC615	EA		2	*	*	*	*	*	5	13	
87				1808 - STORAGE RACKS STRAPS												
88	X2	0		BASKET, DUCT	11764 TRI50	EA		1						6	1	
89	X2	0	5306-876-7442	BOLT, U; BASKET MTG	11764 TRI52	EA		4						6	2	
90	X2	0	5340-584-2115	BUTTON, PLUG: DUCT HOLDER	61864 MS51248	EA		5						6	20	
91	X2	0		HANDLE, HORIZONTAL	11764 TR281	EA		1						6	3	
92	X2	0		HANDLE SIDE, L. H.	11764 TR280-2	EA		1						6	21	
93	X2	0		HANDLE, SIDE, R. H.	11764 TR280-1	EA		1						6	6	
94	X2	0		HOLDER, DUCT	11764 TRI01	EA		3						6	14	
95	X2	0		NUT, PLAIN, HEXAGON: BASKET MTG	90598 T0360	EA		4						6	4	
96	X2	0	5310-088-1251	NUT, SELF-LOCKING HEXAGON: DUCT HOLDER AND HANDLE	96906 MS51922-1	EA		5						6	8	
97	X2	0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: DUCT HOLDER AND HANDLE MTG	96906 MS51922-1	EA		5						6	7	
98	X2	0	5301-071-2238	SCREW, CAP, HEXAGON HEAD: DUCT HOLDER AND HANDLE MTG	96906 MS90725-13	EA		5						6	10	

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE			(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW.			(8) 1-YR. ALW. PLANNING	(9) DEPOT MAINT ALW. PER. 100 EQUIP.	(10) ALLUS-TRATION	
	(a) SOURCE	(b) MAINT	(c) RECOV.						(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG. NO.	(b) ITEM NO.
0199	X2	0			SHIELD, SNOW	EA	1	1						6	19
0200	X2	0			STRAP, TIE DOWN	EA	4	4						6	15
0201	X2	0		5310-809-8446	WASHER, FLAT: BASKET MTG	EA	4	4						6	5
0202	X2	0		5310-809-4058	WASHER, FLAT: DUCT HOLDER AND HANDLE MOUNTING	EA	5	5						6	9
0203					GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS										
0203A					2202 - ACCESSORY ITEM:										
0204	P	0		4520-675-5331	ADAPTER	EA	1	1	*	*	*	4	8	7	3
0205	P	0		4720-930-5974	HOSE ASSEMBLY, AIR DUCT	EA	2	2	*	*	*	8	16	7	2
0206	P	0		4720-930-5973	HOSE ASSEMBLY, AIR DUCT	EA	3	3	*	*	*	12	24	7	1
0207					GROUP 2210 - DATA PLATES AND INSTRUCTION HOLDERS										
0208	X2	0			PLATE, IDENTIFICATION: TRAILER B	EA	1	1							
0209	X2	0			PLATE, IDENTIFICATION B	EA	1	1							
0210	X2	0			PLATE, IDENTIFICATION B	EA	1	1							
0211	X2	0			PLATE, IDENTIFICATION A	EA	1	1							
0212	X2	0			PLATE, IDENTIFICATION A	EA	1	1							
0213	X2	0			PLATE, INSTRUCTION A	EA	1	1							
0214	X2	0			PLATE, IDENTIFICATION A	EA	1	1							
0215	X2	0			PLATE, INSTRUCTION B	EA	1	1							
0216	X2	0			PLATE, INSTRUCTION B	EA	1	1							
0217	X2	0			PLATE, INSTRUCTION: CAUTION A	EA	1	1							
0218	X2	0			PLATE, INSTRUCTION: WARNING A	EA	1	1							
0219	X2	0			PLATE, INSTRUCTION	EA	1	1							
0220	X2	0			PLATE, IDENTIFICATION	EA	1	1							
0221	X2	0			PLATE, INSTRUCTION	EA	1	1							
0222	X2	0			PLATE, INSTRUCTION	EA	1	1							
0223	X2	0			PLATE, INSTRUCTION: AIR INLET DOOR	EA	1	1							
0224	X2	0			PLATE, INSTRUCTION: AIR OUTLET COVER	EA	1	1							
0225	X2	0			PLATE, INSTRUCTION: CAUTION AIR INLET	EA	1	1							
0226	X2	0			RIVET, BLIND	EA	12	12							
0227	X2	0			RIVET, BLIND	EA	25	25							
0228					GROUP 40 - ELECTRIC MOTORS										
0228A					4000 - ELECTRIC MOTOR										
0229		0		5306-225-8499	BOLT, MACHINE: MOTOR MTG	EA	4	4	*	*	*	*	*	8	4
0230	X2	0			BRACKET, MOTOR	EA	1	1	*	*	*	*	*	8	6
0231	P	0	R	5105-010-0267	MOTOR ASSEMBLY	EA	1	1	*	*	*	*	*		

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE			(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT	(6) QTY INC IN UNIT			(7) 30-DAY DS-GS MAINT. ALW.	(8) 1-YR. ALW. PER. CTYCY. PLANNING	(9) 100 EQUIP. ALW. PER. 100 EQUIP.	(10) ILLUSTRATION	
	(a) SOURCE	(b) MAINT.	(c) RECOV.					(a) 1-20	(b) 21-50	(c) 51-100				(a) FIG. NO.	(b) ITEM OR NO.
0232	P	O	R	6105-934-7879	MOTOR, ELECTRIC	EA		1	*	*	*	4	8	8	1
0233		O		5310-012-0361	NUT, PLAIN, HEXAGON: PLUG MTG	EA		2	*	*	*	*	*	8	10
0234	X2	O		5310-957-7127	NUT, SELF-LOCKING, HEXAGON: MOTOR MTG	EA		4	*	*	*	*	*	8	11
0235	X2	O			PLUG, DUST: FUEL LINE	EA		1	*	*	*	*	*	8	12
0236	X2	O		5305-151-3449	PLUG, ENGINE EXHAUST	EA		1	*	*	*	*	*	8	8
0237		O		5310-087-7493	SCREW, MACHINE: PLUG MTG	EA		2	*	*	*	*	*	8	7
0238		O		5310-576-5752	WASHER, FLAT: MOTOR MTG	EA		8	*	*	*	*	*	8	5
0239		O			WASHER, LOCK: PLUG MTG	EA		2	*	*	*	*	*	8	9
0240					GROUP 4001 - ROTOR ASSEMBLIES										
0241	X2	F			ARMATURE	EA		1						9	5
0242	X2	F			KEY, MACHINE: ARMATURE SHAFT	EA		1						9	6
0243					GROUP 4002 - STATOR ASSEMBLIES										
0244	X2	H			HOUSING, WITH STATOR	EA		1						9	7
0245					GROUP 4005 FRAME SUPPORT AND HOUSING										
0246	X2	F		2940-529-2738	BEARING, BALL, ANNULAR: ARMATURE	EA		2						9	4
0247	X2	F			BOLT, MACHINE: END BELL	EA		4						9	3
0248	X2	F			END BELL	EA		1						9	19
0249	X2	F			END BELL	EA		1						9	1
0250	X2	F			PLUG, CAP	EA		1						9	2
0251	X2	F		6105-949-1819	SPRING, WAVY: BEARING	EA		1						9	20
0252					4007 DRIVE COMPONENTS										
0253	X2	O			BUSHING, TAPER	EA		1						8	2
0254	X2	O			COUPLING, DRIVE	EA		1						8	3
0255					4012 SWITCHES										
0256	X2	O			BOOT	EA		1						9	15
0257	X2	O			CABLE, ELECTRIC	EA		1						9	18
0258	X2	O			CONNECTOR, ELECTRICAL	EA		1						9	17
0259	X2	O			COVER, JUNCTION BOX	EA		1						9	14
0260	X2	O		5330-020-4156	GASKET	EA		1						9	8
0261	X2	O		5330-735-7641	GASKET: COVER	EA		1						9	12
0262	X2	O		5330-061-4203	GASKET: JUNCTION BOX	EA		1						9	10
0263	X2	O			JUNCTION BOX	EA		1						9	11
0264	X2	O		5305-011-0488	SCREW, MACHINE: COVER MTG	EA		2			*	*	*	9	16
0265	X2	O			SPACER, JUNCTION BOX	EA		1						9	9
0266	X2	O			SWITCH, TOGGLE	EA		1						9	13

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE		(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS.GS MAINT. ALW.			(8) 1-YR. ALW. PLANNING 100 EQUIP. P.	(9) DEPOT MAINT. 100 EQUIP. P.	(10) ILLUSTRATION	
	(a) SOURCE	(b) MAIN			(c) RECV	(a) 1-20			(b) 21-50	(c) 51-100	(a) FIG. NO.			(b) SYM. NO.	
0267				GROUP 47 - GAGES (NON-ELECTRICAL)											
0267A				4702 - GAGES, MOUNTINGS, LINES AND FITTINGS											
0268	P	0	6680-947-8458	GAGE, FUEL	EA		1	*		*	2	5	10	4	15
0269	X2	0		GASKET: FUEL GAGE	EA		1							9	15
0270				4703 - HOURMETER											
0271		0		METER, TIME TOTALIZE											
0272		0	5310-012-0361	(METER IS NOT TO BE REPLACED) NUT, PLAIN, HEXAGON: REPAIR REPLACEMENT OF HOURMETER AND RELATED COMPONENTS IS NOT AUTHORIZED	EA		1								
0273	X2	0	5330-920-2323	PIN, ROLLER: PULLEY MTG	EA		4	*		*	*	*	*	13	11
0274	X2	0	5315-754-1857	PULLEY: METER DRIVE	EA		1	*		*	*	*	*	13	7
0275	X2	0	5305-984-6214	SCREW, MACHINE: METER ATTACHING	EA		1	*		*	*	*	*	13	6
0276	0	0	5310-285-7036	WASHER, LOCK: METER ATTACHING	EA		4	*		*	*	*	*	13	5
0276A	0	0			EA		4	*		*	*	*	*	13	10
0277				GROUP 60 - HEATING UNITS, BURNERS											
0277A				6004 - FUEL SYSTEM											
0278		0	4730-424-5871	ADAPTER, STRAIGHT, PIPE TO TUBE: LINE	EA		2	*		*	*	*	*	2	28
0279		0	4730-540-2612	TO TANK ADAPTER, STRAIGHT, PIPE TO TUBE:	EA		2	*		*	*	*	*	2	46
0280		0	4730-301-7470	TUBE TO FUEL PUMP AND CONTROL BLOCK ADAPTER, STRAIGHT, PIPE TO TUBE: TUBE	EA		1	*		*	*	*	*	2	39
0281	P	0	3030-756-8395	TO TEE BELT, U: FUEL PUMP, FAN AND MAGNETO	EA		1	*		*	*	*	*	16	26
0282	X2	F		DRIVE BLOCK, CONTROL	EA		1	*		*	*	*	*	10	7
0283	X2	F	4730-338-6630	BOLT, FLUID PASSAGE: CONTROL VALVE BLOCK	EA		2	*		*	*	*	*	10	9
0284	X2	0	4730-196-0930	BUSHING, PIPE: TEE MTG	EA		1	*		*	*	*	*	2	38
0285	X2	0		CLAMP, CABLE, TIE	EA		1	*		*	*	*	*	2	50
0286	X2	0		CLAMP, LOOP: FUEL LINES	EA		2	*		*	*	*	*	2	35
0287	P	0		COUPLING, HALF, QUICK DISCONNECT: FUEL	EA		1	*		*	*	*	*	8	54
0288		0	4730-288-8258	LINE COUPLING, TUBE: TUBE TO FUEL PUMP	EA		1	*		*	*	*	*	2	52
0289		0	4730-277-8265	ELBOW, PIPE TO TUBE: CONTROL VALVE	EA		1	*		*	*	*	*	2	21
0290	X2	0	4730-391-3777	ELBOW, PIPE TO TUBE: TUBE ASSEMBLY	EA		1	*		*	*	*	*	2	21
0291		0	4730-864-9505	TO BLOCK ELBOW, PIPE TO TUBE: TUBE TO FUEL PUMP	EA		2	*		*	*	*	*	2	24
0292		0	4730-278-4519	ELBOW, PIPE TO TUBE: FILTER TO PUMP B	EA		2	*		*	*	*	*	2	20
0293	X2	0		ELBOW, PIPE TO TUBE: HOSE TO FUEL FILTER B	EA		1	*		*	*	*	*	2	48
0294		0	4730-277-8265	ELBOW, PIPE TO TUBE: TEE TO TANK B	EA		3	*		*	*	*	*	2	41

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) QTY INC IN UNIT		(5) QTY INC IN UNIT	(7) 30 DAY DS. GS MAINT. ALW.			(8) 1-YR. ALW. PER PLANNING CTYGCY. 100 EQUIP.	(9) DEPT MAINT. ALW. PER 100 EQUIP.	(10) ILLUS. TRATION	
					(a) SOURCE	(b) MAINT.		(c) RECOV.	(a) 1-20	(b) 21-50			(c) 51-100	(a) FIG. NO.
	MANUFACTURER'S	PART NUMBER												
0295	X2	O	2910-922-8107	FILTER, FUEL A	EA	1		*	*	*	*	*	12	4
0296	P	O	4520-836-8164	FILTER, FUEL B	EA	1		*	*	*	*	*	2	56
0297	X2	O	4520-836-8165	BOWL, METAL, FILTER B	EA	1		*	*	*	*	*	19	6
0298	P	O	4520-836-8165	ELEMENT, FILTER B	EA	1		*	2	2	2	25	19	4
0299	P	O	4520-838-5421	GASKET, FILTER B	EA	1		2	2	4	50	25	19	1
0300	P	O	4520-838-5419	GASKET, FILTER B	EA	1		2	2	4	50	25	19	3
0301	X1	O		SPRING, ELEMENT B	EA	1							19	5
0302	P	O	2910-712-9386	STRAINER, ELEMENT B	EA	1		*	2	2	12	25	19	2
0303	X2	O		GASKET: ELBOW AND ADAPTER B	EA	1							2	29
0304	X2	F	5325-295-9366	GROMMET, RUBBER	EA	1								
0305	X2	O	5325-184-9886	GROMMET, RUBBER: FUEL HOSE TO BULKHEAD	EA	3					5		2	53
0306	P	O	4720-595-3515	HOSE ASSEMBLY: ELBOW TO COUPLING	EA	1		*	*	*			2	43
0307	X2	O	4720-595-7014	HOSE ASSEMBLY: FILTER TO PUMP A	EA	1							12	5
0308	X2	O	4720-836-8167	HOSE ASSEMBLY: FILTER TO TANK B	EA	1		*	*	*	*	*	2	40
0309	P	O	4720-836-8168	HOSE ASSEMBLY: PUMP TO NOZZLE B	EA	1		*	*	*	*	*	2	49
0310	P	O	4720-836-8166	HOSE ASSEMBLY: NOZZLE TO CHECK VALVE B	EA	1		*	*	*	*	*	2	25
0311	X2	O	4730-249-9721	NIPPLE PIPE: TUBE TO CHECK VALVE	EA	1		*	*	*	*	*	2	22
0312	X2	O		MUT, SELF LOCKING HEXAGON: CLAMP MTG	EA	2		*	2	2	20		2	36
0313	P	F	5330-733-2208	PACKING, PREFORMED: BOLT TO VALVE BLOCK	EA	2							10	8
0314	P	F	5330-288-3850	PACKING, PREFORMED: CONTROL VALVE TO BLOCK	EA	2		*	2	2	20		10	2
0315	X2	F		PLUG, PIPE: CONTROL VALVE TO BLOCK	EA	2		*	2	2	20		10	1
0316	X2	O		PULLEY, GROOVE: FUEL PUMP	EA	1							10	1
0317	P	O	4520-946-0180	PUMP, FUEL	EA	1		*					2	30
0318	P	F	3110-293-9173	BEARING, BALL, ANNULAR: PUMP SHAFT	EA	1		*	2	2	20		2	55
0319	X1	F		BODY, PUMP	EA	1		*	*	*	8		11	17
0320	X2	F	4320-699-8755	COVER	EA	1							11	7
0321	X2	F	2805-391-3931	FACE, SEAL	EA	1		*	*	*	*	*	11	12
0322	P	F	2910-472-6189	GASKET: ACORN MUT	EA	1		*	2	2	*	*	11	32
0323	P	O	2540-563-5423	GASKET: COVER	EA	1		*	2	2	20	*	11	28
0324	P	F	5330-718-6547	GASKET: PORT HOUSING	EA	1		*	2	2	20		11	35
0325	X1	F		HOUSING, PORT	EA	1		*	*	*			11	34
0326	X1	F		KEY, DRIVE	EA	1		*	*	*			11	23
0327	X2	F	5310-690-8270	MUT, ACORN: ADJUSTING SCREW	EA	1		*			20		11	31
0328	P	F	5330-291-4835	PACKING, PREFORMED	EA	1		*	2	2	20		11	22
0329	P	F	5330-579-8108	PACKING, PREFORMED: BEARING RETAINER	EA	1		*					11	18
0330	X2	F		PIN	EA	2					20		11	24
0331	X2	F	5315-019-3262	PIN, GROOVED, HEADLESS: BEARING RETAINER	EA	2					20		11	16
0332	X2	F	4530-629-5114	PISTON, ASSEMBLY FUEL OIL	EA	1							11	5
0333	X2	F		PLATE, END	EA	1							11	25
0334	X2	F	5305-472-6234	PLUG, END	EA	1							11	1
0335	X2	F		PLUG, END	EA	1							11	21
0336	X2	F	4730-384-0358	PLUG, PIPE: BODY	EA	1							11	6
0337	X2	F	2910-347-5608	RETAINER, BEARING	EA	1							11	13
0338	X2	F		RETAINER, SLEEVE	EA	1							11	20
0339	X2	F	4520-976-2253	SCREW: ADJUSTING	EA	1							11	33


LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS-GS MAINT. ALW.			(8) 1-YR. ALW. PER 100 EQUIP. CTYGY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION	
	(a) SOURCE	(b) MAINT						(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG. NO.	(b) ITEM NO.
0340														
0341	X2	F	5305-018-0023	SCREW, CAP HEXAGON HEAD: COVER MTG	EA		8	*	*	*	*	*	11	30
0342	X2	F	5305-375-1706	SCREW, MACHINE: BEARING RETAINER	EA		3						11	14
0343	P	F	5305-887-1240	MTG, No. 10-32 THD SIZE, 1/2 IN. LG	EA		5						11	27
0344	X1	F	5305-291-4044	SCREW, MACHINE: END PLATE MTG	EA		1	*	*	2	8			
0345	X1	F	5305-598-8000	SEAL: PUMP SHAFT	EA		1						11	11
0346	X1	F		PACKING, PREFORMED: SEAL	EA		1						11	9
0347	X2	F	4320-472-6227	SPRING, SEAL	EA		1						11	10
0348	X2	F		WASHER	EA		1						11	3
0349	X2	F		SEAT, SPRING	EA		1						11	19
0350	X2	F		SHAFT, PUMP	EA		1						11	1
0351	P	F	5340-197-5883	SLEEVE, PISTON	EA		1						11	15
0352	X2	F	2340-360-1056	SPRING, HELICAL	EA		1	*	*	2	20		11	4
0353	P	F	5330-527-7560	STRAINER	EA		1	*	*	2	20		11	2
0354	P	F	4730-640-6330	WASHER, LOCK: RETAINER MTG	EA		3	*	*	*	8		2	51
0355	F	F	5305-225-3029	WASHER, PIPE: ELBOW TO FILTER B	EA		2	*	*	*	*	*	2	32
0356	O	O	5305-836-1395	SCREW, CAP HEXAGON HEAD: CONTROL BLOCK MOUNTING	EA		2	*	*	*	*	*	2	14
0357	O	O	5305-780-4701	SCREW, MACHINE: CLAMP MTG	EA		2	*	*	*	*	*	2	34
0358	X2	O		SETSCREW: PULLEY MTG	EA		2	*	*	*	*	*	2	31
0359	X2	O	5340-901-7235	STRAP, LINE SUPPORT B	EA		2						2	37
0360	X2	O	4730-595-0251	TEE, PIPE TO TUBE: LINE TO ADAPTER	EA		1						2	26
0361	X2	F		TUBE ASSEMBLY	EA		1						2	27
0362	X2	F		TUBE ASSEMBLY: BLOCK TO TANK	EA		1						2	47
0363	X2	O		TUBE ASSEMBLY: FUEL PUMP TO COUPLING	EA		1						2	42
0364	X2	O		TUBE ASSEMBLY: PUMP TO TANK	EA		1						12	6
0365	X2	F		TUBE ASSEMBLY: NOZZLE BY-PASS TO CHECK VALVE A	EA		1						12	15
0366	X2	O		TUBE ASSEMBLY: PUMP TO CASING A	EA		1						18	15
0367	X2	O		TUBE DRAIN: HEAT EXCHANGER	EA		1						2	23
0368	P	F	4520-678-0108	VALVE, CHECK	EA		1	*	*	2	12		10	3
0369	P	F	4530-916-1875	VALVE, FUEL, HEATER	EA		1	*	*	2	*	*	2	45
0370	O	O	5310-809-5998	WASHER, FLAT: FUEL PUMP MTG	EA		2	*	*	*	*	*	2	2
0371	F	F	5310-550-1130	WASHER, LOCK: CONTROL BLOCK MTG	EA		2	*	*	*	*	*		
0372				GROUP 6005 - BURNER ASSEMBLY										
0373	P	O	4520-653-4276	CABLE ASSEMBLY, IGNITION	EA		1	*	*	2	8	16	13	1
0374	X2	O	5325-276-6091	GROMMET, RUBBER: IGNITION CABLE	EA		1	*	*	*	*	*	13	2
0375	P	O	4520-346-7333	HOLDER, COMBUSTOR: NOZZLE B	EA		1	*	*	*	*	*	12	33
0376	X2	O	4520-916-1873	HOLDER, NOZZLE A	EA		1	*	*	*	*	*	13	15
0377	P	O	2920-948-7399	MAGNETO	EA		1	*	*	*	4	8	13	15
0378	P	F	3110-144-6508	BEARING, BALL, ANNULAR	EA		1	*	*	*	8	16	14	34
0379	P	F	2920-488-7543	BEARING, SLEEVE	EA		1	*	*	2	8	16	14	28

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE			(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S		(4) UNIT OF ISSUE	(5) QTY. IN UNIT	(7) 30-DAY DS/GS MAINT. ALW.				(8) 1-YR. ALW. PLANNING	(9) DEPT. MAINT. ALW. PER 100 EQUIP.	(10) ILLUS-TRATION
	(a)	(b)				(c)	CODE			PART NUMBER	(a)	(b)	(c)			
		MAIN	RECOV.													
80	X1	O		2920-354-0751	CABLE OUTLET	21387	Y247AX	EA	1						14	29
81	P	O		5910-520-6711	CAMWICK HOLDER	21387	H2788	EA	1						14	11
82	P	O		5340-598-2895	CAPACITOR, FIXED	21387	A0R2N33	EA	1						14	22
83	X2	F		5340-598-2895	CLIP, RETAINING: SEAL	21387	B14980	EA	1						14	24
84	X2	O		2920-349-3887	COIL, MAGNETO	21387	T247C	EA	1						14	25
85	X2	O		2920-656-7340	CONTACT, ELECTRIC	21387	K2573	EA	1						14	31
86	P	O		2920-142-0888	CONTACT SET, DISTRIBUTOR	21387	A2437AX	EA	1						14	3
87	X1	O		2920-708-0640	END CAP, MAGNETO	21387	PX2430A	EA	1						14	17
88	P	O		2920-510-1298	GASKET: END CAP	21387	K2498	EA	1						14	33
89	X1	O		2920-366-7153	HOOD	21387	A1232	EA	1						14	35
90	X1	O		5315-358-7578	HOUSING	21387	NT2425	EA	1						14	17
91	X2	F		5340-143-5280	PIN, LOCK: RING RETAINING	82796	C1498G	EA	1						14	33
92	X2	F		5340-143-5280	RING, RETAINING: OIL SEAL	21387	B14988	EA	1						14	30
93	X1			2920-366-7165	ROTOR, MAGNETIC	21387	VZ2480	EA	1						14	35
94	X1			5305-281-6387	SCREEN, VENT	21387	A6032A	EA	2						14	28
95	X1			5305-281-6387	SCREW, ASSEMBLED WASHER: END CAP MTG	21387	105100	EA	4						14	1
96	X1				SCREW, MACHINE: CAMWICK HOLDER MTG	88044	AN515-8-6	EA	1						14	8
97	X1				SCREW, MACHINE: CAPACITOR LEAD	88044	AN530-6-6	EA	1						14	14
98	X1			5305-206-0513	SCREW, MACHINE: CAPACITOR MTG	88044	AN515-6-5	EA	1						14	5
99	X1			5305-638-5684	SCREW, MACHINE: CONTACT SET MTG	88044	AN515-6-6	EA	1						14	12
00	X1			5305-095-3935	SCREW, MACHINE: HOOD	21387	6564N	EA	1						14	16
01	X1			5305-013-3482	SCREW, MACHINE: SUPPORT MTG	21387	8566	EA	1						14	32
02	X1			2920-356-1221	SEAL, OIL: BEARING	21387	A6304	EA	1						14	26
03	P			5305-707-4008	SEAL, PLAIN ENCASED:	21387	G3661	EA	1						14	20
04	X1	F			SETScrew	21387	315314A	EA	2	*	2	2			14	20
05	X1				SUPPORT, BEARING	21387	PY4631	EA	1						14	23
06	X1			5310-167-0816	WASHER, FLAT: CAMWICK HOLDER MTG	88044	AN960-8	EA	1						14	15
07	X1			5310-205-7961	WASHER, FLAT: CONTACT SET MTG	88044	AN960-6	EA	1						14	10
08	X1			5310-167-0661	WASHER, FLAT: SEAL	21387	A2492C	EA	1						14	13
09	X1			5310-616-8575	WASHER, LOCK: CAMWICK HOLDER MTG	88044	AN935-8	EA	1						14	21
10	X1				WASHER, LOCK: CAPACITOR AND CONTACT SET MTG	88044	AN935-6	EA	1						14	9
11	X1				WASHER, LOCK: END CAP MTG	88044	AN935-6	EA	1						14	6
12	X1				WASHER, PACKING	21387	A2492A	EA	1						14	2
13				5310-095-3933	NUT, PLAIN, HEXAGON: PULLEY MTG	96906	MS35690-602	EA	1						14	18
14	P	O		4520-012-0377	NOZZLE, VARIABLE	90598	TR774	EA	1	*		*	*		13	2
15	P	O		5330-202-3974	PACKING PREFORMED	71895	234	EA	1	2	2	2			13	8
16	P	O		4520-025-2958	STRAINER ASSEMBLY	71895	614	EA	1	2	2	2			17	10
17	P	O		2920-580-3435	PLUG, IGNITOR	11583	806	EA	1	*	*	*			16	9
18	X2	O			PLUG, PIPE: NOZZLE HOLDER	90598	T05438	EA	1	2	2	2			17	3
19	X2	O			PULLEY, MAGNETO	90598	TM3918	EA	2						17	13
20	X2	O		5305-068-0500	SCREW, CAP, HEXAGON HEAD: MAGNETO MTG	96906	MS35291-3	EA	1						13	14
21	O			5310-550-1130	WASHER, LOCK: MAGNETO MTG	96906	MS35333-40	EA	4	*	*	*			13	12
22	O			5310-999-7643	WASHER, LOCK: PULLEY MTG	96906	MS128034	EA	1	*	*	*			13	9

(1) SOURCE, MAINT. AND RECOV. CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(7) 30-DAY DS, GS MAINT. ALW.			(8) 1-YR. ALW. P 100 EQUIP. CTCYC PLANNING	(9) DEPT MAINT. ALW. PER 100 EQUIP.	(10) ILLUS- TRATION
					MANUFACTURER'S					
					(a) SOURCE	(b) CODE	(c) PART NUMBER			
P O F	2910-141-9758	6007 - FUEL TANK								
X2 F		CAP, FUEL TANK	EA	1	*	*	*	4	8	15
P O P	5330-684-7851	GASKET: FILL NECK, FUEL TANK	EA	1	*	*	*	4	8	15
X2 F	5310-601-5075	GASKET: FUEL CAP	EA	1	*	*	*	10	20	15
P O P	5330-248-3846	NUT, BARRELL: FUEL TANK MTG	EA	4	*	*	*	8	16	12
X2 O	5315-514-2660	PACKING, PREFORMED: DRAIN PLUG	EA	1	*	*	*	8	16	15
X2 O	4730-202-8306	PIN, RETAINING: FUEL CAP	EA	1	*	*	*	8	16	15
F F	5305-269-3215	PLUG, MACHINE: TANK DRAIN	EA	1	*	*	*	8	16	15
		Screw, CAP, HEXAGON HEAD: FUEL TANK MOUNTING								
X2 F		TANK, FUEL A	EA	4	*	*	*	*	*	15
X2 F		TANK, FUEL B	EA	1	*	*	*	*	*	15
F F	5310-595-7237	WASHER, LOCK: FUEL TANK MTG	EA	4	*	*	*	*	*	15
		6008 - BLOWER ASSEMBLY								
P F O	5330-941-8567	BUSHING, SLEEVE: COUPLING	EA	1	2	3	5	64	32	16
P O P	3120-915-5445	BUSHING, SLEEVE	EA	1	2	3	5	64	32	16
X2 F		COUPLING, HALF: FAN DRIVE	EA	1						27
X2 F		FAN VANE, AXIAL	EA	1						16
X2 O	4520-829-6536	GUARD ASSEMBLY	EA	3						16
F F		HUB, FAN	EA	1						16
O O F	5310-761-6882	NUT, PLAIN, HEXAGON: GUARD MTG	EA	2						28
F F F	5310-811-3494	NUT, SELF-LOCKING HEXAGON: VANE MTG	EA	6						20
F F F		RETAINER, SLEEVE: COUPLING	EA	2						16
X2 X2		RING, FAN	EA	1						16
F F F	5305-068-0500	SCREW, CAP, HEXAGON HEAD: FAN MTG	EA	3						13
F F F	5305-983-6621	SCREW, CAP, SOCKET, HEXAGON: SUPPORT MTG	EA	4						16
O O O	5305-988-1171	SCREW, MACHINE: GUARD MTG	EA	2						25
O O O	5305-988-1723	SCREW, MACHINE: GUARD MTG	EA	1						11
F F F	5305-151-0690	SCREW, MACHINE: RETAINER MTG	EA	4						16
F F F	5305-059-4568	SCREW, MACHINE: VANE MTG	EA	2						16
F F F	5315-953-1571	SHAFT, FAN	EA	2						15
P X2 F		SUPPORT, BEARING	EA	1						16
X2 F		VANE, AIR	EA	1						16
F F F	5310-809-8544	WASHER, FLAT: VANE MTG	EA	1						16
F F F	5310-550-1130	WASHER, LOCK: FAN MTG	EA	3						21
F F F	5310-550-1130	WASHER, LOCK: FAN MTG	EA	2						16
O O O	5310-011-5547	WASHER, LOCK: FAN MTG	EA	3						14
F F F	5310-579-0079	WASHER, LOCK: RETAINER MTG	EA	3						16
X2 F		WASHER, LOCK: SUPPORT MTG	EA	4						16


LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE		(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE		(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY 05/GS MAINT. ALW.			(8) 1-YR. ALW. PER. 100 EQUIP. PLANNING CTRCY.	(9) DEPOT MAINT. ALW. PER. 100 EQUIP.	(10) ILLUS-TRATION		
					RECOV.	MAINT.			(a)	(b)	(c)			(a)	(b)	
	NO.	FIG.														
0461				6010 - EXHAUST SYSTEM												
0462	X2	0		CHAIN: OUTLET COVER	EA	90598 TR3335		2					8	23	5	17
0463	X2	0		COVER, EXHAUST	EA	90598 TR3313		1					8	47	5	52
0464	P	0	2990-041-5277	EXTENSION, EXHAUST	EA	90598 TR3355		1					8	53	5	52
0465	P	0	2990-041-5276	GASKET: EXHAUST w/SCREEN	EA	90598 TRF 3095		1		*	*		12	17	18	17
0466	P	0	4520-567-1858	GASKET: EXHAUST STACK	EA	90598 TX595		1		*	*		12	48	5	48
0467	P	0	4520-567-1859	GASKET: EXHAUST STACK	EA	90598 TX592		1		*	*		*	8	5	8
0468		0	5310-012-0361	NUT, PLAIN, HEXAGON: EXHAUST FLANGE MTG	EA	96906 MS35049-102		2		*	*		*	36	5	6
0469		0	5310-012-0361	NUT, PLAIN, HEXAGON: SHIELD MTG	EA	96906 MS35049-102		2		*	*		*	36	5	6
0470	X2	0	5320-823-8757	RIVET, TUBULAR: CHAIN	EA	96906 MS2045008-8		1		*	*		*	51	5	6
0471		0	5305-151-3449	SCREW, MACHINE: EXHAUST FLANGE MTG	EA	88044 AN528-102HR6		2		*	*		*	17	17	17
0472		0	5305-281-6276	SCREW, MACHINE: EXHAUST STACK MTG	EA	88044 AN51508-12		12		*	*		*	49	5	50
0473		0	5305-151-3449	SCREW, MACHINE: SHIELD MTG	EA	88044 AN528-102HR6		1		*	*		*	7	5	7
0474	X2	0		SHIELD, EXHAUST A	EA	90598 TCF 3241		1		*	*		*	5	5	5
0475	X2	0		SHIELD, EXHAUST B	EA	90598 TCF 3267-100		1		*	*		*	17	17	17
0476	X2	0		STACK, EXHAUST	EA	90598 TR3304		1		*	*		*	46	5	50
0477		0	5310-809-8544	WASHER, FLAT: CHAIN MTG	EA	96906 MS15795-207		1		*	*		*	50	5	50
0478		0	5310-731-7538	WASHER, FLAT: EXHAUST STACK MTG	EA	90598 T03408		12		*	*		*	7	5	7
0479		0	5310-576-5752	WASHER, LOCK: EXHAUST FLANGE MTG	EA	96906 MS35333-39		2		*	*		*	5	5	5
0480		0	5310-576-5752	WASHER, LOCK: SHIELD MTG	EA	96906 MS35333-39		2		*	*		*	5	5	5
0481				6011 - COMBUSTION CHAMBER												
0482	X2	F		CLAMP, COMBUSTOR A	EA	90598 TR3270		1						1	17	12
0483	X2	F	4520-216-7259	CLAMP, COMBUSTOR B	EA	90598 T0553C		1						12	17	12
0484	P	F	5305-875-6746	SCREW, MACHINE: CLAMP MTG	EA	96906 MS24583-53		2		*	*		*	11	17	11
0485	P	F	4520-347-5638	COMBUSTOR ASSEMBLY	EA	90598 TRF 763		1		*	*		*	5	17	5
0486	X2	F	4520-349-1663	COMBUSTOR PLATE ASSEMBLY	EA	90598 TRF 762		1		*	*		*	4	17	4
0487	X2	F	4520-684-1301	GASKET: COMBUSTOR ASSEMBLY MTG	EA	90598 TRF 76A		1		*	*		*	6	17	6
0488		F	5310-059-9265	NUT, SELF-LOCKING HEXAGON: COMBUSTOR ASSEMBLY MTG	EA	72962 1803-048		16		*	*		*	8	17	8
0489		F	5310-543-2740	WASHER, LOCK: COMBUSTOR ASSEMBLY MTG	EA	96906 MS35333-74		16		*	*		*	7	17	7
0490				6013 - HEAD EXCHANGER ASSEMBLY												
0491	X2	F		ADAPTER, DUCT	EA	90598 TDF 3012		1						12	18	12
0492	X2	F	4520-213-9923	BAFFLE, HEAT CONTROL	EA	90598 TA235		1						7	18	7
0493	X2	F	5306-842-4088	BOLT, MACHINE: CASING MTG	EA	96906 MS35291-29		4		*	*		*	5	5	26
0494	X2	F		CASING: HEATER A	EA	90598 TAF 3156		1						25	5	25
0495	X2	F		CASING B	EA	90598 TAF 3166-100		1						25	5	25
0496	X2	F		CONTROL, AIR	EA	90598 TAF 3154		1						4	18	4
0497	X2	0		CONTROL, DAMPER	EA	90598 TAF 3158		1						5	18	5
0498	X2	0		HANDWHEEL: DAMPER CONTROL	EA	90598 TR3343		1						18	18	18
0499	P	F	4520-916-1874	HEAT EXCHANGER	EA	90598 TRF 3082		1		*	*		*	8	18	16

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE			(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE		(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW.			(8) 1-YR. ALW. PER 100 EQUIP. CTGY. PLANNING	(9) DEPT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION	
	(a) SOURCE	(b) MAINT	(c) RECOV.			CODE	PART NUMBER			(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG. NO.	(b) ITEM OR
0500	F			5310-012-0361	NUT, PLAIN, HEXAGON: ADAPTER AND BULB SUPPORT MTG	96906	MS35649-102	EA	4	*	*	*	*	*	18	9
0501	O			5315-839-2325	PIN, COTTER: DAMPER CONTROL PIN	96906	MS24665-132	EA	1	*	*	*	*	*	18	1
0502	F			5305-151-3449	SCREW, MACHINE: ADAPTER MTG	88044	AN5261024R6	EA	3	*	*	*	*	*	18	13
0503	F			5305-688-1462	SCREW, MACHINE: AIR CONTROL MTG	88044	AN515-10-6	EA	1	*	*	*	*	*	18	6
0504	X2				SUPPORT, BULB	90598	TAF3157	EA	1	*	*	*	*	*	18	10
0505	O			5310-087-7493	WASHER, FLAT: CASING MTG	96906	MS27183-13	EA	4	*	*	*	*	*	5	28
0506	O			5310-141-1795	WASHER, FLAT: DAMPER CONTROL	88044	AN960-416	EA	1	*	*	*	*	*	18	3
0507	F			5310-576-5752	WASHER, LOCK: ADAPTER MTG	96906	MS35333-39	EA	3	*	*	*	*	*	18	8
0508	O			5310-285-7036	WASHER, LOCK: BULB SUPPORT	96906	MS122055	EA	1	*	*	*	*	*	18	11
0509	F			5310-167-0721	WASHER, LOCK: CASING MTG	96906	MS35333-41	EA	4	*	*	*	*	*	2	27
0510	X2				WASHER, NONMETALLIC: DAMPER CONTROL	90598	TA3314-1	EA	1	*	*	*	*	*	18	4
0511	X2			5310-530-9693	WASHER, SPECIAL: CASING MTG	90598	TA218A	EA	1	*	*	*	*	*	5	29

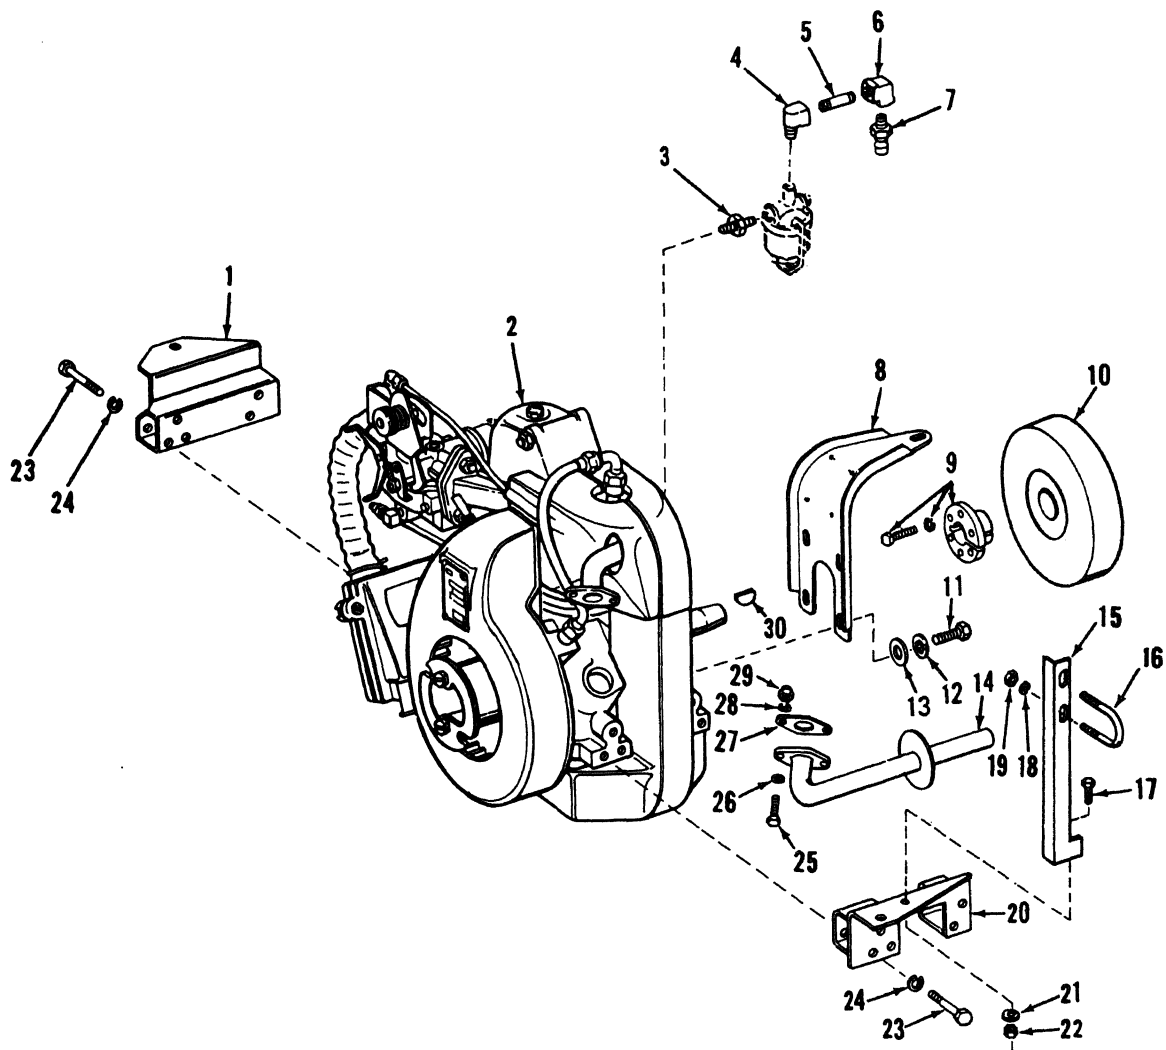


MEC 4520-208-25P/1

FIGURE 1. ENGINE DRIVE COUPLING AND EXHAUST PIPE

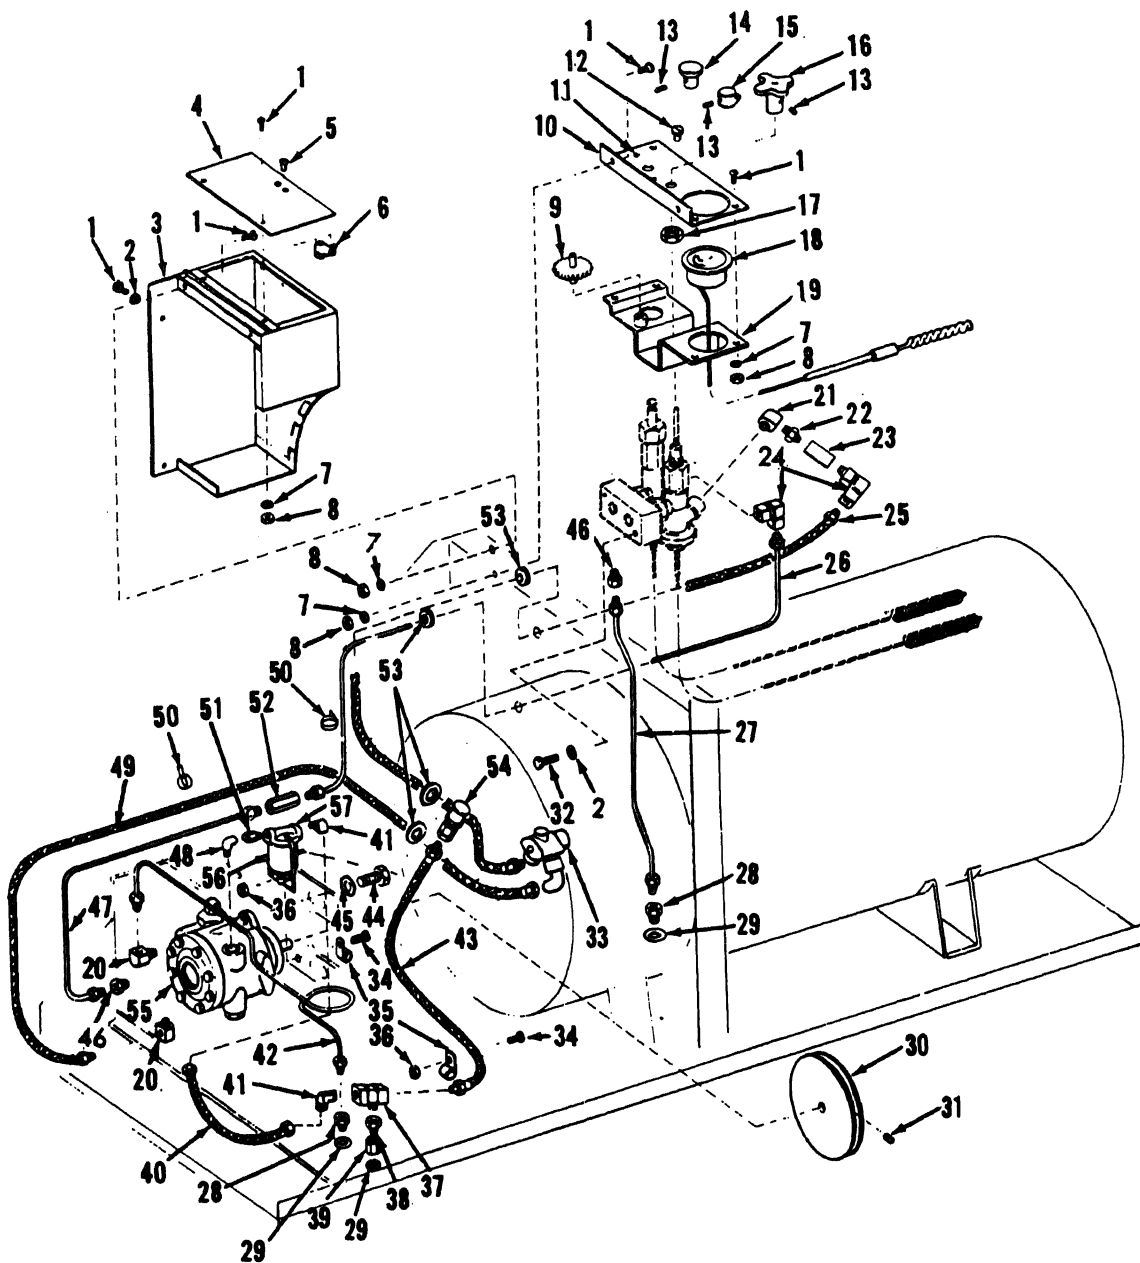


MEC 4520-208-25P/2

FIGURE 2. FUEL PUMP, LINES, FITTINGS, AND CONTROL BOX.

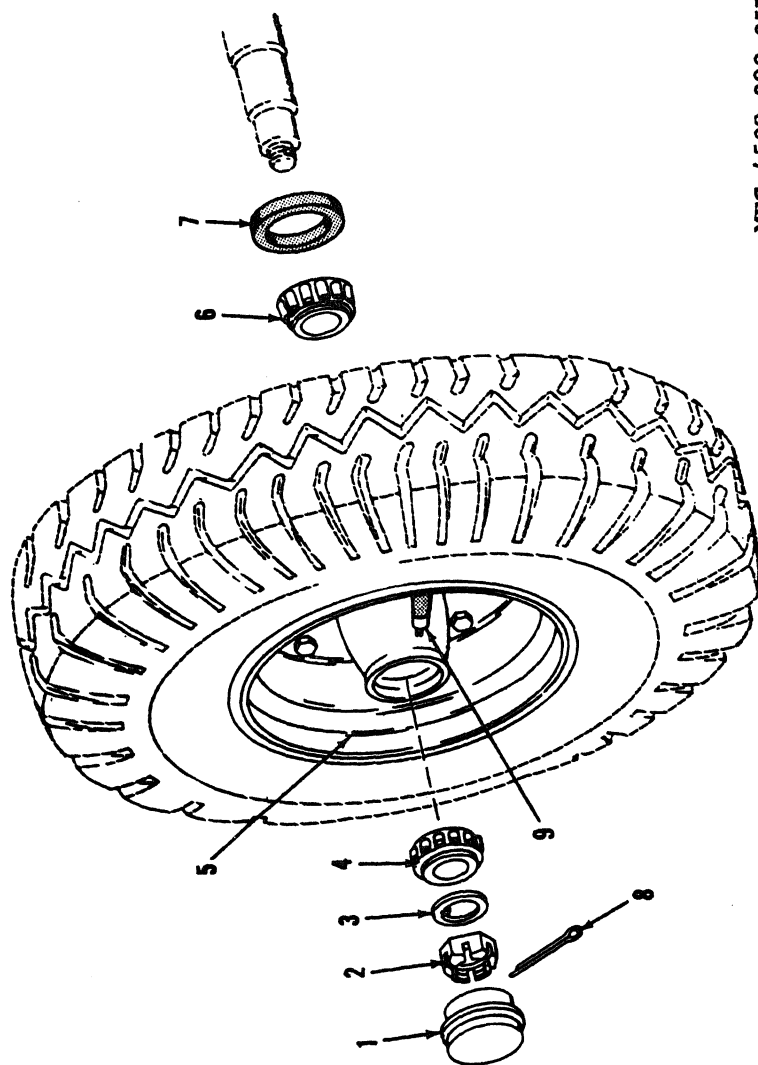


MEC 4520-208-25P/3

FIGURE 3. WHEEL AND RELATED PARTS

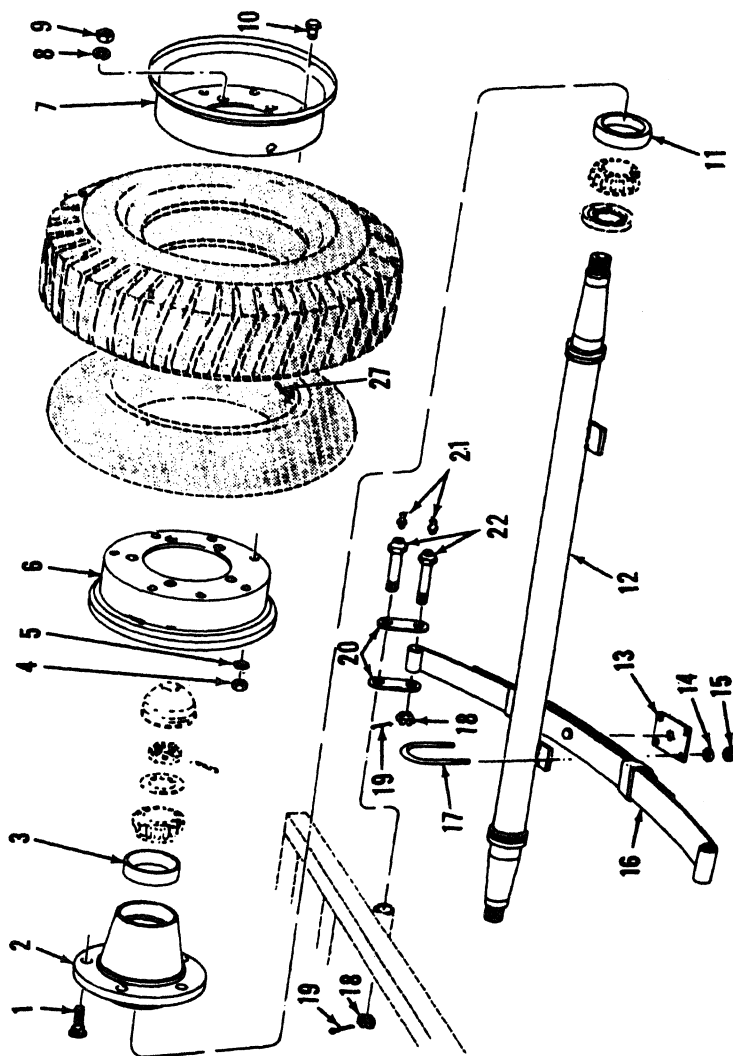


MEC 4520-208-25P/4

FIGURE 4. RIM, HUB, AXLE AND SPRING

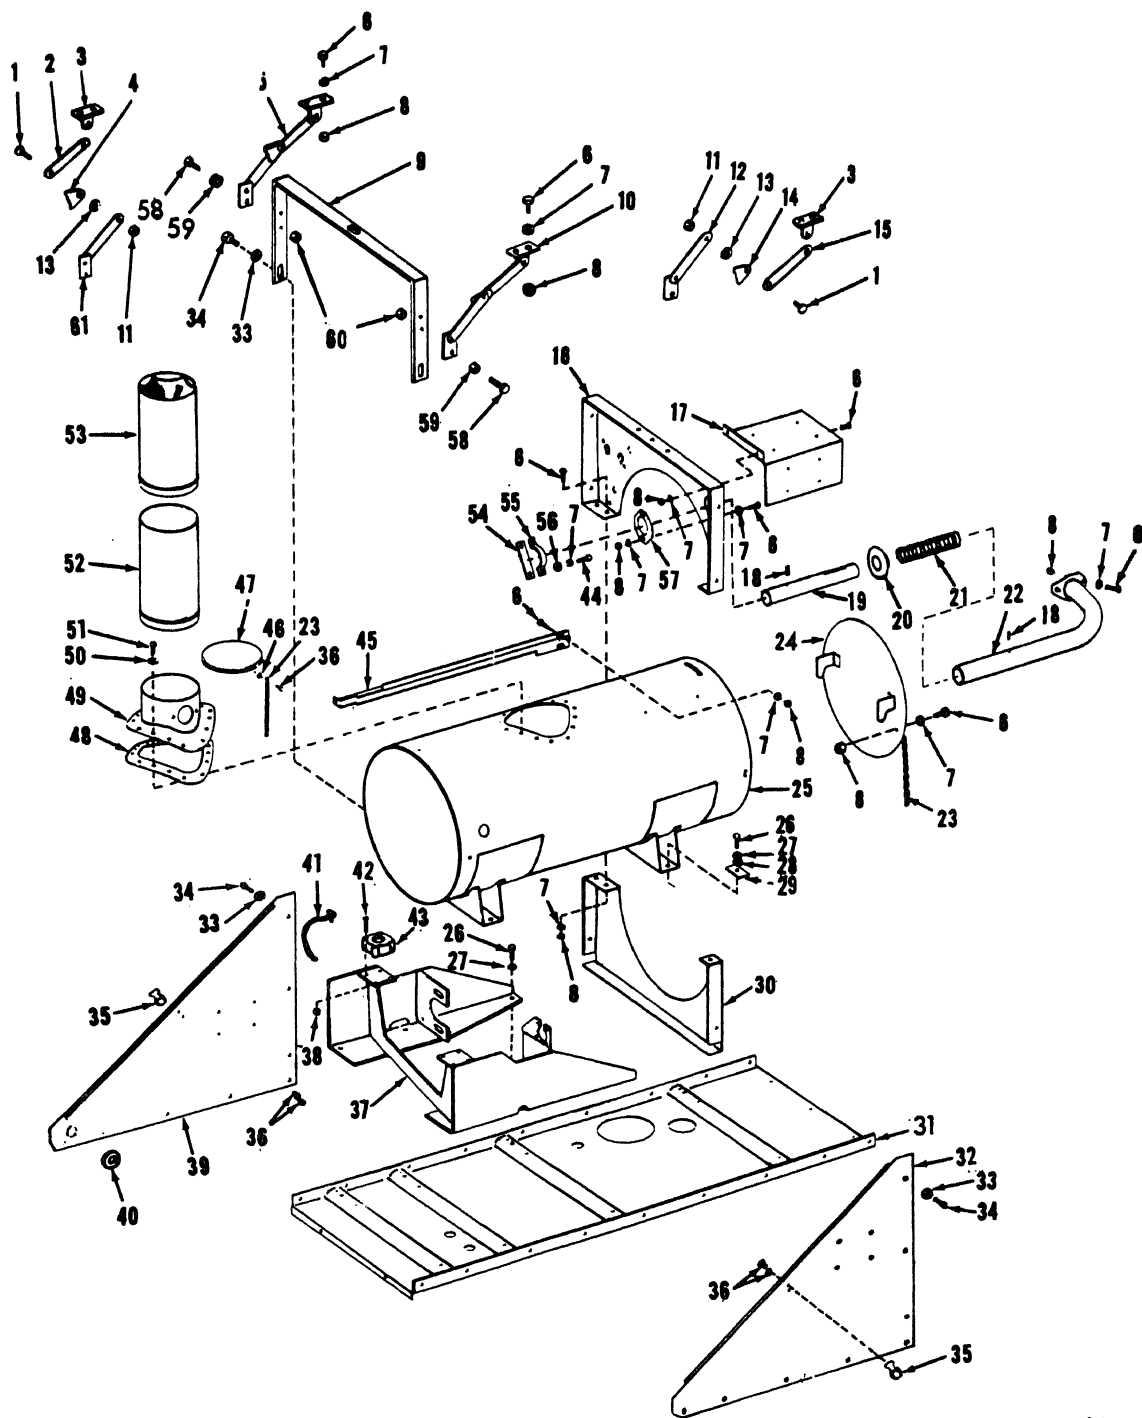


MEC 4520-208-25P/5

FIGURE 5. CASING, BULKHEAD AND SIDE PANELS

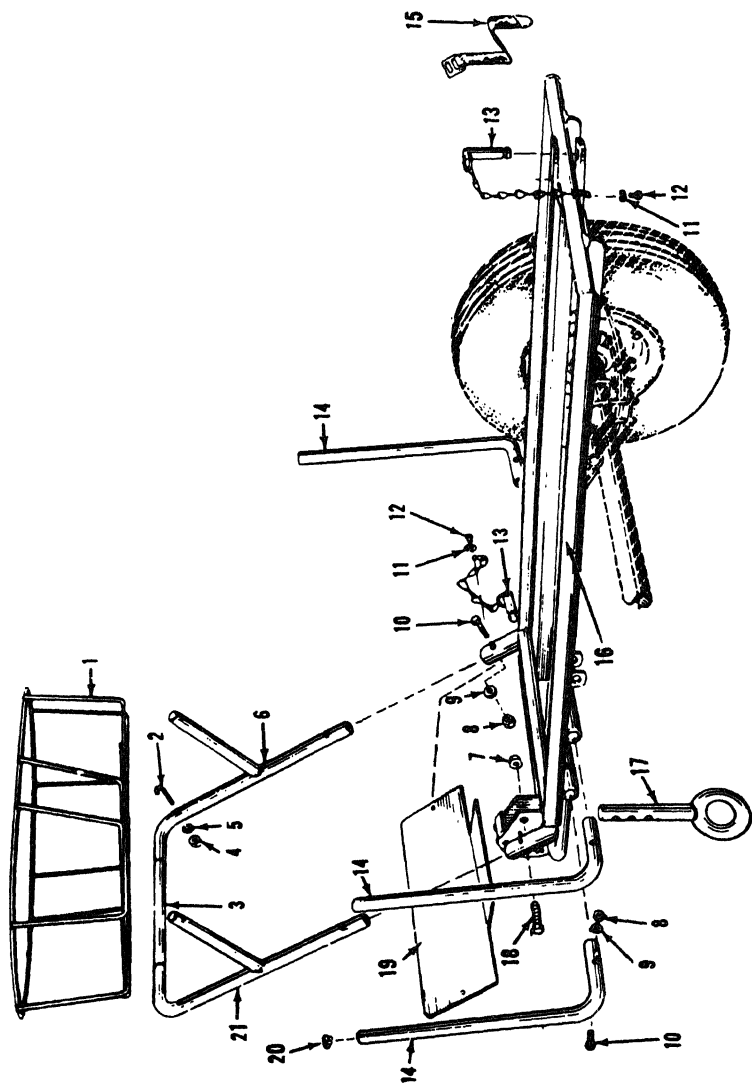


MEC 4520-208-25P/6

FIGURE 6. FRAME, DUCT HOLDERS AND TOW BAR

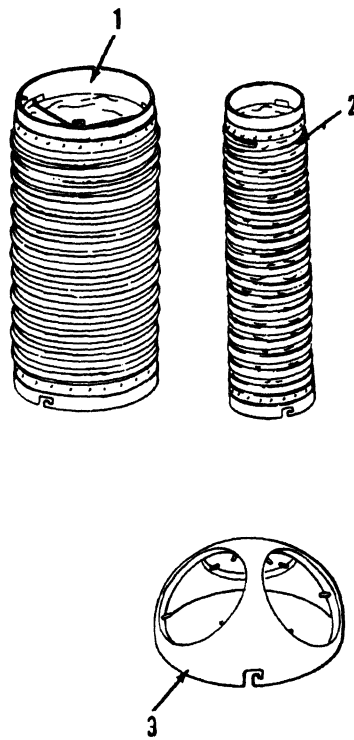

MEC 4520-208-25P/7

FIGURE 7. HOSE AND ADAPTER

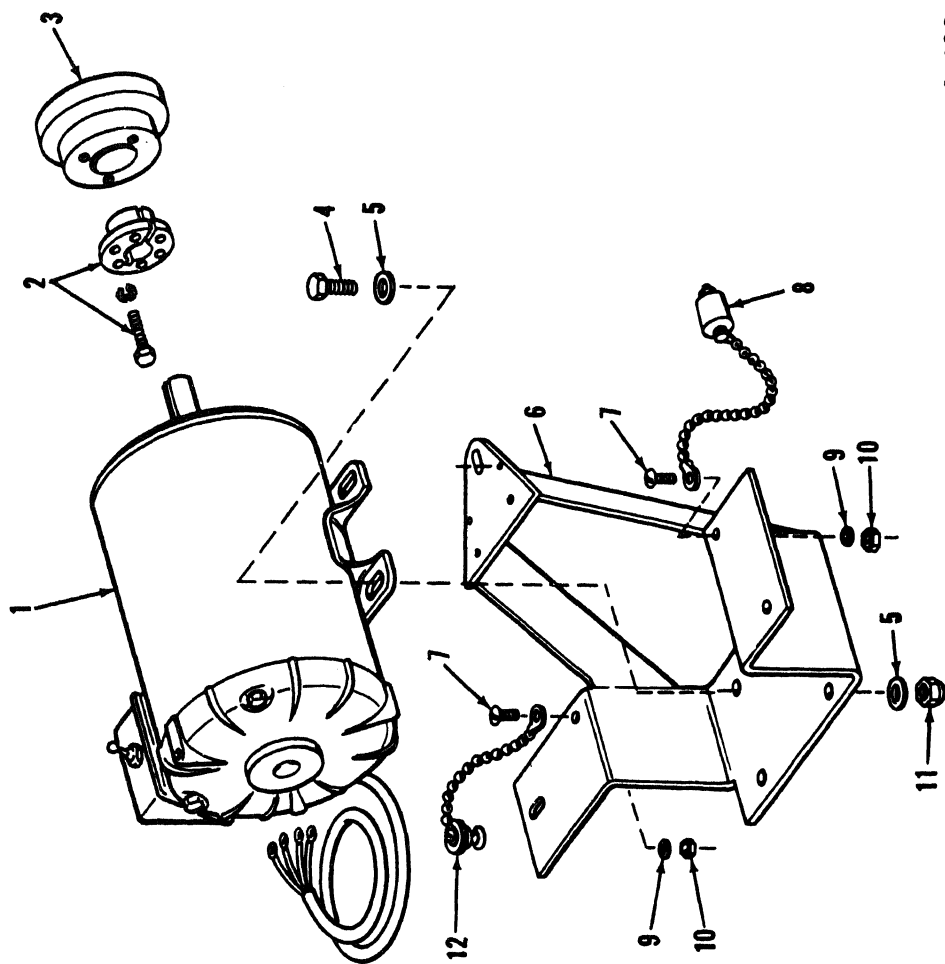

MBC 4520-208-25P/8

FIGURE 8. ELECTRIC MOTOR AND MOUNTING BRACKET


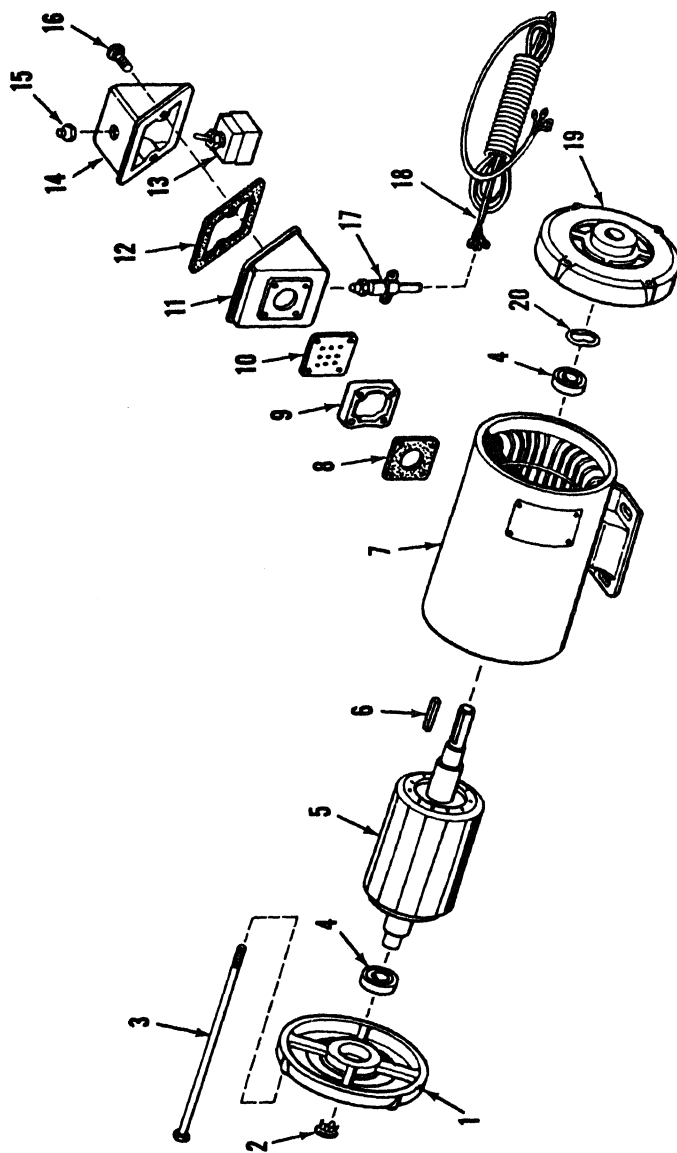



FIGURE 9. ELECTRIC MOTOR

MEC 4520-208-25P/9

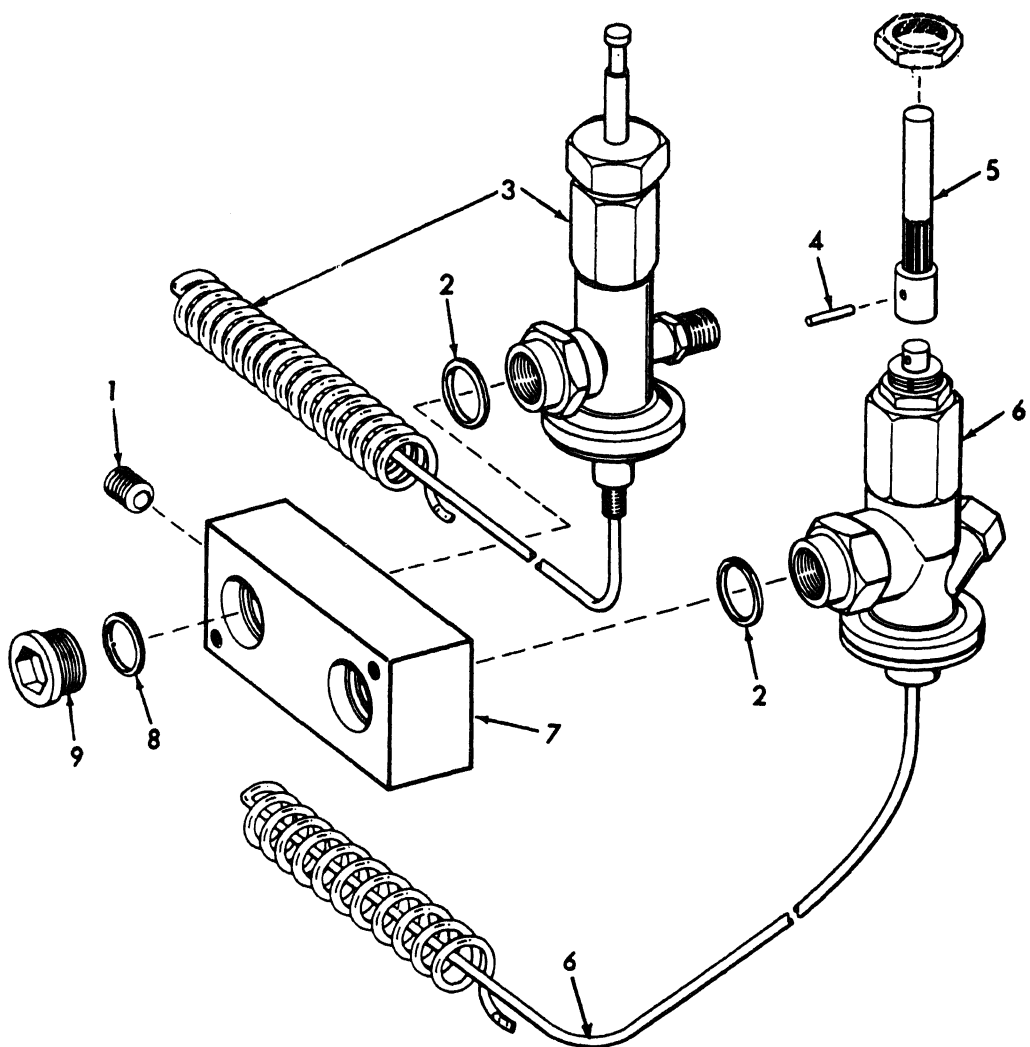


MEC 4520-208-25P/10

FIGURE 10. FUEL CONTROL VALVES AND BLOCK

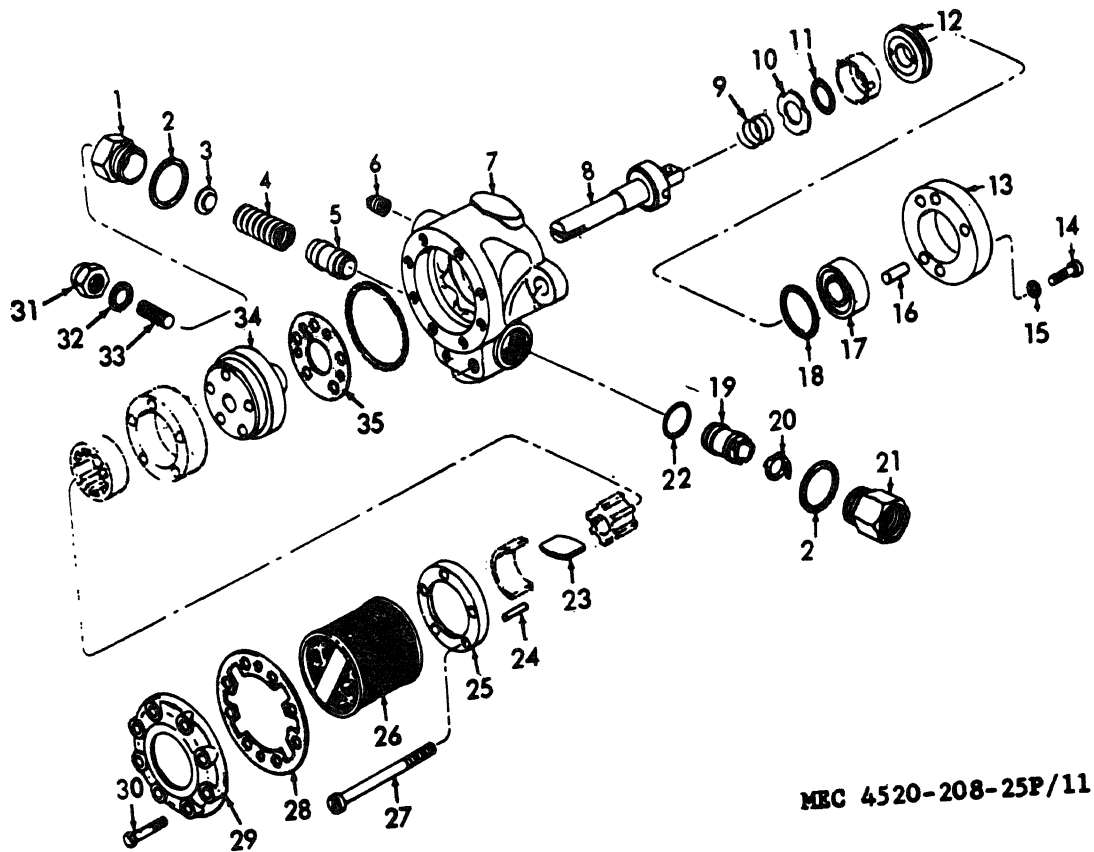


MEC 4520-208-25P/11

FIGURE 11. FUEL PUMP

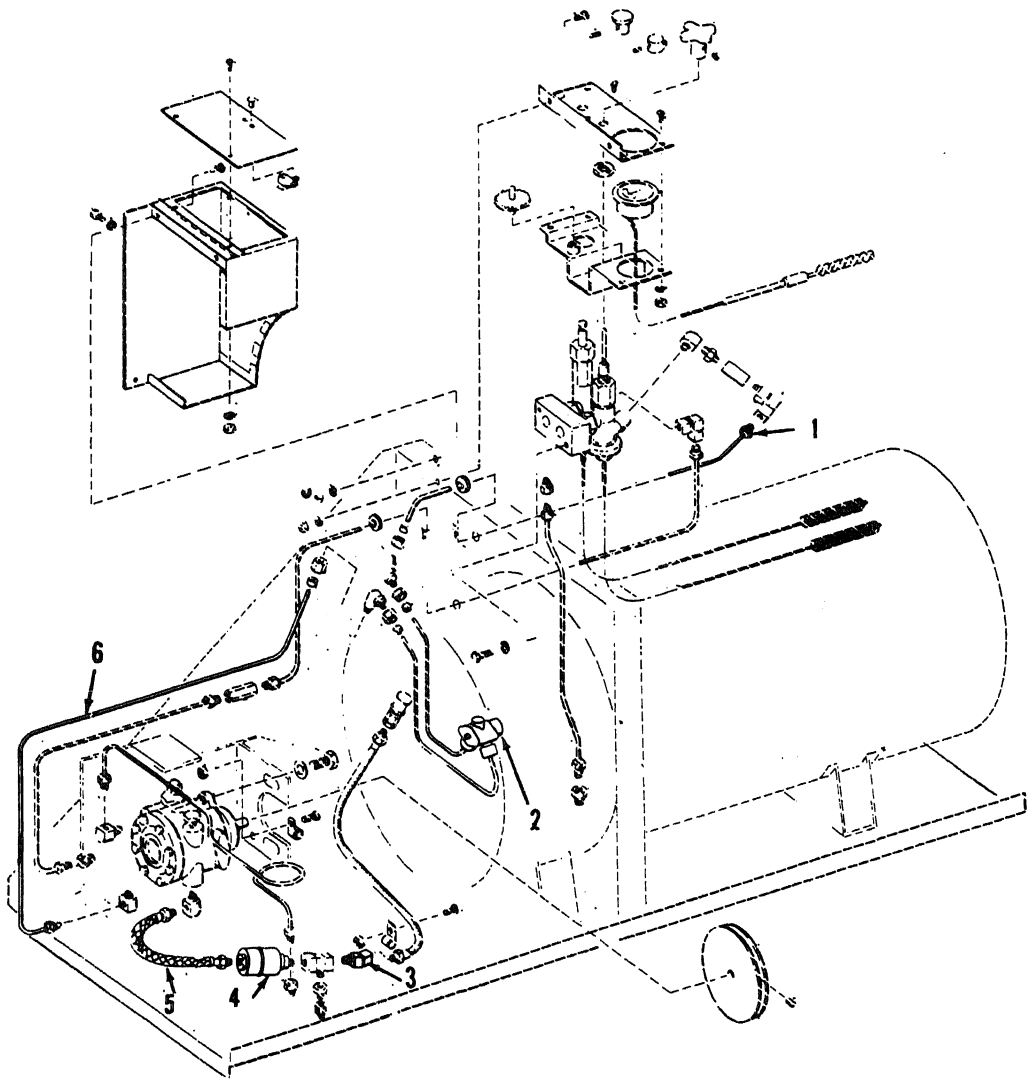


MEC 4520-208-25P/12

FIGURE 12. FUEL FILTER, HOSE, AND FITTINGS

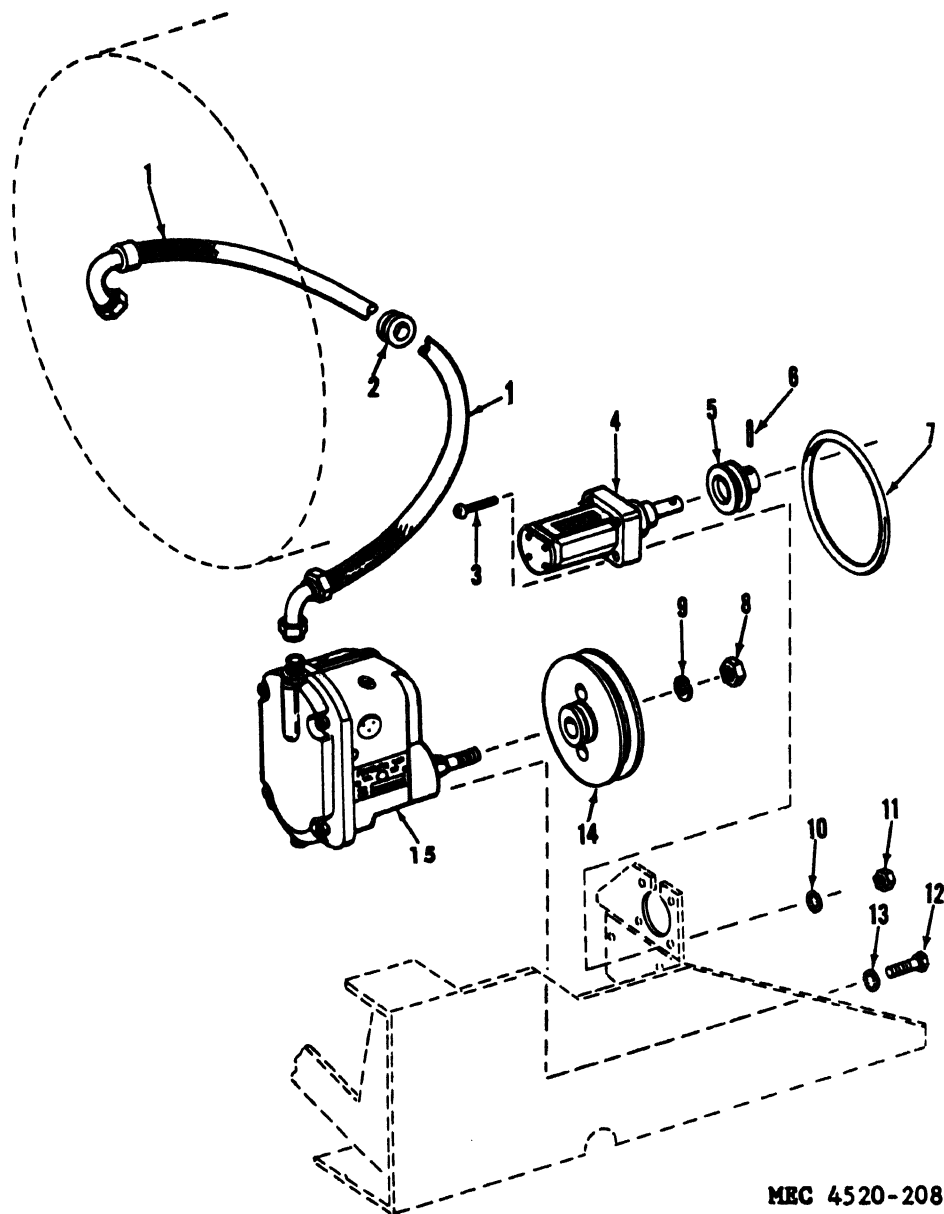


MRC 4520-208-25P/13

FIGURE 13. MAGNETO HOURMETER AND ATTACHING PARTS

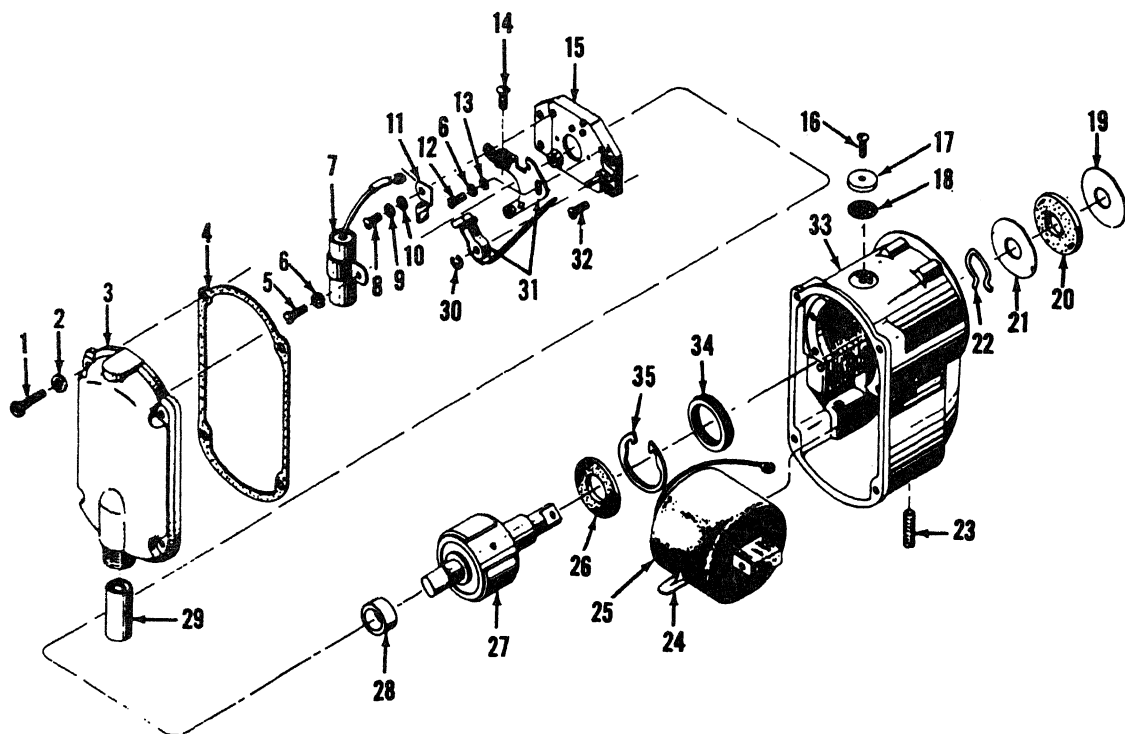


MEC 4520-208-25P/14

FIGURE 14. MAGNETO

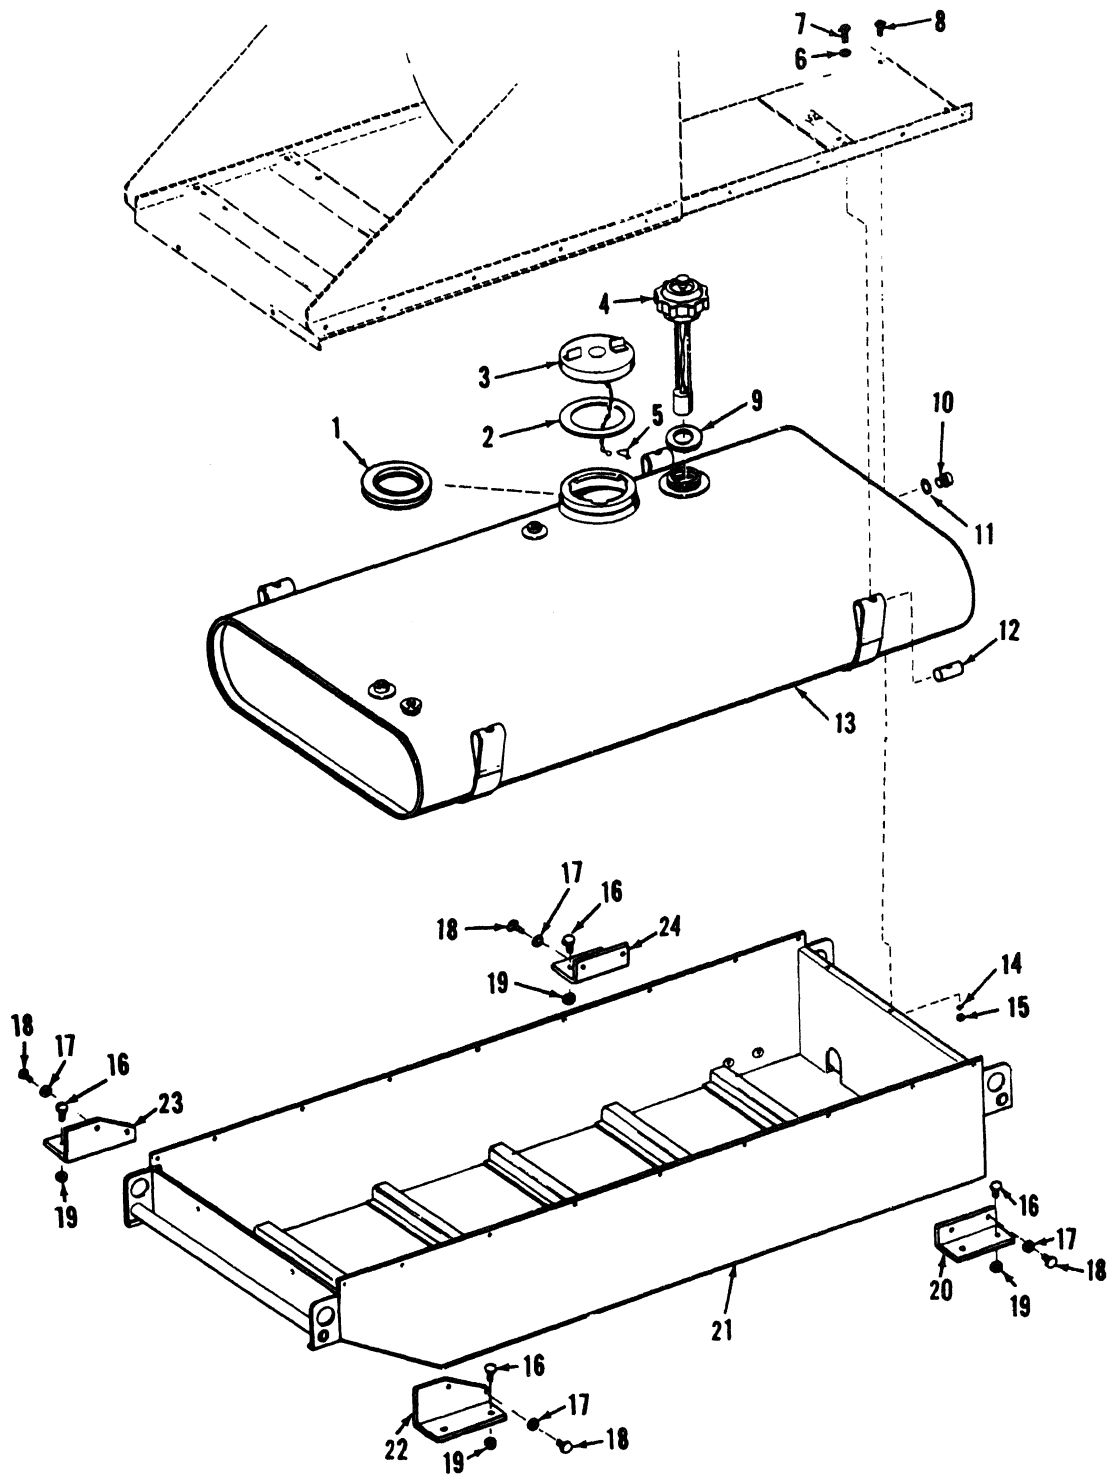


MEC 4520-208-25P/15

FIGURE 15. FUEL TANK, GAGE AND SKID COVER

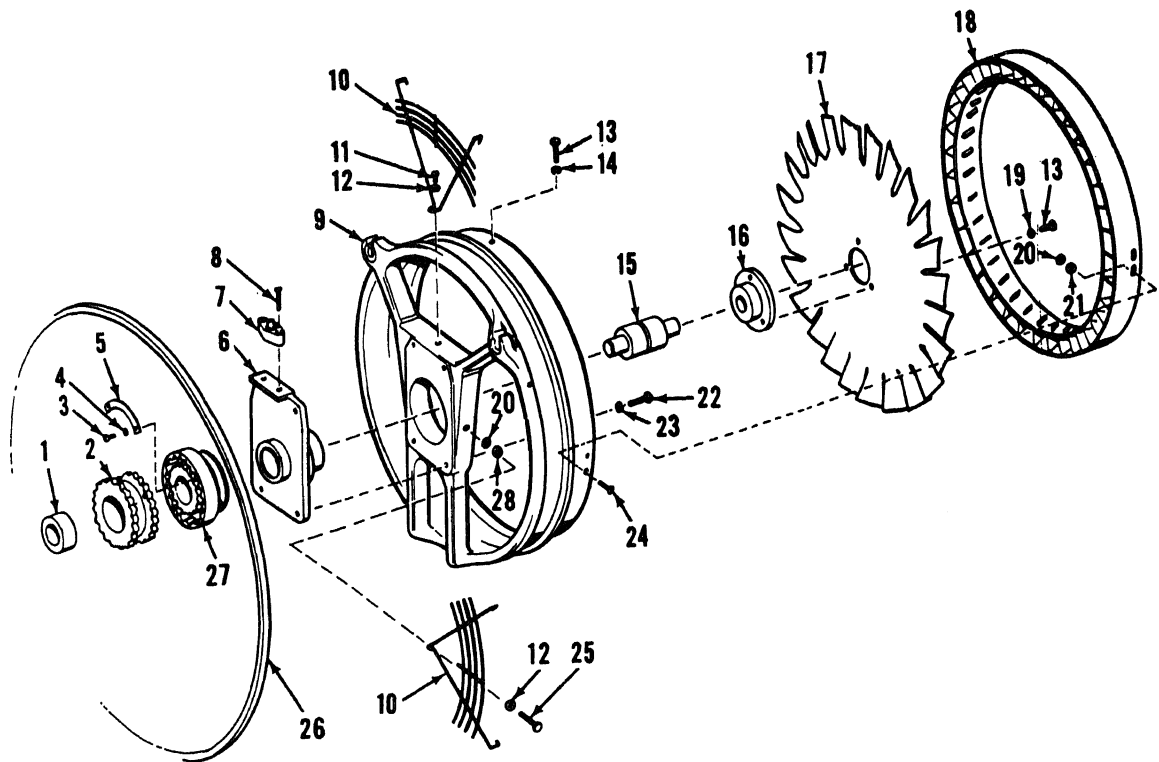


MEC 4520-208-25P/16

FIGURE 16. DRIVE COUPLING, BEARING SUPPORT AND FAN

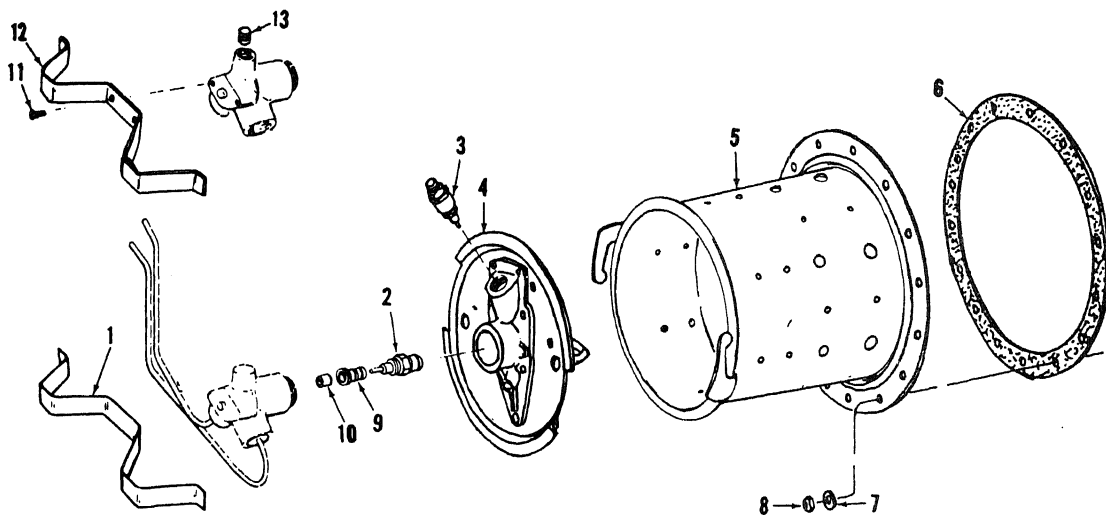


MEC 4520-208-25P/17

FIGURE 17. COMBUSTOR AND NOZZLE

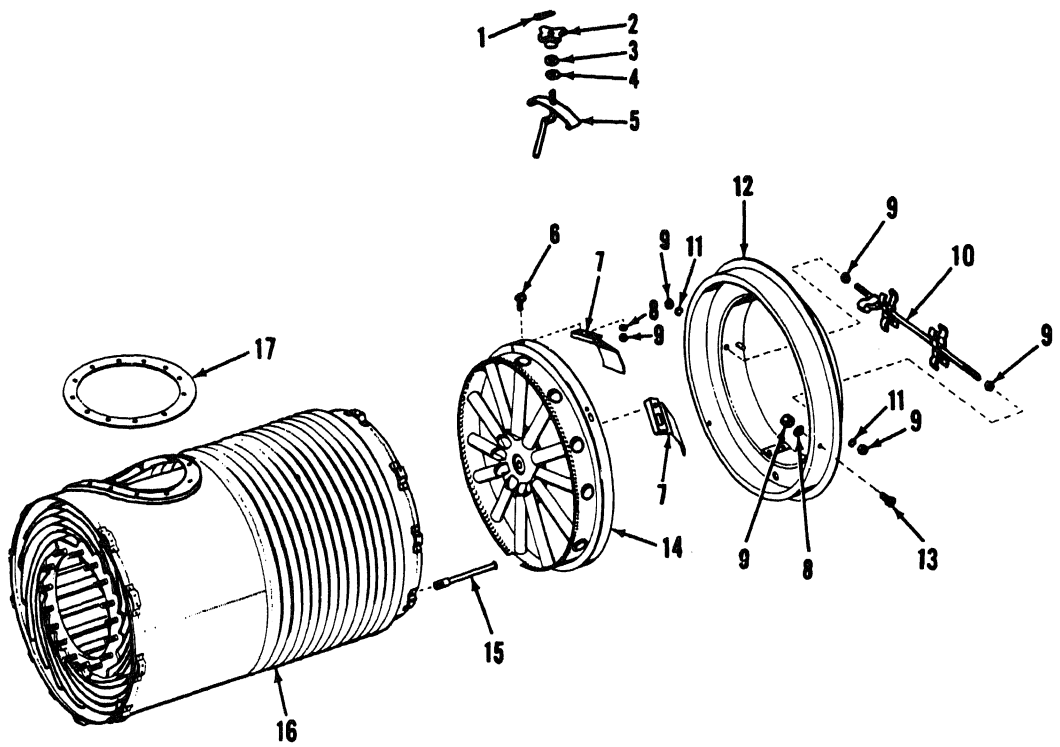


MEC 4520-208-25P/18

FIGURE 18. HEAT EXCHANGER AND AIR CONTROL

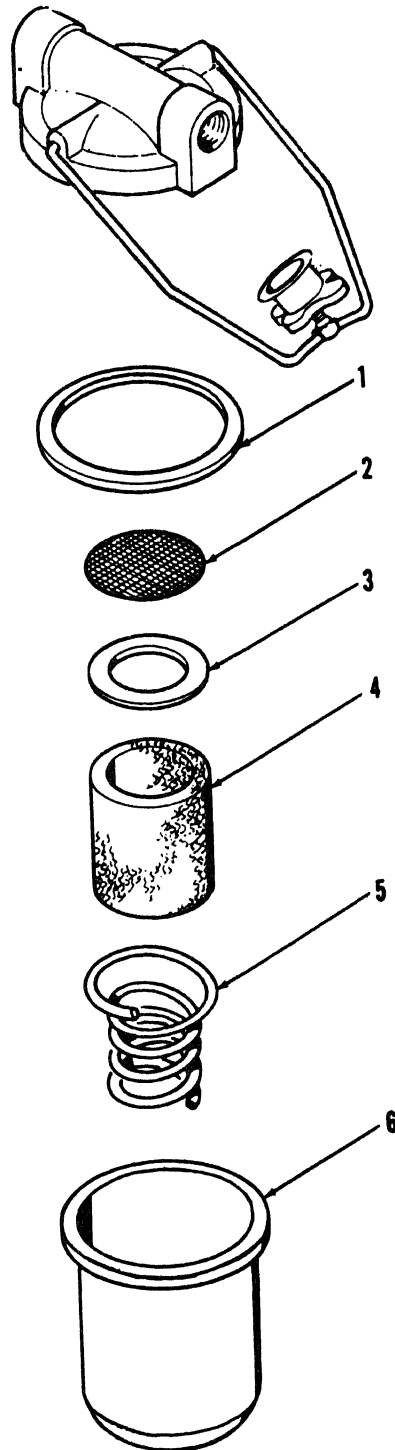

MEC 4520-208-25P/19

FIGURE 19. FUEL FILTER

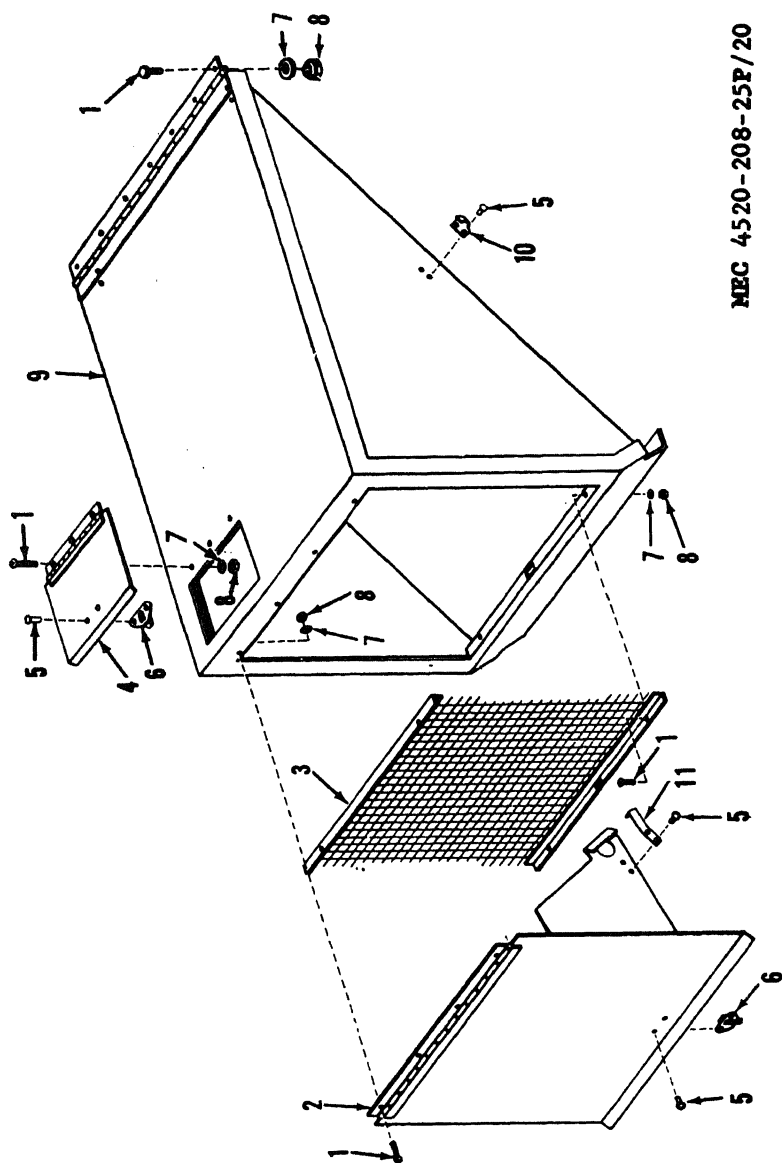

MEC 45 20-208-25P/20

FIGURE 20. CABINET

FEDERAL STOCK NUMBER AND PART NUMBER INDEX

NUMBER	CODE	PAGE
A-10322	60038	003
		014
AD-ABS	07707	007
		018
AN320-16	88044	003
		014
AN325-6	88044	003
		015
AN325-8	88044	003
		014
AN380-4-7	88044	003
		014
AN505-10R26	88044	001
		012
AN515-10R16	88044	008
		020
AN515-10-6	88044	026
AN515-416-24	88044	011
		024
AN515-416-8	88044	011
		024
AN515-6-5	88044	010
		023
AN515-6-6	88044	010
		023
AN515-8-6	88044	010
		023
AN515C8-12	88044	011
		025
AN515416-6	88044	004
		015
AN526-102YR6	88044	005
		017
AN526-1024R6	88044	005
		007
		011
		011
		017
		017
		019
		025
		025
AN526-632-5	88044	024
AN5261024R6	88044	003
		014
		026
AN530-6-6	88044	010
		023
AN5626-1024R6	88044	005
		017
AN911-1C	88044	001
		012
AN916-1	88044	001
		009
		012
		020
AN931-11-16	88044	010
		022
AN931-6-10	88044	009
		021
AN935-6	88044	010
		023
AN935-616	88044	003
		015
AN935-8	88044	010
		028
AN935-816	88044	003
		015
AN936A416	88044	011
		024
AN960-10L	88044	002
		002
		013
		013
AN960-416	88044	002
		011
		013
		026
AN960-6	88044	010
		023
AN960-8	88044	010
		023

NUMBER	CODE	PAGE
AXMR2433		21387 010
		023
A1232		21387 023
A1254-80		92940 019
A1631		92940 008
		019
A18393		60038 003
		014
A2181		92940 008
		019
A2220		92940 008
		019
A2292-1		92940 019
A2437AX		21387 010
		023
A2492A		21387 023
A2492C		21387 023
A2509		92940 008
		019
A3453		92940 008
		019
A3741-6		92940 019
A595UA		21387 022
A6032A		21387 023
A6304		21387 023
A6410		92940 008
		019
A6961		92940 008
		019
BM113934		62869 008
		020
B1498B		21387 023
B1498D		21387 023
B566-19		92940 008
		019
B567-5		92940 008
		019
CE102SPECIAL		96523 009
		021
CG81015SA		15235 008
		019
C1196-13		92940 019
C1196-14		92940 019
C1498G		82796 023
C5949		21387 022
FF332		72530 009
		021
FG104SPECIAL		96523 009
		021
FMXE18888		21387 010
		022
G-661-A		83269 003
		014
G3861		21387 023
HG103SPECIAL		96523 009
		021
HS51248		61864 006
		017
HT0-991-3		76005 001
		012
HT1-15		76005 001
		012
H2788		21387 010
		023
J6BC312-?		99166 009
		021
K2498		21387 010
		023
K2513		21387 010
		023
MB30Q		96523 009
		021
MODEL1A08-3		81336 012
MS122034		96906 010
		023
MS122055		96906 002
		008
		011
		013
		020
		026
MS15003-1		96906 004

NUMBER	CODE	PAGE
MS15795-207	96906	015
		011
		024
		025
MS15795-218	96906	010
		022
MS16997-80	96906	024
MS171466	96906	008
		020
MS171494	96906	003
		014
MS17829-5C	96906	007
		019
MS20365-832A	96906	005
		016
		024
MS20450C8-8	96906	003
		005
		005
		011
		014
		017
		017
		025
MS21043-4	96906	002
		013
MS21718313	96906	001
		012
MS24325-1	83612	003
		015
MS24328-2	83642	003
		014
MS24583-40	96906	005
		017
MS24583-42	96906	024
MS24583-47	96906	001
		012
MS24583-53	96906	025
MS24665-132	96906	011
		026
MS24665-353	96906	004
		015
MS24692-99	96906	002
		013
MS27183-10	96906	006
		018
MS27183-13	96906	007
		019
		026
MS27183-8	96906	006
		018
MS29513-112	96906	021
MS29513-114	96906	011
		024
MS29513-116	96906	021
MS29523-1	96906	011
		024
MS34322-5	83642	003
		014
MS35291-107	96906	009
		022
MS35291-16	96906	001
		012
MS35291-29	96906	001
		004
		012
		016
		025
MS35291-3	96906	010
		023
MS35291-34	96906	007
		018
MS35291-65	96906	024
MS35291-8	96906	022
MS35292-31	96906	001
		012
MS35333-37	96906	024
MS35333-39	96906	002
		003
		006
		006
		007

FEDERAL STOCK NUMBER AND PART NUMBER INDEX

NUMBER	CODE	PAGE	NUMBER	CODE	PAGE	NUMBER	CODE	PAGE
		011	MS51065-42	96906	008	TCF3241	90598	011
		011			020			025
		013	MS51922-1	96906	005	TCF3251	90598	005
		014			006			016
		017			006	TCF3264-100	90598	016
		017			016			019
		019			017	TCF3265-100	90598	005
		025			017			016
		025	MS51922-37	96906	004	TCF3266-100	90598	005
		026			015			017
MS35333-40	96906	001	MS90725-13	96906	006	TCF3266-101	90598	005
		002			017			016
		003	MS90725-3	96906	005	TCF3267-100	90598	011
		006			005			025
		006			005	TC1186	90598	004
		010			017			016
		012			017	TC3377	90598	002
		013			017			002
		014			024			013
		017	MS90725-5	96906	002			013
		017			013	TC4021	90598	001
		022	MS90726-117	96906	004			012
		023			015	TC4040	90598	007
		024	NAS3104-7-8	80205	002			018
		024			013	TC4064-1	90598	007
MS35333-41	96906	001	NT2425	21387	023			018
		001	PHN4-2M	78357	001	TC4064-2	90598	007
		001			012			018
		006	PX2430A	21387	023	TC4065-1	90598	007
		012	PY4631	21387	023			018
		017	P356REVB	91816	022	TC4146-1	90598	007
		026	RL3416	77122	003			018
MS35333-42	96906	024			014	TC4147-1	90598	007
MS35333-74	96906	025	K9-400-1	02582	003			018
MS35338-25	96906	004			015	TC4149-1	90598	005
		004	K9-400-2	02582	003			016
		015			015	TC4149-2	90598	005
		016	S108	96523	009			016
MS35338-38	96906	006			021	TC4150-1	90598	005
		017	TAF3154	90598	025			016
MS35361	96906	008	TAF3156	90598	025	TC4150-2	90598	005
		019	TAF3157	90598	011			016
MS35389-6	96906	004			026	TC4151-1	90598	007
		015	TAF3158	90598	011			018
MS35392-52	96906	004			025	TC4152-1	90598	007
		015	TAF3159	90598	024			018
MS35490-10	96906	009	TAF3166-100	90598	025	TC4153-1	90598	005
		021	TA218A	90598	026			016
MS35490-18	96906	005	TA235	90598	025	TC591	90598	005
		016	TA3300	90598	006			017
MS35643-1	96906	010			017	TC592	90598	005
		024	TA3314-1	90598	011			017
MS35645-1	96906	010			026	TC609	90598	004
		024	T83300	90598	007			016
MS35649-102	96906	002			018	TC611	90598	004
		003	T83571	90598	009			016
		005			022	TC613	90598	005
		005	TCA462	90598	006			016
		005			017	TC614	90598	005
		007	TCA463	90598	006			016
		008			017	TC615	90598	006
		011	TCF225-1	90598	005			017
		011			016	TC643	90598	005
		013	TCF3221	90598	004			016
		014			016	TDF3012	90598	025
		016	TCF3222	90598	005	TDF3013	90598	005
		016			016			016
		016	TCF3223	90598	005	TD3035-1	90598	006
		016			017			018
		019	TCF3224	90598	002	TD3036-1	90598	006
		020			013			018
		025	TCF3225-2	90598	005	TD425	90598	006
		025			016			018
		026	TCF3226	90598	005	TE1011C	90598	010
MS35690-402	96906	011			016			022
		024	TCF3227	90598	005	TMA3018	90598	007
MS35690-405	96906	002			016			018
		013	TCF3228	90598	002	TMA3020	90598	007
MS35690-602	96906	010			013			019
		023	TCF3234	90598	005	TMF106	90598	011
MS35692-922	96906	004			016			024
		015	TCF3235	90598	016	TMF3218	90598	001

FEDERAL STOCK NUMBER AND PART NUMBER INDEX

NUMBER	CODE	PAGE
TMF3220	90598	012
		001
TMF3221	90598	012
		007
TMF3222	90598	018
		002
TMF3223	90598	013
		002
TMF3230-100	90598	013
		001
TMS3219	90598	012
		001
TM3905	90598	024
TM3916	90598	024
TM3917-1	90598	024
TM3917-2	90598	024
TM3917-3	90598	007
		019
TM3917-4	90598	001
		012
TM3917-5	90598	007
		019
TM3917-6	90598	001
		012
TM3918	90598	010
		023
TM3919	90598	009
		021
TM3920	90598	007
		019
TM3921	90598	024
TM3924	90598	024
TM3925	90598	024
TM3926	90598	008
		020
TM3927	90598	011
		024
TM3937	90598	001
		012
TM3948	90598	002
		013
TM3955	90598	002
		013
TM3958	90598	002
		013
TM3959	90598	024
TM3961	90598	002
		013
TM3962	90598	007
		018
TM3963	90598	002
		013
TM3964	90598	007
		018
TM3965	90598	007
		018
TM3966	90598	007
		018
TM3967	90598	007
		018
TM3968	90598	007
		018
TM3969-1	90598	002
		013
TM3984	90598	001
		012
TM706	90598	024
TN3952	90598	002
		013
T0F64C	90598	002
		013
T03026-1	90598	009
		021
T0360	90598	006
		017
T0540A	90598	003
		014
T0542	90598	020
T0545B	90598	021
T0574C	90598	002
		014

NUMBER	CODE	PAGE
TU586E	90598	003
		014
TU587C	90598	002
		014
TU653	90598	003
		014
TRF3080	90598	010
		022
TRF3081	90598	002
		013
TRF3082	90598	025
TRF3086	90598	022
TRF3088	90598	009
		022
TRF3089	90598	010
		022
TRF3090	90598	022
TRF3091	90598	009
		022
TRF3092	90598	022
TRF3094	90598	010
		022
TRF3095	90598	011
		025
TRF762	90598	025
TRF763	90598	025
TR101	11764	006
		017
TR105	11764	004
		015
TR108	11764	004
		015
TR109	11764	004
		015
TR112	11764	004
		015
TR113	11764	006
		018
TR150	11764	006
		017
TR152	11764	006
		017
TR200	11764	015
TR21	11764	014
TR22	11764	004
		016
TR26	11764	004
		015
TR260	11764	004
		015
TR28	11764	006
		018
TR280-1	11764	006
		017
TR280-2	11764	006
		017
TR281	11764	006
		017
TR285	11764	007
		018
TR3268	90598	003
		014
TR3269	90598	020
TR3270	90598	025
TR3274	90598	003
		014
TR3275	90598	022
TR3276	90598	002
		013
TR3304	90598	011
		025
TR3313	90598	011
		025
TR3315	90598	007
		018
TR3318	90598	007
		018
TR3323	90598	009
		021
TR3335	90598	005
		011
		016

NUMBER	CODE	PAGE
TK3343	90598	025
		011
TR3346	90598	025
		007
TR3347-1	90598	019
		006
TR3347-2	90598	017
		005
TR3355	90598	016
		011
		025
TR3379-1	90598	009
		021
TR3379-2	90598	009
		021
TR774	90598	010
		023
TR776A	90598	025
TR8	11764	004
		015
TTF3000	90598	024
TTF3000-1	90598	024
TT3014	90598	024
TT3016-1	90598	009
		021
TT3016-2	90598	008
		020
TT350	90598	011
		024
TT403	90598	024
TX592	90598	011
		025
TX595	90598	011
		025
TY515M	59730	009
		020
TY525M	59730	009
		022
T0340B	90598	011
		025
T05438	90598	010
		023
T0552D	90598	010
		022
T0553C	90598	025
T0610	90598	009
		021
T2477C	21387	010
		023
T33300	90598	003
		014
VHC4-2F	78357	009
		020
VZ2480	21387	0
WWN351TYPE1TAB2E	81348	0
		0
Y2474X	21387	021
1-4X20X1-2	90598	009
		022
100241	99166	021
100371	99166	021
100901	99166	022
100931	99166	022
101001	99166	021
101641	99166	022
103379	99166	021
105021	99166	022
10510D	21387	010
		021
110441	99166	009
		021
111302	99166	009
		021
111401	99166	021
113331	99166	021
114227	99166	021
115431	99166	021
115462	99166	021
11681-4	30327	009
		021
116106	99166	021
117463	99166	021

FEDERAL STOCK NUMBER AND PART NUMBER INDEX

NUMBER	CODE	PAGE
118732	99166	021
121222	99166	022
121732	99166	021
12361-4X1-8	30327	009
		022
123632	99166	021
123652	99166	022
1271311	99166	021
127297	99166	021
127562	99166	022
131014	99166	021
13108	11764	003
		014
131140	99166	022
131199	99166	022
131201	99166	021
1331196	99166	021
15123	60038	003
		014
15245	60038	003
		014
1803-048	72962	025
2-243	02697	008
		020
200X4	79470	008
		020
2009	81482	009
		021
203	43334	019
22M04	72962	001
		009
		012
		021
234	71895	010
		023
234X4	79470	008
		020
24720	60038	003
		014
24780	60038	003
		014
24815	99166	021
2530-200-1345		003
		014
2530-528-7224		003
		015
2530-646-7705		003
		014
2530-833-0413		003
		014
2540-360-1056		009
		022
2540-563-5423		009
		021
2610-050-9840		004
		015
2610-269-7354		004
		015
2640-050-1229		004
		015
2640-052-0944		004
		015
2805-068-7510		012
2805-391-3931		021
2805-598-8000		022
28778	99166	021
2910-141-9758		010
		024
2910-347-5608		021
2910-472-6189		009
2910-712-9326		021
		009
2910-922-8107		021
		010
2920-142-0888		023
		010
2920-349-3887		023
		010
2920-354-0751		023
		023
2920-356-1221		023
2920-366-7153		023

NUMBER	CODE	PAGE
2920-366-7165		023
2920-428-7543		022
2920-510-1298		010
		023
2920-580-3435		010
		023
2920-656-7340		010
		023
2920-708-0640		023
2920-933-3610		001
		012
2920-947-2731		001
		012
2920-947-2753		001
		012
2920-948-7399		010
		022
2940-529-2738		019
2990-941-5274		002
		013
2990-941-5275		002
		013
2990-941-5276		011
		025
2990-941-5277		011
		025
300X4	79470	009
		020
3030-756-8395		008
		020
3110-100-0542		003
		014
3110-100-3537		003
		014
3110-144-8998		022
3110-198-2169		003
		014
3110-198-2170		003
		014
3110-275-0283		003
		014
3110-293-9173		021
3110-819-1626		003
		014
3120-915-5445		011
		024
3120-916-1869		001
		012
315514A	21387	023
3200X4	79470	008
		020
3224X2	79470	009
		020
3325X2	79470	002
		009
		013
		021
3400X2	79470	001
		009
		012
		020
3600X2	79470	009
		022
3653	01930	002
		005
		013
		016
400X4	79470	009
		020
4030-804-5549		004
		015
4320-472-6227		022
4320-699-8755		021
450X4	79470	009
		020
4520-024-7395		006
		017
4520-024-7396		006
		017
4520-024-7429		002
		013
4520-025-2903		002

NUMBER	CODE	PAGE
4520-025-2911		013
		003
4520-025-2958		014
		010
4520-213-9923		023
4520-213-9929		025
		005
4520-216-7259		016
4520-300-9598		025
		010
4520-346-7333		023
		010
4520-347-5638		022
4520-349-1663		025
4520-567-1858		011
		025
4520-567-1859		011
		025
4520-605-9301		004
		016
4520-606-2189		004
		016
4520-653-3031		005
		017
4520-653-3032		005
4520-653-3053		017
		004
4520-653-4276		016
		010
4520-675-5331		022
		006
4520-678-0108		018
4520-684-1301		022
4520-829-6536		025
		011
4520-836-8164		024
		009
4520-836-8165		021
		009
4520-838-5419		021
		009
4520-838-5421		021
		009
4520-887-1240		022
4520-916-1873		010
		022
4520-916-1874		025
4520-924-2397		001
		012
4520-930-5682		002
		013
4520-946-0180		009
		021
4520-964-8923		014
4520-976-2253		021
4530-629-5114		021
4530-916-1875		022
4720-585-7014		009
		021
4720-595-3515		009
		021
4720-836-8166		009
		021
4720-836-8167		009
		021
4720-836-8168		009
		021
4720-930-5973		006
		018
4720-930-5974		006
		018
4730-050-4208		004
		015
4730-196-0930		009
		020
4730-202-8306		011
		024
4730-249-9721		002
		009
		013

NUMBER	CODE	PAGE
4730-277-8265		021
		001
		009
		009
		012
		020
4730-278-4519		020
		009
4730-287-9353		020
		001
		012
4730-288-8258		009
		020
4730-301-7470		008
		020
4730-338-6630		020
4730-384-0358		021
4730-391-3777		009
		020
4730-424-5871		008
		020
4730-540-2612		008
		020
4730-595-0251		009
		022
4730-595-3875		001
		012
4730-640-6330		009
		022
4730-864-8505		009
		020
4820-939-6826		003
		014
49W5-16X1-8	30327	009
		020
5-107	96523	009
		021
5105-010-0267		007
		018
51295	99166	022
51334	99166	021
5301-071-2238		006
		017
5305-011-0488		008
		019
5305-013-3482		023
5305-018-0023		022
5305-059-4568		024
5305-059-4573		001
		012
5305-060-6481		005
		017
5305-068-0500		005
		005
		010
		017
		017
		017
		023
		024
5305-068-0501		002
		013
5305-071-2235		001
		012
5305-095-3935		023
5305-151-0690		024
5305-151-3449		003
		005
		005
		007
		011
		011
		014
		017
		017
		017
		017
		019
		025
		025

NUMBER	CODE	PAGE
5305-206-0513		026
		010
5305-225-38 29		023
5305-269-32 15		022
5305-281-6276		024
		011
		025
5305-281-6387		010
		023
5305-375-1706		022
5305-472-6234		021
5305-545-5961		001
		012
5305-638-5684		010
		023
5305-688-1462		026
5305-707-4008		023
5305-716-8182		004
		015
5305-780-4701		009
		022
5305-836-1395		009
		022
5305-855-6746		025
5305-925-0628		001
		012
5305-983-6621		024
5305-984-6214		008
		020
5305-988-1171		011
		024
5305-988-1721		004
		015
5305-988-1723		011
		024
5306-225-8499		007
		018
5306-255-8494		001
		012
5306-345-3259		003
		014
5306-622-8494		004
		016
5306-655-6606		005
		016
5306-660-2016		001
		012
5306-800-5626		004
		015
5306-804-6529		004
		015
5306-842-4088		025
5306-876-7442		006
		017
5310-011-5547		011
		024
5310-012-0361		002
		003
		005
		005
		005
		007
		008
		011
		011
		013
		014
		016
		016
		016
		016
		019
		020
		025
		025
		026
5310-012-0377		010
		023
5310-012-0380		004
		015
5310-012-1637		004
		016

NUMBER	CODE	PAGE
5310-012-1801		022
5310-013-1052		006
		017
5310-059-9265		025
5310-067-9507		004
		015
5310-087-7493		001
		007
		012
		019
		026
5310-088-1251		005
		006
		006
		016
		017
		017
5310-095-3933		023
5310-141-1795		002
		011
		013
		026
5310-167-0661		010
		023
5310-167-0721		001
		001
		001
		006
		012
		017
		026
5310-167-0816		010
		023
5310-167-0834		002
		002
		013
		013
5310-176-8117		003
		014
5310-176-8135		003
		014
5310-205-7981		023
5310-274-9403		001
		012
5310-285-7036		002
		008
		011
		013
		020
		026
5310-285-7069		003
		015
5310-530-9693		026
5310-543-2740		025
5310-543-5653		003
		015
5310-550-1130		001
		002
		003
		006
		006
		010
		012
		013
		014
		017
		017
		022
		023
		024
		024
5310-550-2284		003
		014
5310-576-5752		002
		003
		006
		006
		007
		011
		011
		013
		014

FEDERAL STOCK NUMBER AND PART NUMBER INDEX

NUMBER	CODE	PAGE
	017	
	017	
	019	
	025	
	025	
	026	
5310-579-0079	024	
5310-584-5005	002	
	013	
5310-584-5272	003	
	015	
5310-595-7237	024	
5310-601-5075	024	
5310-616-8575	010	
	023	
5310-655-9253	004	
	015	
5310-690-8270	021	
5310-731-7538	011	
	025	
5310-761-6882	011	
	024	
5310-809-4058	006	
	018	
5310-809-5998	010	
	022	
5310-809-8544	011	
	024	
	025	
5310-809-8546	006	
	018	
5310-811-3494	005	
	016	
	024	
5310-844-4872	002	
	013	
5310-957-7127	007	
	019	
5310-999-7643	010	
	023	
5315-013-7214	003	
	014	
5315-019-3262	021	
5315-039-5563	003	
	014	
5315-187-3269	002	
	013	
5315-358-7578	023	
5315-514-2660	011	
	024	
5315-754-1857	008	
	020	
5315-817-4066	004	
	015	
5315-839-2325	011	
	026	
5315-839-5822	004	
	015	
5315-953-1571	024	
5320-823-8757	003	
	005	
	005	
	011	
	014	
	017	
	017	
	025	
5325-184-9846	009	
	021	
5325-276-6091	010	
	022	
5325-295-9366	009	
	021	
5325-948-0473	005	
	016	
5330-020-4156	008	
	019	
5330-061-4203	008	
	019	
5330-202-3974	010	
	023	
5330-248-3846	011	

NUMBER	CODE	PAGE
5330-248-3850		024
5330-291-4835		021
5330-291-4844		021
5330-527-7560		022
5330-579-8108		022
5330-684-7851		021
		010
		024
5330-718-6547		021
5330-733-2208		021
5330-735-7641		008
		019
5330-920-2323		008
		020
5330-930-6869		002
		013
5330-941-8567		024
5340-143-5280		023
5340-197-5883		022
5340-584-2115		006
		017
5340-598-2895		023
5340-707-0238		001
		012
5340-873-4079		004
		015
5340-880-9363		005
		016
5340-901-7235		009
		022
5340-930-3382		002
		013
5340-940-7917		002
		013
5340-941-3016		001
		012
5355-214-0890		002
		014
5355-219-7648		003
5355-824-7503		014
		002
550	92940	019
5910-520-6711		010
		023
656N	21387	023
60-6-6	88044	003
		015
6105-934-7879		007
		019
6105-949-1819		019
614	71895	010
		023
66684ARUT	92940	019
66684ASTA	92940	019
6680-947-8458		008
		020
6685-925-4957		002
		013
754-7-2SAF	83930	009
		020
806	11583	010
		023
856G	21387	023
9-10-C102	02582	003
		014
9-10-C104	02582	003
		014
910-08-2898-500	81336	004
		015
969-6-1/4	90598	008
		020
9905-807-3712		007
		018

NUMBER	CODE	PAGE
--------	------	------

By Order of the Secretary of the Army:

Official.

KENNETH G. WICKHAM,
Major General, United States Army,
The Adjutant General.

HAROLD K. JOHNSON,
General, United States Army,
Chief of Staff.

Distribution:

Active Army;

USASA (2)
ACSI (1)
DCSLOG (1)
CNGB (1)
TSG (1)
CofEngrs (3)
OCC-E (1)
Dir/Trans (1)
CofSptS (1)
USAMB (1)
USAARTYBD (2)
USA Armor Bd (2)
USAIB (2)
USARADB (2)
USAAESWBD (2)
USAAVNTBD (2)
USCONARC (3)
OS Maj Comd (5) except
USARJ (1)
USASETAF (2)
USAMC (1)
MDW (1)
Armies (2)
Corps (2)
Div (2)
Engr Bde (1)
Svc Colleges (2)
Br Svc Sch (2)
USACDCEC (10)
USMA (2)
GENDEP (10)
Engr Dep (10)
Army Dep (2) except
TOAD (3)

MOTBA (2)
MOTBY (2)
MOTKI (2)
MOTSU (2)
EAMTMTS (1)
CAMTMTS (1)
WAMTMTS (1)
Div Engr (2)
Engr Dist (2)
USAERDL (3)
USAMECOM (46)
Engr Cen (5)
USAREUR Engr Proc Cen (2)
USAREUR Engr Sup Con Agcy (10)
Engr FLDMS (2)
Fort Knox FLD Maint (10)
Fld Comd, DASA (8)
AMS (3)
USAREURCOMZ (2)
USAC (1)
MAAG (1)
JBUSMC (1)
USARMA (1)
USARMIS (1)

Units org under fol TOE:
(2 copies UNIONDC)

1-100	5-279
1-102	29-41
1-258	29-85
5-48	29-36
5-237 (5)	55-57
5-262 (5)	55-405
5-267 (1)	67
5-278 (5)	67-2

NG: None

USAR: Same as active Army except allowance is one (1) copy for each unit.

For explanation of abbreviations used, see AR 320-50.